



# Casio FX-115MS Back Plate Replacement

In this guide you will remove the back plate of your Casio calculator. This guide requires the use of a screw driver and a spudger. In this guide you will remove six screws and simply pop the back plate off of the front plate.

Written By: Lindsey Griffin



# INTRODUCTION

In the event that your back plate is cracked or broken you will need to remove the back plate. This guide will show you how.



## TOOLS:

 
 
 
- [Heavy-Duty Spudger](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Back Plate



- Remove the 6 screws, which are 5mm long, using a PH1 screwdriver.

## Step 2

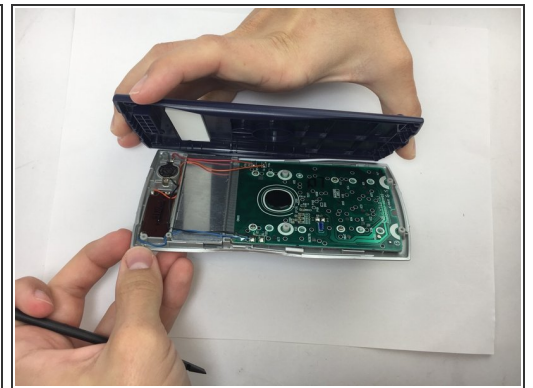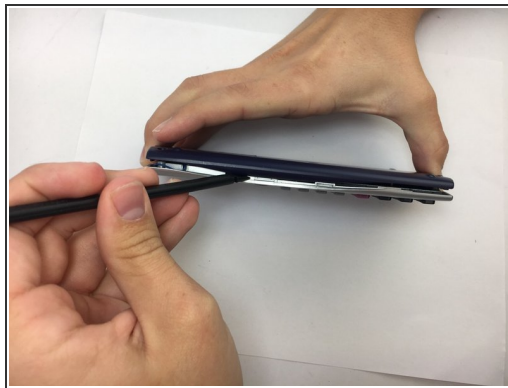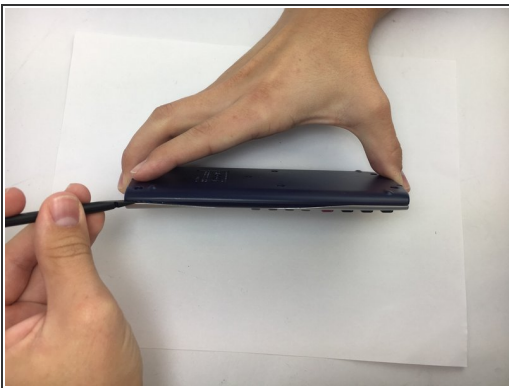

- Use plastic spudger to separate backplate from the front-plate. Place the flat end of the spudger in the seam between the front and back, near one end of the calculator. Then slide the spudger towards the calculator's center. The two sides will pop free from each other as you go through it with the spudger.

To reassemble your device, follow these instructions in reverse order.