



# HP Compaq Presario cq62-214nr Wireless Card Replacement

A guide to remove the Wireless Card of HP Compaq Presario.

Written By: Roth Marcelin



---

## INTRODUCTION


This guide we are going to remove the wireless card by removing the RAM cover and then pulling out the wireless card.




### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery

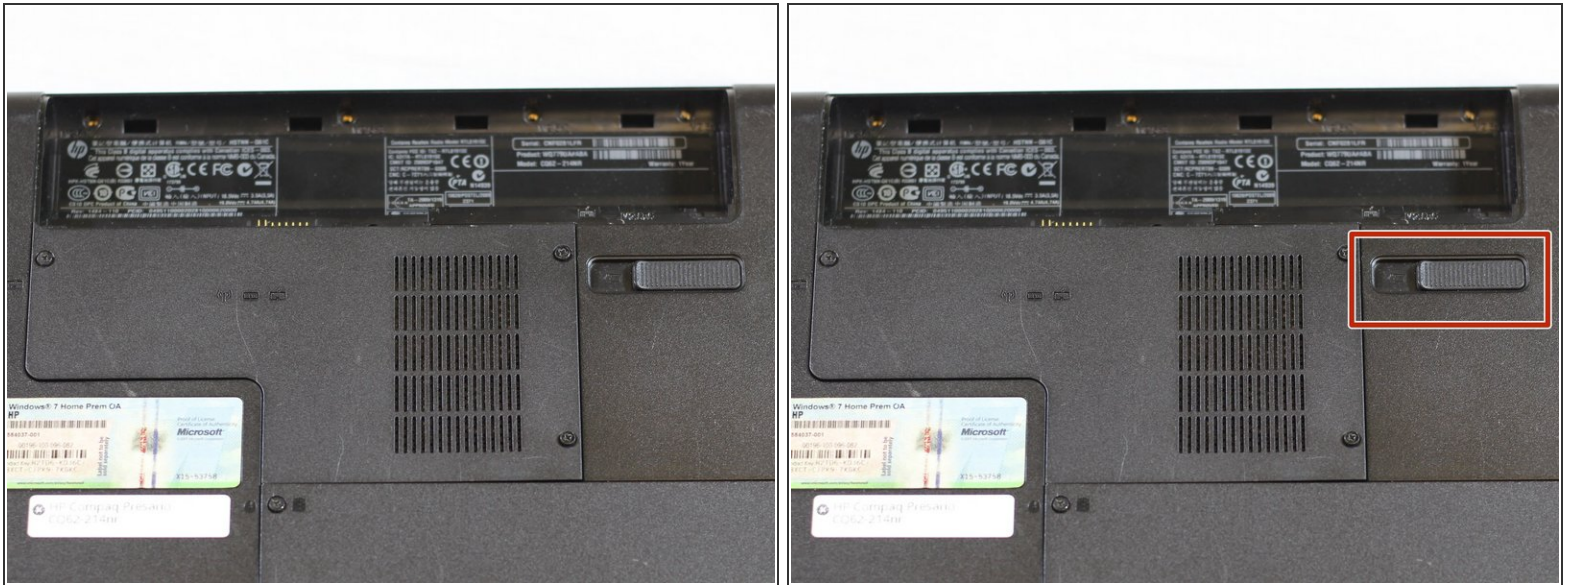


 It is advised to work on this device only when it is OFF, to avoid electrocution risks. Please make sure your laptop is powered off.

- On the underside of the battery, there is lock that keeps the battery in place. Using your finger, slide the battery lock to unlock the battery. When you have unlocked it, just lift the battery to remove it.

 We do not have a battery on our device to show how to take it off.




## Step 2 — Wireless Card

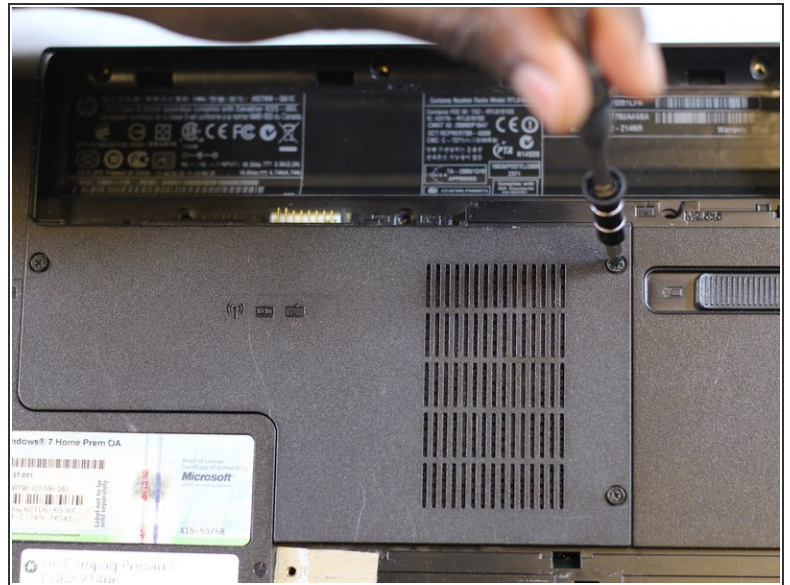


- Remove the three M2.5x5 mm Phillips screws securing the memory case.

## Step 3

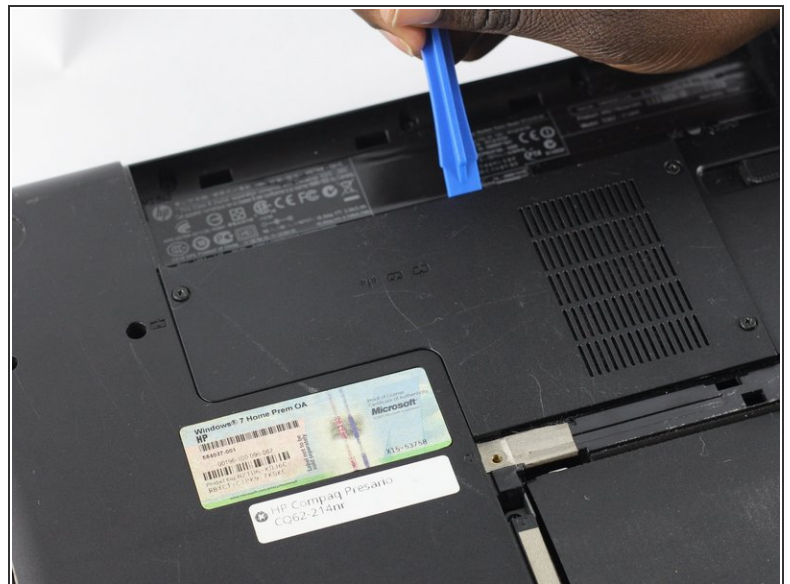


- Using a plastic opening tool, insert it alongside any openings on the case. Lift and slide the tool to remove the case.

## Step 4

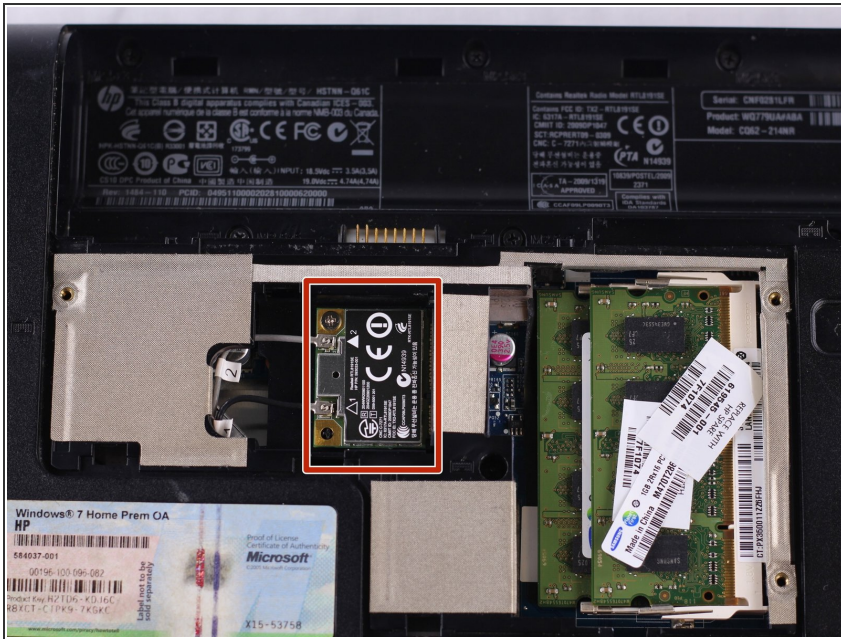

- Locate the the Wireless Card located next to the RAM chips.


## Step 5

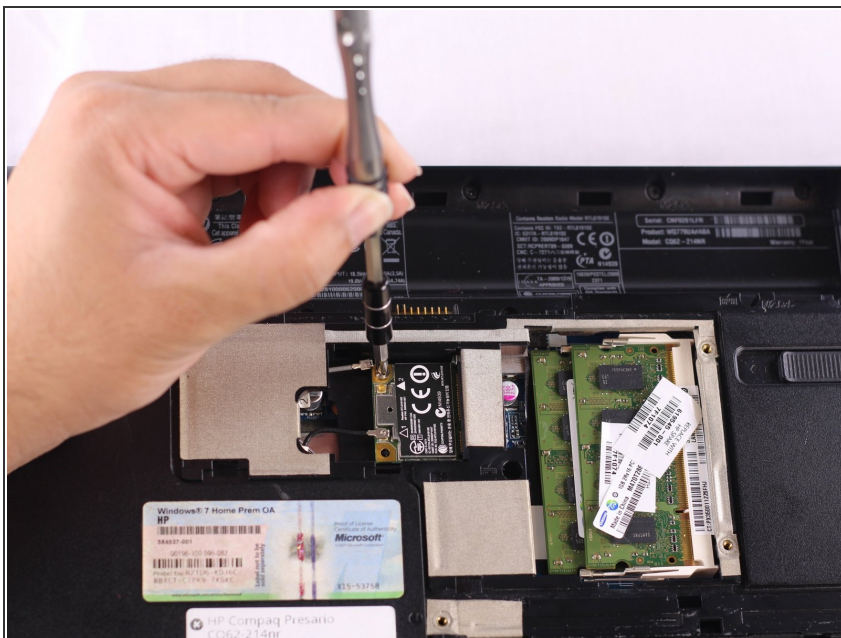

- Remove the single M2.5x3 mm Phillips screw.



## Step 6

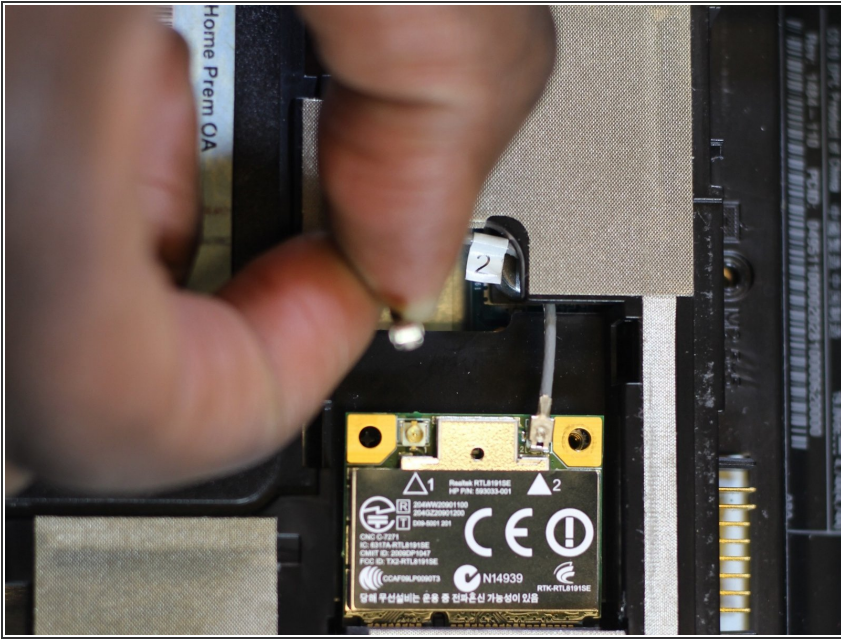

- Using your hands, gently remove the cables connected to the wireless card.

To reassemble your device, follow these instructions in reverse order.