


# Canon PowerShot SD1000 LCD Screen Replacement

This is the removal of the Canon PowerShot SD1000 LCD screen in order to clean or replace it.


Written By: Phillip Phung



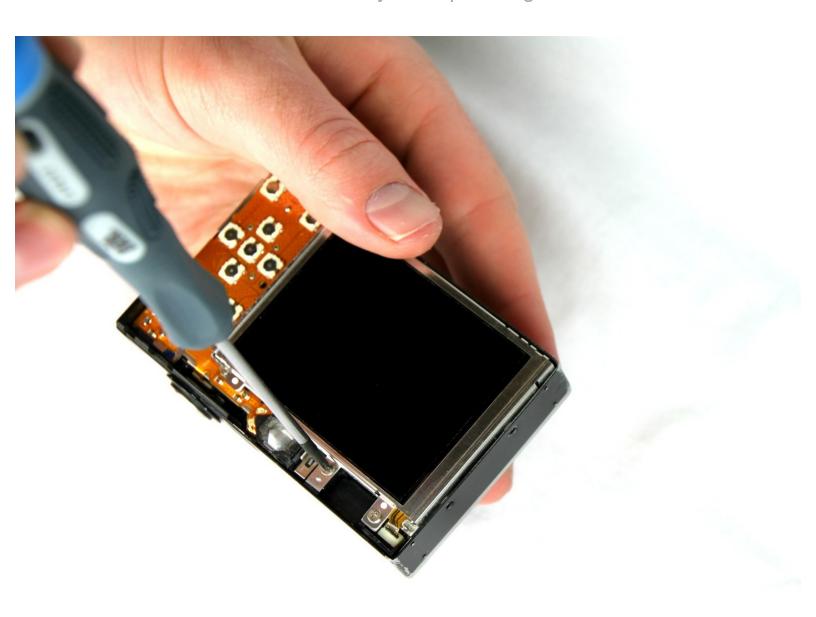

- Phillips #00 Screwdriver (1)
- Spudger (1)

## Step 1 — Back Panel

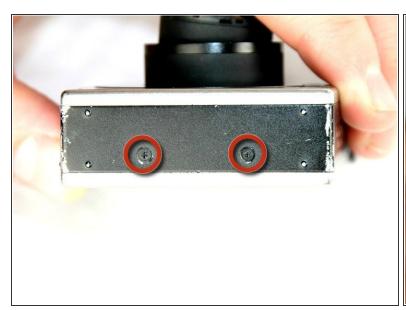



Remove the two 2.9 mm screws from the side panel closest to the camera lens.

# Step 2




 Remove the two 2.9 mm screws from the camera bottom panel.




 Remove the two 2.9 mm screws from the side panel farthest from the lens.

## Step 4

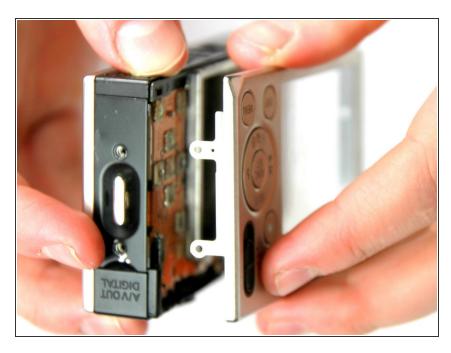


 Pull the back panel away from the camera body, starting at the end with the function buttons.

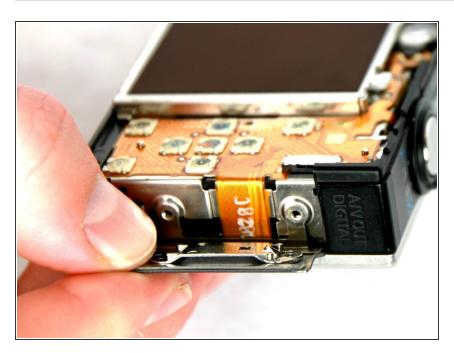

 Remove the small cover panel and the attached wrist strap mount.

## Step 6 — Front Case

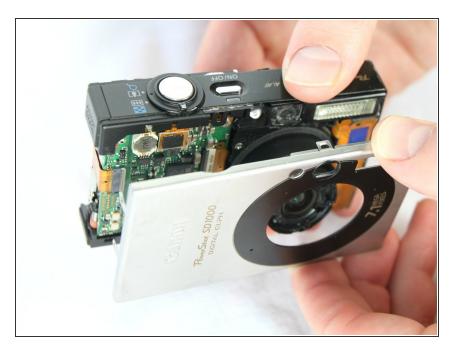


 Remove the front cover by gently pulling it away from the camera body.



 Place the front cover, back cover, and wrist strap mount in a safe place until you are ready for reassembly.

#### Step 8 — LCD Screen

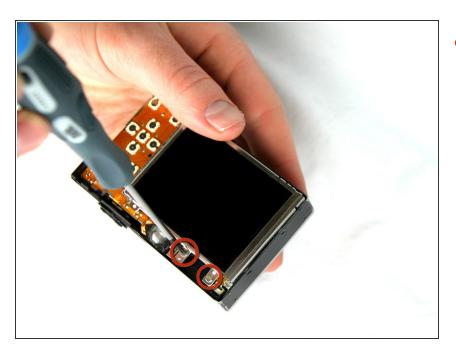


 Remove the two 2.4 mm screws located at the top of the LCD panel.






Pull up the metal frame surrounding the LCD screen starting at the side of the camera.

#### Step 10

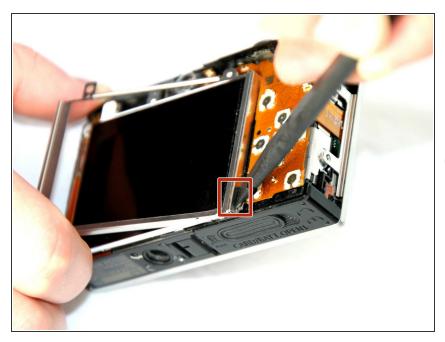

- Push the metal frame away from the metal tab using the spudger to detach the frame.
- Rotate the metal frame upwards.
- i The metal framing should be attached by a metal tab towards the bottom of the camera, near the function buttons.

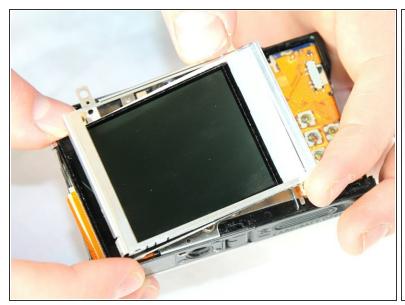




- Carefully lift the metal frame from the camera.
- Remove the black LCD screen, leaving the thin lens pieces in place.

♠ BE CAREFUL; both components are attached by an orange connector ribbon and cannot be removed yet.

### Step 12



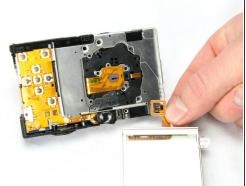



- Carefully pull on the orange connector ribbon to disconnect the LCD screen.
- The LCD screen can be pulled out of the frame before disconnecting its connector ribbon.
- (i) Tweezers are helpful to disconnect the ribbon.

To reassemble your device, follow these instructions in reverse order.