



Sony DVP-FX730 Battery Replacement

If there is a problem with the device's supply...

Written By: Andrew Ward



INTRODUCTION

If there is a problem with the device's supply of power, the battery may need to be replaced.



TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Cover



- Remove the five exposed 7.9 mm screws using a Phillips screwdriver.
- Punch through the warranty sticker with the spudger.
- Remove the screw underneath with the Phillips screwdriver.

Step 2




- Remove the rubber feet using the spudger.
- Remove the screws that were covered by the rubber feet.


Step 3



- Hold on to the corners of the cover and gently lift the cover.

 The tray is still connected to the base with wires.

Step 4

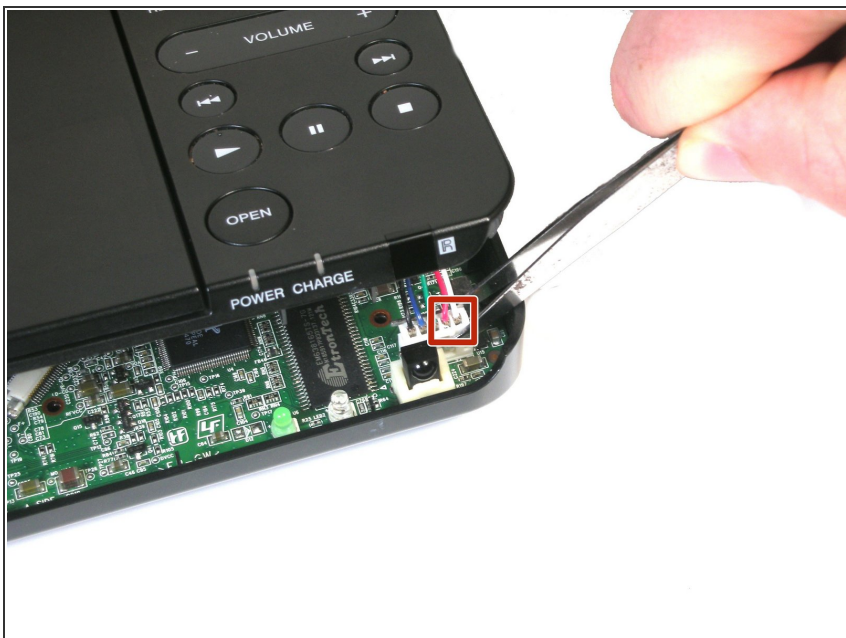



- Gently remove the wires with tweezers by pulling up on the base they are attached to.

Step 5 — Battery




- Identify the battery with the 2 blue stickers.

Step 6

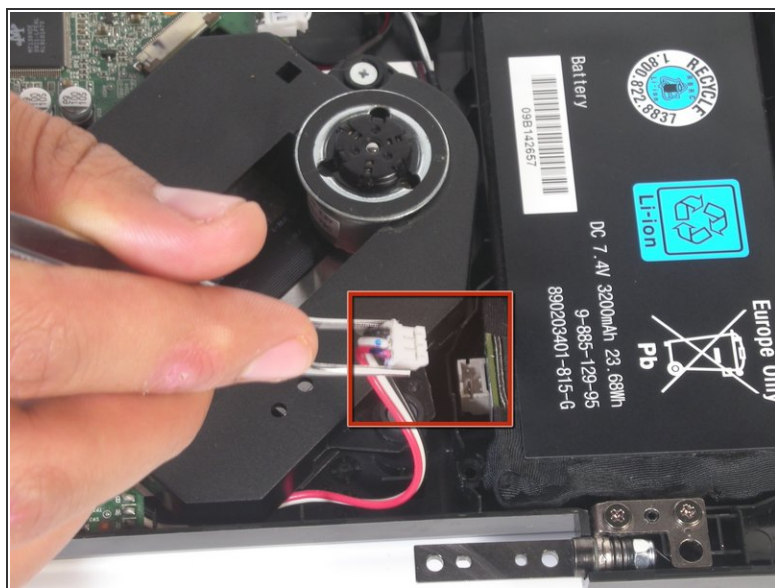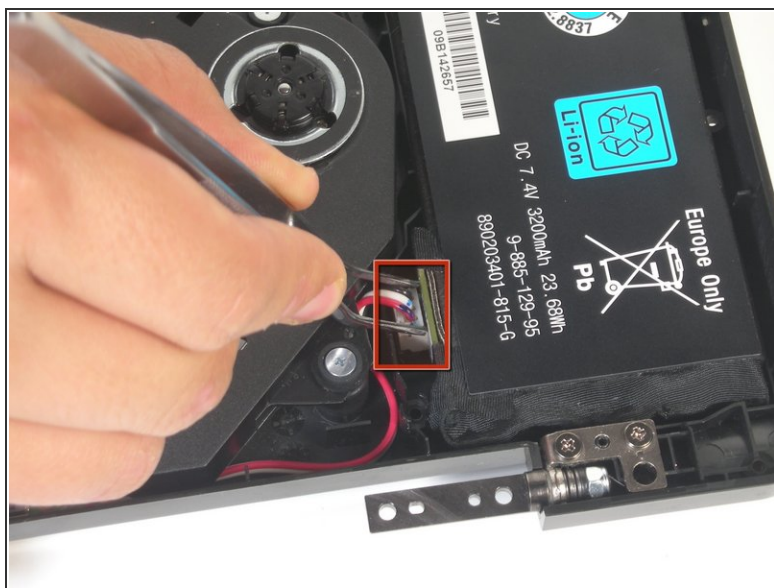

- Remove the white and red wires from the battery by pulling on the base with tweezers.

Step 7

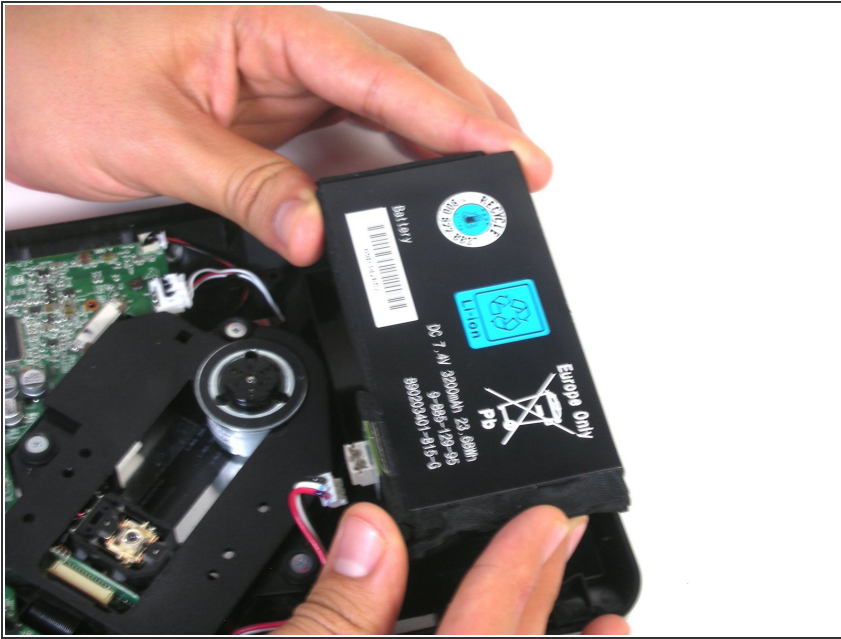

- Remove the battery from the case.
- It will still be held down at the bottom with a piece of tape, so you may need to pull up with force.

To reassemble your device, follow these instructions in reverse order.