



# Dell Latitude X300 Keyboard Replacement

This guide shows you how to remove the keyboard from the Dell Latitude X300.

Written By: Jacob Egorov






## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Keyboard

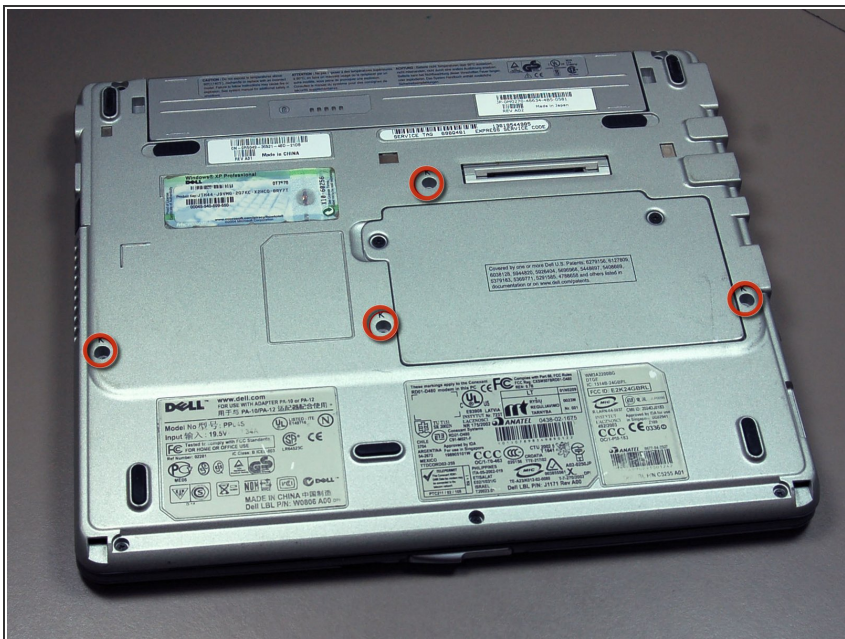

- Remove the four 4 mm Phillips #0 screws from the bottom of the laptop.


## Step 2



- Carefully turn the laptop over and open the screen all the way.
- Locate the slot to remove the keyboard in the lower left hand corner.
- Using a spudger as a lever, insert it into the slot and gently pry up.




## Step 3

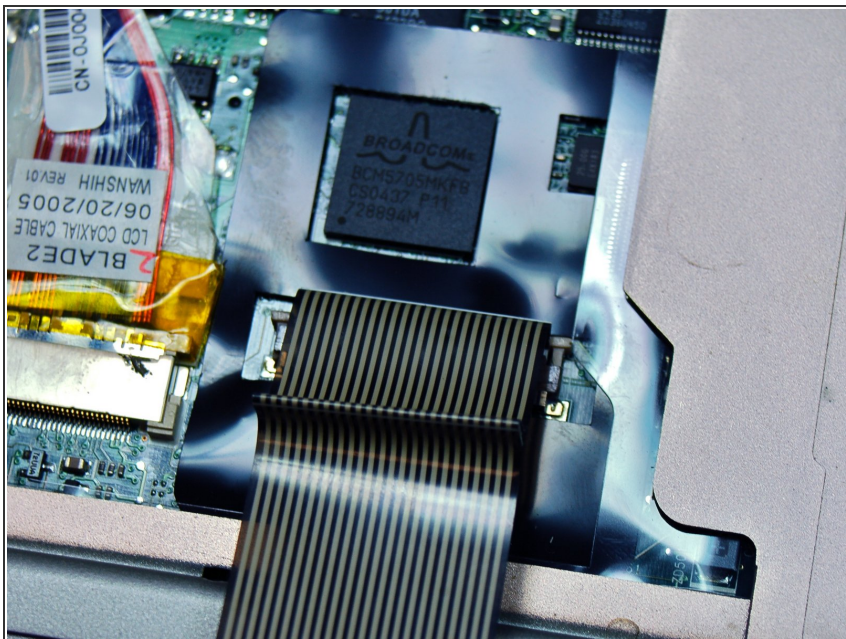

- After the keyboard pops up, pull it away from the screen just enough to release the tabs.


⚠ Don't pull the keyboard out forcefully as there is still a ribbon attached to the laptop.

## Step 4

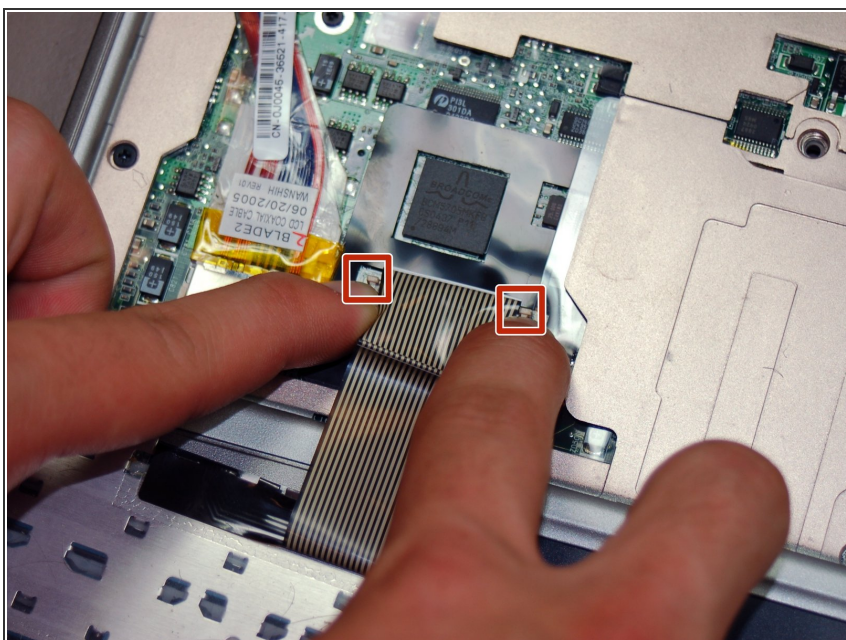

- Unlock the ZIF connector on the computer by pushing the two outside tabs toward the screen.

## Step 5

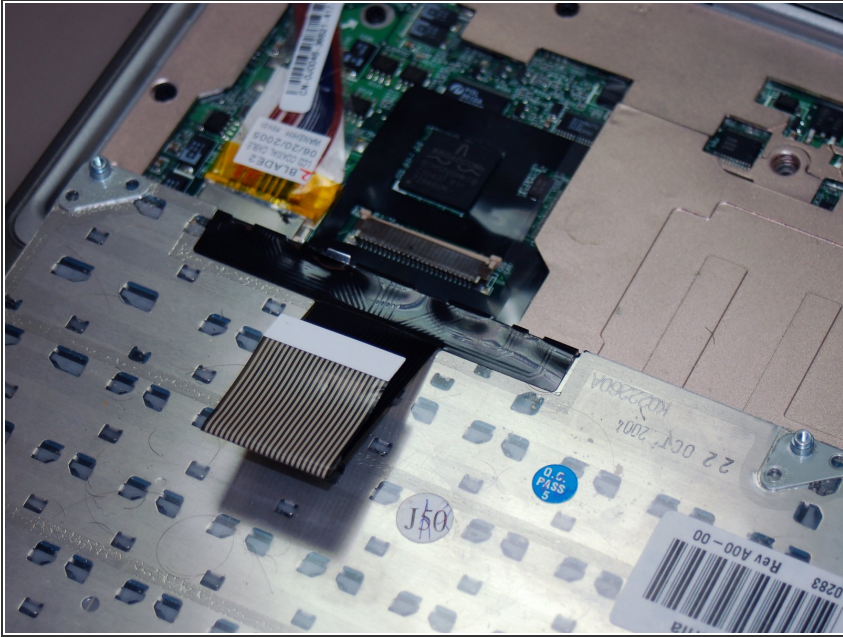

- Remove the flexible ribbon from the ZIF connector.

⚠ Do not pull on the ribbon to remove it from the ZIF connector.

To reassemble your device, follow these instructions in reverse order.