



Neato Botvac 80 Rear Bumper Replacement

Use this prerequisite guide to remove the rear bumper.

Written By: Brandon Blank



INTRODUCTION

This is a prerequisite guide to remove the rear bumper. Most repairs/ replacements will require you to remove the bumper and this guide will help you out.

Step 1 — Rear Bumper



- Grab the rear bumper with both hands on either side.

Step 2



- Pull the left and right sides away from the machine to unclip the bumper. This requires that you bend the plastic a little bit. Unclip one side a little bit and allow the prong to rest on the side of the machine. Then unclip the other side and pull off the bumper parallel to both sides

To reassemble your device, follow these instructions in reverse order.