



Disassembling Sony Cyber-shot DSC-W230 Exterior Case

This guide will aid with disassembling this...

Written By: Alex



INTRODUCTION

This guide will aid with disassembling this camera's exterior case to perform any repairs needed on the internals.

TOOLS:

[64 Bit Driver Kit](#) (1)

Step 1 — Case



- Begin by placing the camera upside down and removing the three small center screws.
- ⓘ All screws are the same size and length and can be used interchangeably.

Step 2



- Turn the camera on its side (Counterclockwise). Remove the two small screws on either side of the silver panel.
- Turn the camera 180 degrees onto its other side and remove the two small screws on either side of the silver panel.

Step 3



- Locate the camera's tripod mount located on the bottom of the camera.
- Carefully remove the camera's tripod mount and place it aside.
- Be careful not to lose this piece.
- Rotate the silver panel labeled 4x clockwise.

To reassemble your device, follow these instructions in reverse order.