



Toshiba Satellite C55-C5240 RAM Replacement

This guide will explain how to remove the RAM.

Written By: Angela Rodriguez



INTRODUCTION


This is a guide that will assist you with replacing your RAM in a Toshiba Satellite C55-C5240.




TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-


Step 1 — Battery

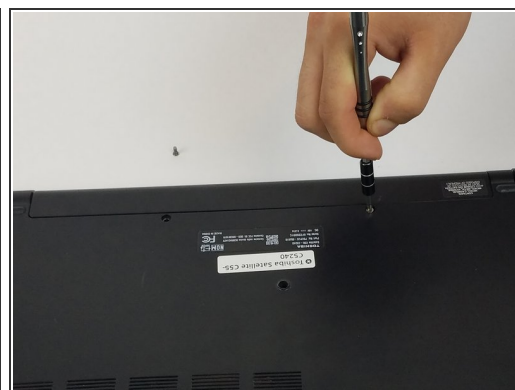

 Make sure you turn off the laptop before starting.


- Remove the two 6.5mm PH1 Phillips screws securing the battery.

Step 2

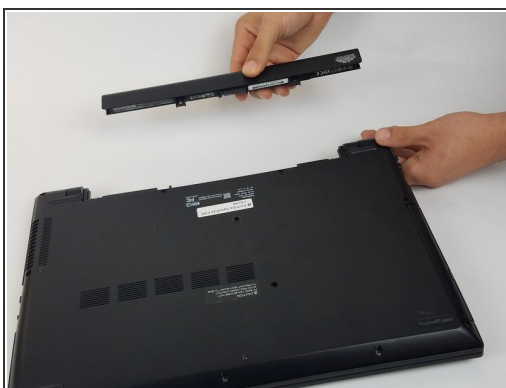

- Pull the battery out, keeping it flat and parallel to the laptop so that it slides out easily.

Step 3 — Back cover

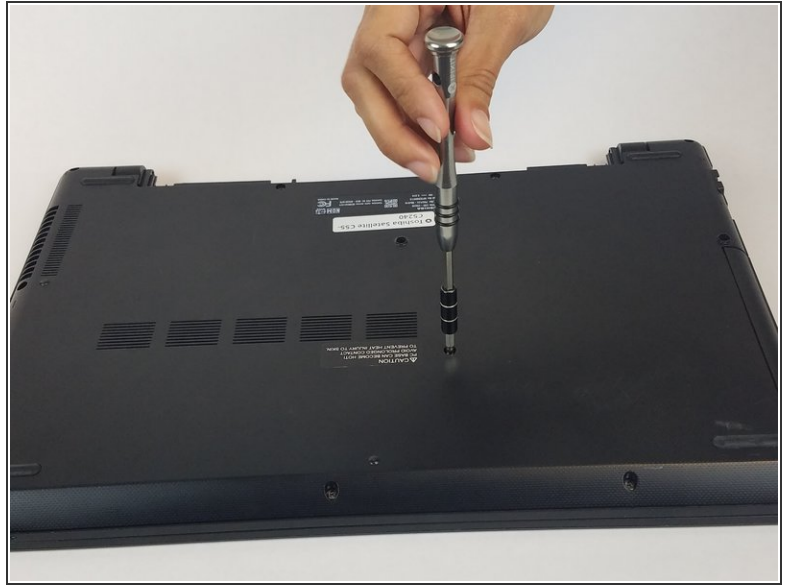



- Unscrew the ten 6.5mm PH1 Phillips head screws that hold down the back cover.

Step 4




- Using the plastic opening tools, open the back cover and remove it from the laptop.
- ⓘ It is recommended that you start from a corner and run the tool along the edge of the cover.
- ⚠ Be careful not to bend or crack the cover.

Step 5 — RAM

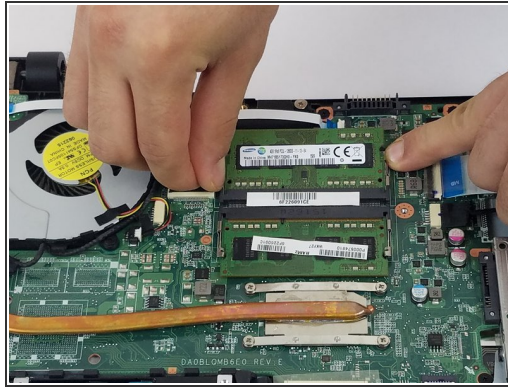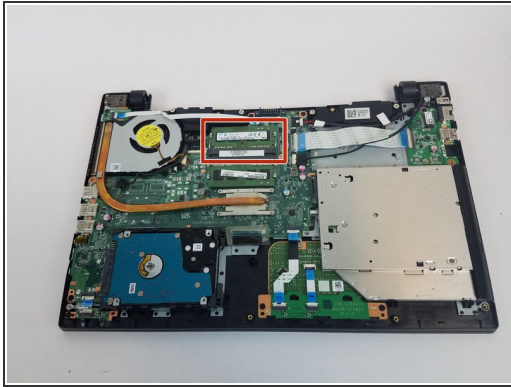

- The RAM is at the upper middle area of the motherboard.
- Push down on the clips on either side of the RAM stick evenly.
- ⓘ It will come loose in an angle once the clips are released.

Step 6

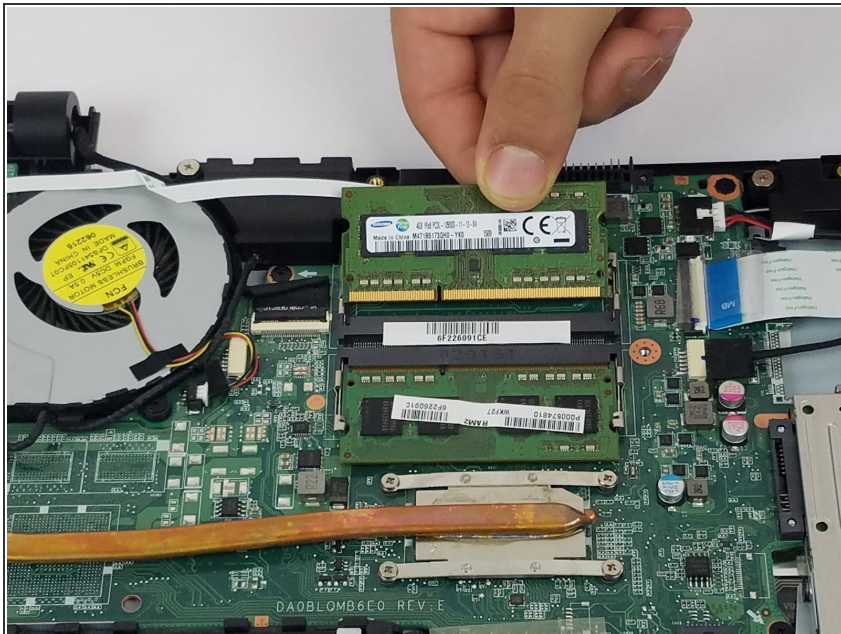

- Simply pull out the RAM stick.
- ⓘ These steps work for both sticks of RAM.

To reassemble your device, follow these instructions in reverse order.