



# HP iPAQ HW6515 Battery Replacement

Follow this guide to learn how to install a new battery into the iPAQ.

Written By: Tim



## INTRODUCTION

Following this guide step by step will allow you to install a new battery.

## Step 1 — Battery



- Flip the HP iPAQ HW6515 over with the screen facing down.
- Take the back cover off by pressing on the small silver button while pulling back then up on the case.
- Place the back of the case aside for now.

## Step 2



- Remove the battery by pulling up on the black tab.

To reassemble your device, follow these instructions in reverse order.