




# Dell Latitude ST Battery Replacement

Replace your tablet's battery so your device will power on.

Written By: Chelsea Phillips

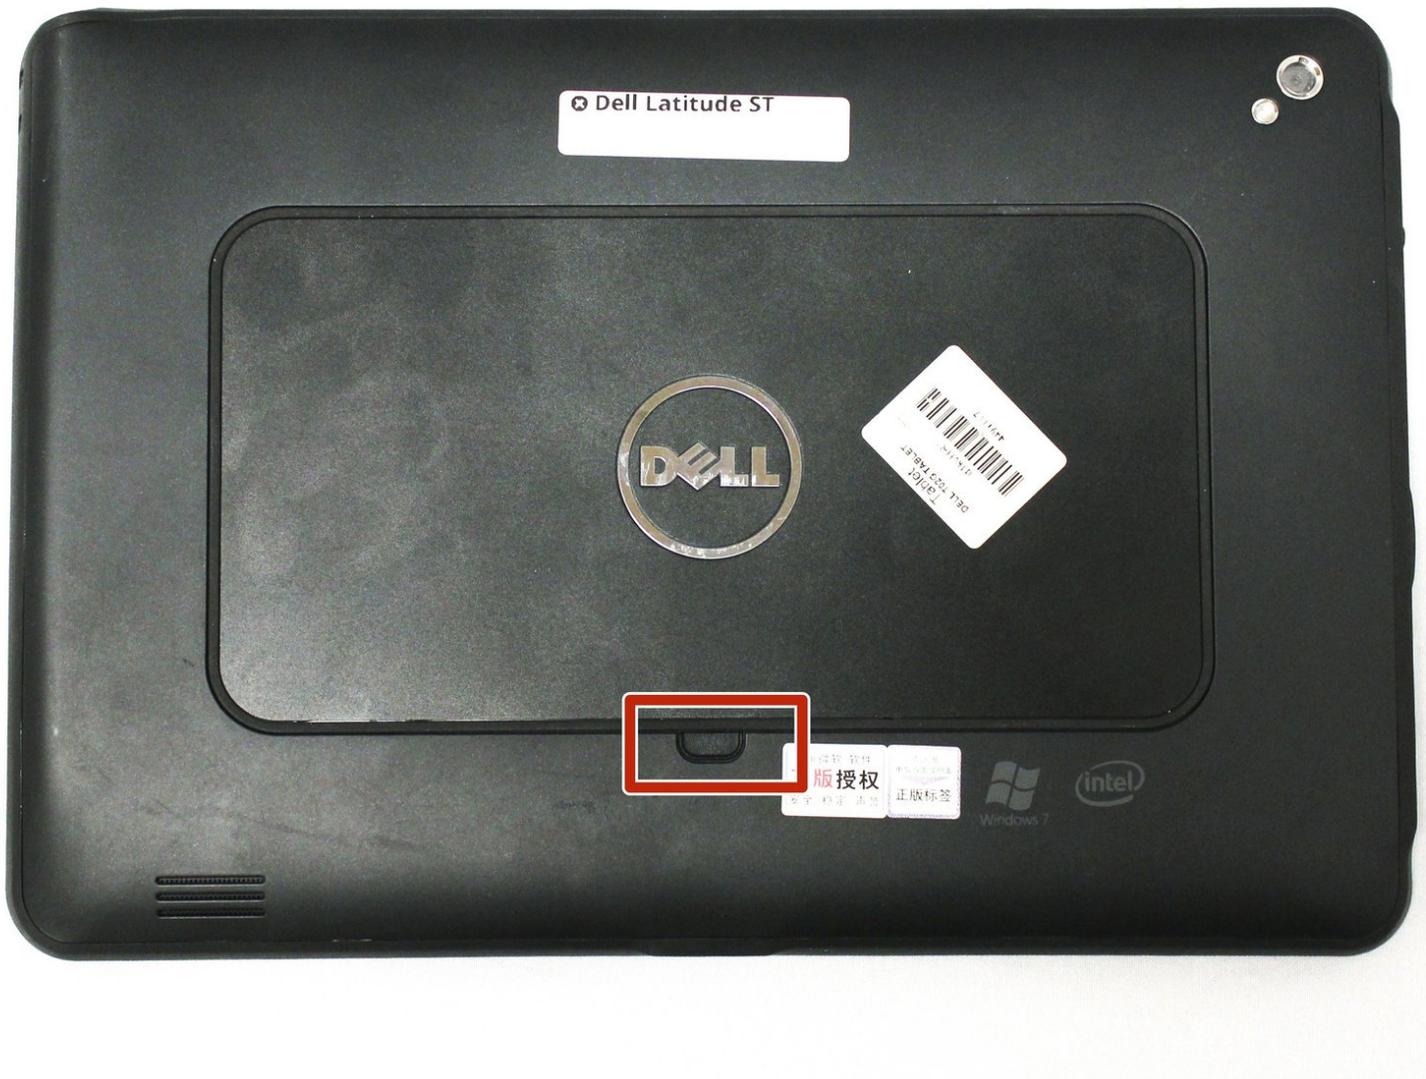

## INTRODUCTION

If your Dell latitude ST is not powering on it may have a dead battery, or a broken power cord. If your battery still does not hold a charge you will need to replace your battery. This guide walks you through each step of how to replace the battery on your Dell Latitude ST if it is broken.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Locate the back panel tab.
- Press down on the tab to remove the panel.

## Step 2



- Using a Phillips #0 screwdriver, remove the four 6mm screws attaching the inside panel to the device.

### Step 3



- Use the blue plastic opening tool to push in the tab located on the backside of the device.
- Slide the tool around the edges of the device to unsnap the tabs and pry the frame off.

### Step 4



- Remove the three 6mm Phillips #0 screws attaching the battery.

## Step 5



- Using your hands or a plastic opening tool, unplug the white battery cable.

⚠ Push forward on the top part of the cable to disconnect it from the device.

## Step 6



- Pull up on the black tab located at the top of the battery to remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.