




Nikon Coolpix 7900 Front Cover Replacement

To outline the process of removing the front cover.

Written By: Kaky Payne

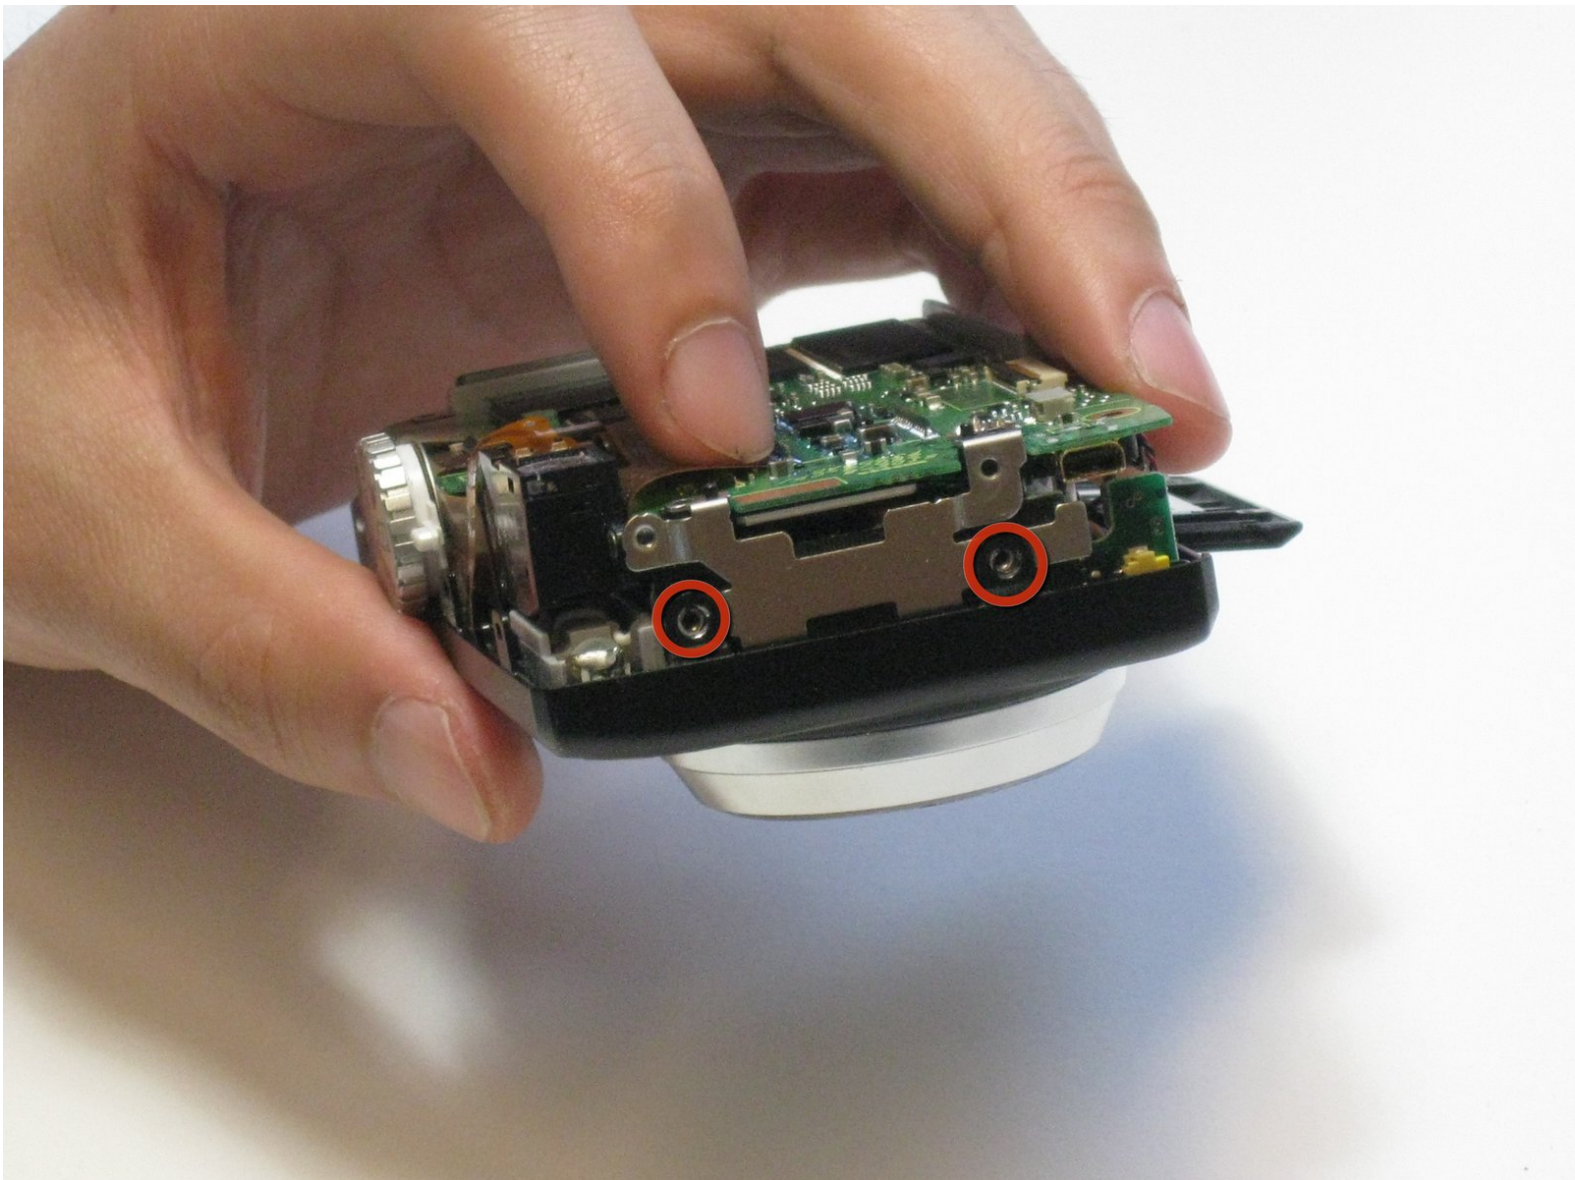

INTRODUCTION

Use this guide to replace the front cover.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Remove the four 3.0mm screws on the bottom of the camera.

Step 2




- Remove the two 3.0mm screws on the left side of the camera near the memory card compartment.

Step 3




- Remove the two 3.0mm screws on the right side of the camera.

Step 4

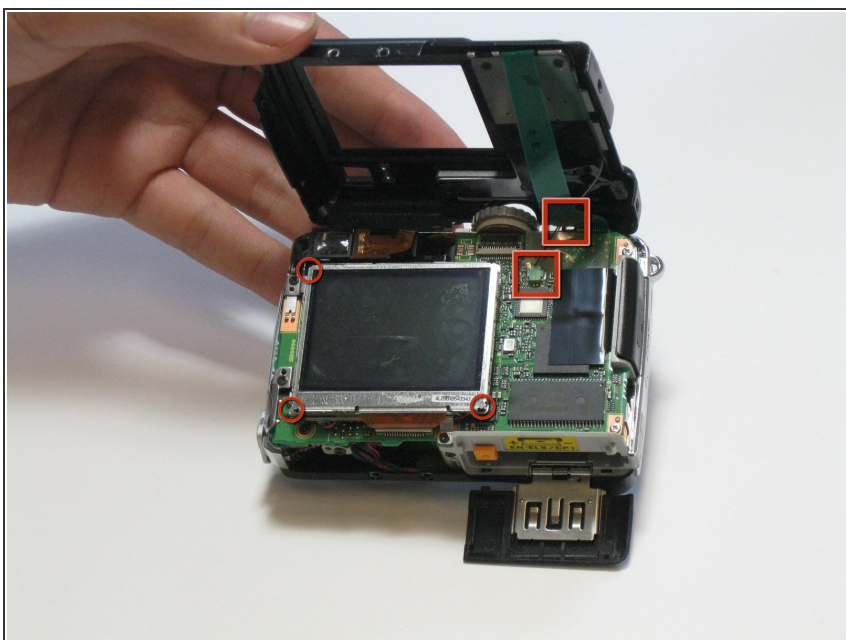


- Carefully open the back cover. Take care as there are connectors still attached.

Step 5

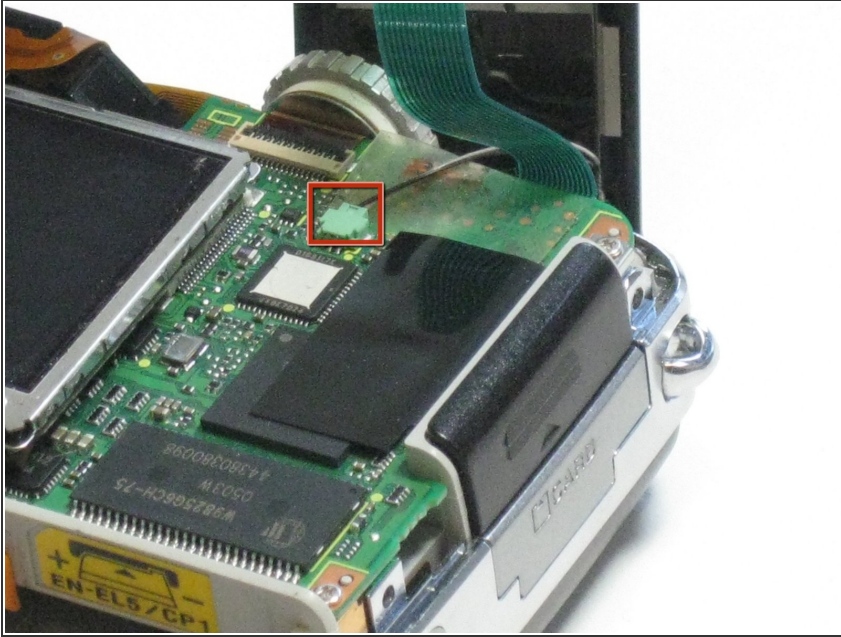


- Disconnect the cable by pulling the head upward along the green circuit board. If you only are changing the LCD, skip this step.

Step 6

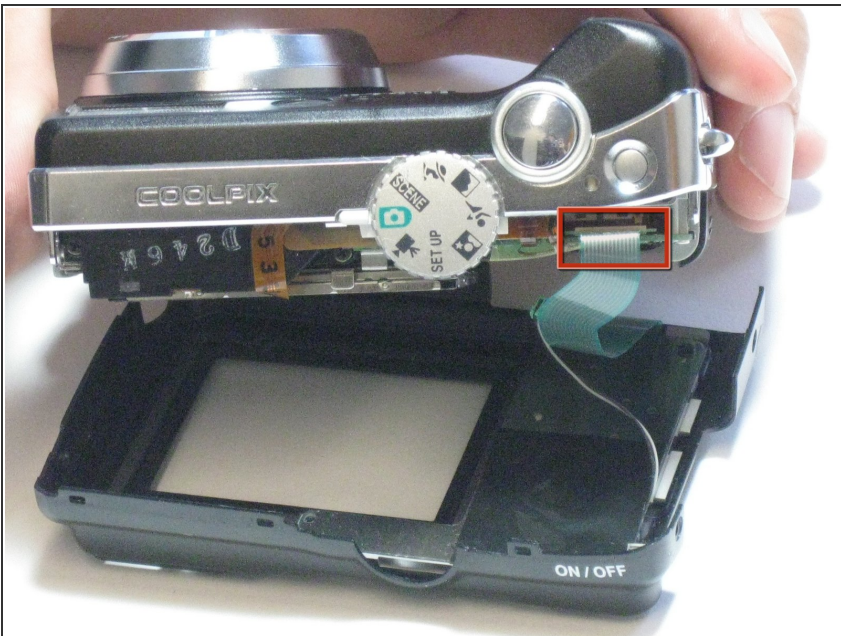


- Disconnect the ribbon cable by grabbing the two handles and pulling it directly out of the socket. If you are only changing LCD, skip this step.
- ⓘ The back cover will be disconnected from the camera

Step 7 — Front Cover

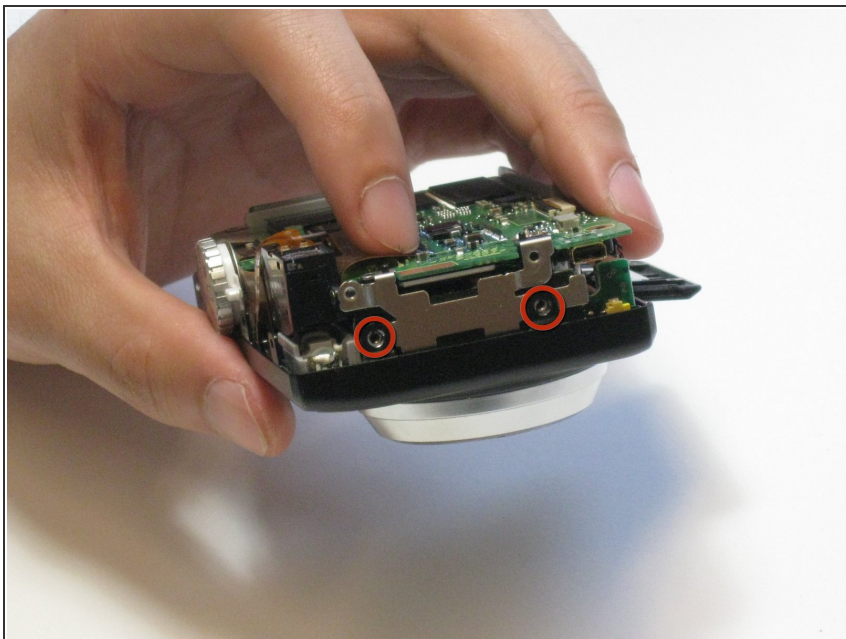


- ⚠ Be careful of metallic parts which are loose and will fall out.
- Remove the two 2.5mm screws on the bottom of the left side, after having removed the back cover.

Step 8

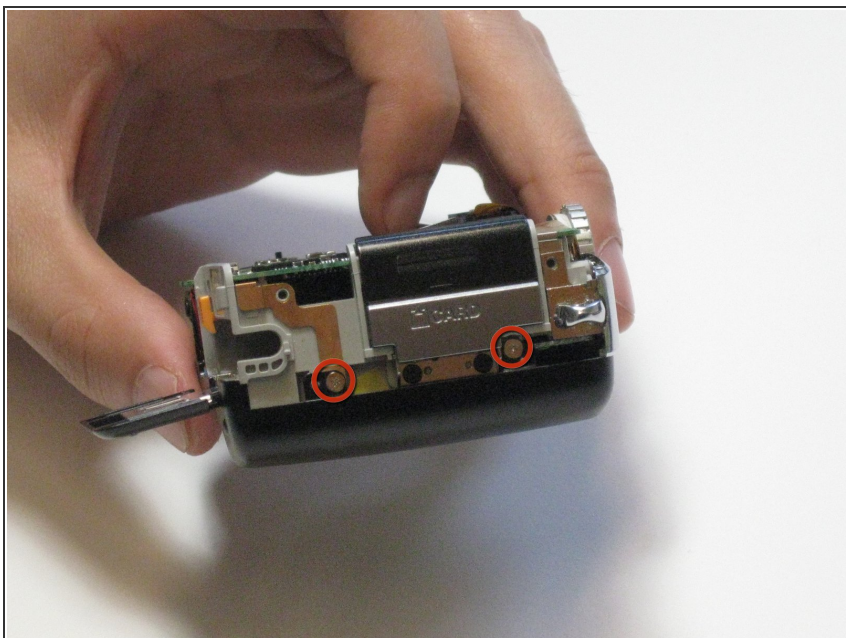

- Remove the two 3.0mm screws on the right side of the camera.

Step 9

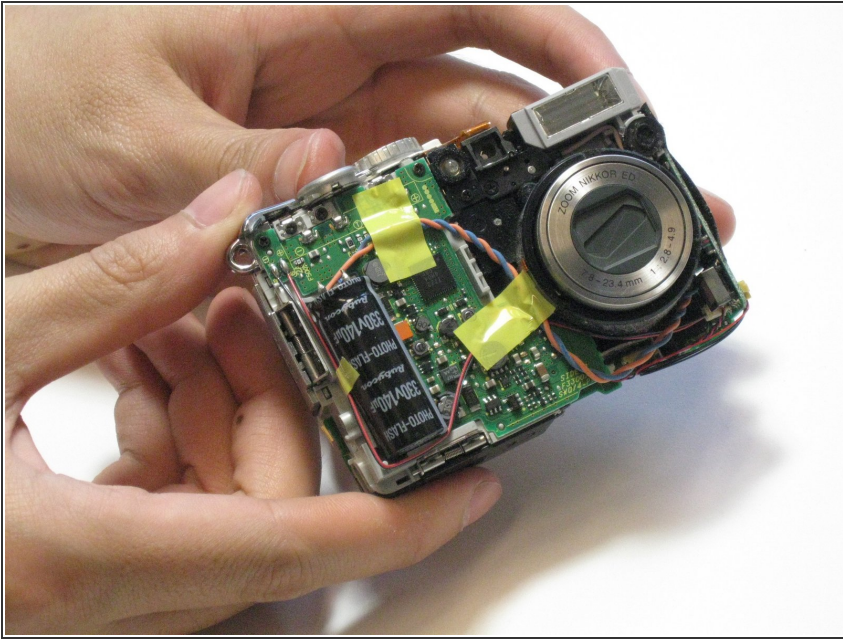

- Remove front cover.

To reassemble your device, follow these instructions in reverse order.