


Archived

LG G6 USB-C Port Replacement

Use this guide to replace the USB-C port on...

Written By: David Pugliese

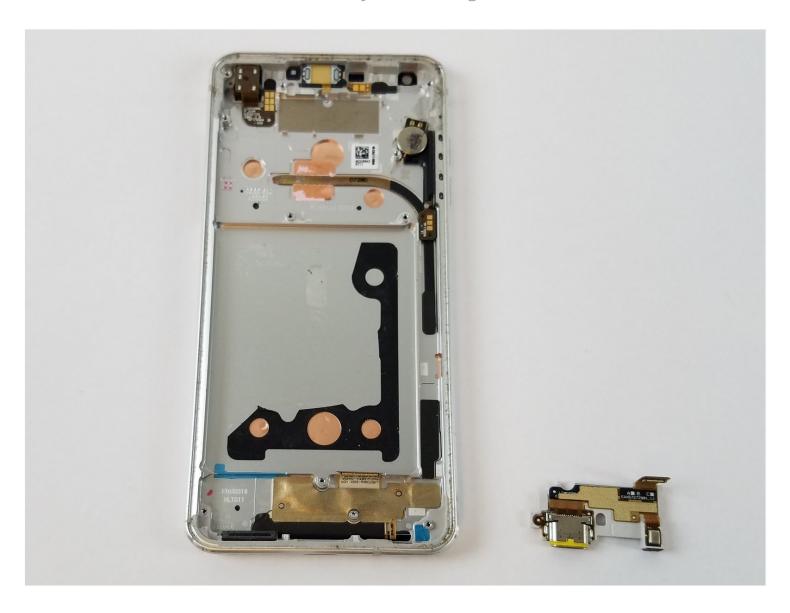

INTRODUCTION

Use this guide to replace the USB-C port on your LG G6.

TOOLS:

iOpener (1)

Phillips #000 Screwdriver (1)

Metal Spudger (1)

Spudger (1)

Suction Handle (1)

Plastic Cards (1)

Halberd Spudger (1)

iFixit Opening Picks (Set of 6) (1)

Tweezers (1)

PARTS:

Tesa 61395 Double-Sided Tape (2)

Thin, high-bond tape is required if the replacement part does not come with adhesive.

LG G6 USB-C Port (1)

Step 1 — iOpener Heating





- (i) We recommend that you clean your microwave before proceeding, as any nasty gunk on the bottom may end up stuck to the iOpener.
- Place the iOpener in the center of the microwave.

⚠ For carousel microwaves: Make sure the plate spins freely. If your iOpener gets stuck, it may overheat and burn.



- Heat the iOpener for thirty seconds.
- Throughout the repair procedure, as the iOpener cools, reheat it in the microwave for an additional thirty seconds at a time.
- ⚠ Be careful not to overheat the iOpener during the repair.
 Overheating may cause the iOpener to burst. Do not attempt to heat over 100°C (212°F).
- ⚠ Never touch the iOpener if it appears swollen.
- ⚠ If the iOpener is still too hot in the middle to touch, continue using it while waiting for it to cool down some more before reheating. A properly heated iOpener should stay warm for up to 10 minutes.



- Remove the iOpener from the microwave, holding it by one of the two flat ends to avoid the hot center.
- ⚠ The iOpener will be very hot, so be careful when handling it. Use an oven mitt if necessary.

Step 4 — Alternate iOpener heating method




- (i) If you don't have a microwave, follow this step to heat your iOpener in boiling water.
- Fill a pot or pan with enough water to fully submerge an iOpener.
- Heat the water to a boil. Turn off the heat.
- Place an iOpener into the hot water for 2-3 minutes. Make sure the iOpener is fully submerged in the water.
- Use tongs to extract the heated iOpener from the hot water.
- Thoroughly dry the iOpener with a towel.
 The iOpener will be very hot, so be careful to hold it only by the end tabs.
- Your iOpener is ready for use! If you need to reheat the iOpener, heat the water to a boil, turn off the heat, and place the iOpener in the water for 2-3 minutes.

Step 5 — Battery




 Apply the heated iOpener to the edge of the phone for about 2 minutes.

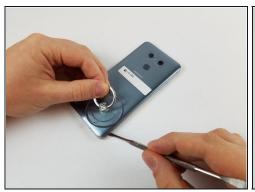






- When the back panel is heated, apply the suction cup close to a corner of the phone. Lift up and insert a halberd spudger or opening pick under the rear glass.
- Slide the blade of the Halberd spudger along the edge of the phone to separate the adhesive.
- Follow around the edge of the phone, and use an opening pick or other tool (such as a <u>plastic card</u>) to keep already opened portions from re-adhering.

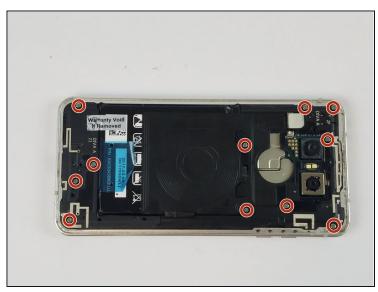

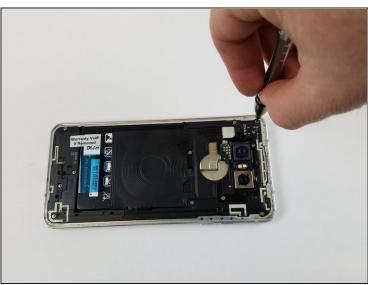


Using a Philips 000 bit, remove 11 screws from the highlighted locations.

Step 8






 With the screws removed, remove the lower frame components, followed by the upper mid-frame. Both components can be removed with a little prying.

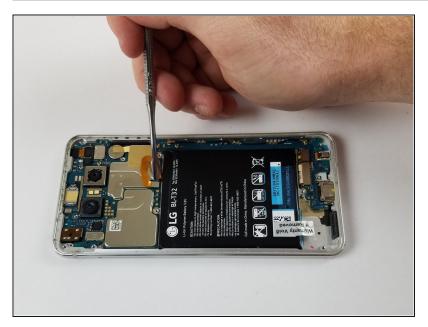

 Begin battery removal by very gently prying off the power ribbon with a plastic card or a nylon spudger.

Step 10



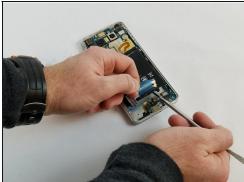




• Firmly pull the blue tab. Be careful not to bend the battery as you pull it away from the adhesive.

 \triangle Do not use a knife as you may pierce the battery.

Step 11 — Motherboard

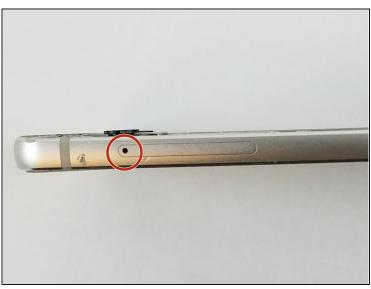





- Locate the sim card tray release mechanism on the right edge.
- Using the tweezers, or similar thin and rigid tool, push in the release button and pull out the sim card tray.





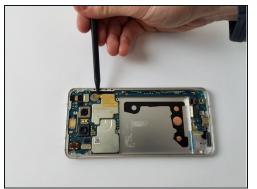

- Gently pry off the two connectors at the bottom of the phone.
- Pry off the tape covering the vibrator.

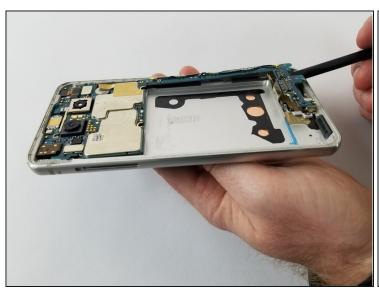




The motherboard is now removable by gently lifting.

⚠ Upon removal of the motherboard, the small plastic sim card tray release mechanism will be loose and may get lost.

Step 14 — USB-C Port

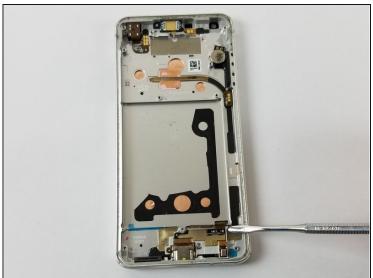



• Gently pry the USB-c port assembly out of the frame.

To reassemble your device, follow these instructions in reverse order.