



uAttend bn6000 Screen Replacement

uAttend bn6000 screen replacement.

Written By: abdullah sumait



INTRODUCTION

The screen provides the digital display for the unit. It is vital for the function of the entire unit operation. This guide will show how to remove and replace the screen. Take care not to damage the screen upon removal.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Disassembly





- **i** Make sure to unplug the device before starting.
- Flip the device over.
- Remove the four 10mm PH #2 screws by rotating the screwdriver counterclockwise, removing the screw from the housing completely.

Step 2

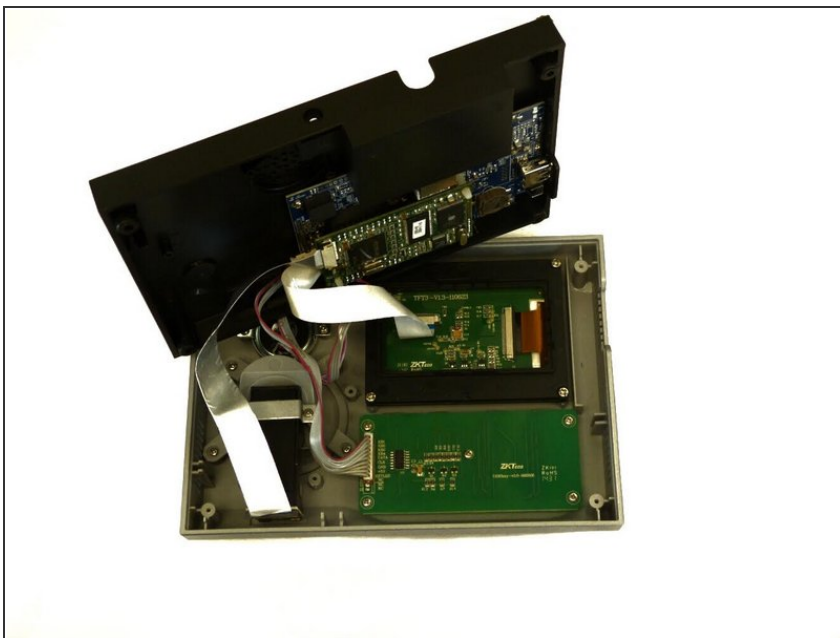




- Separate the two cover pieces carefully by pulling apart the two cover pieces away from each other.

Step 3 — Screen

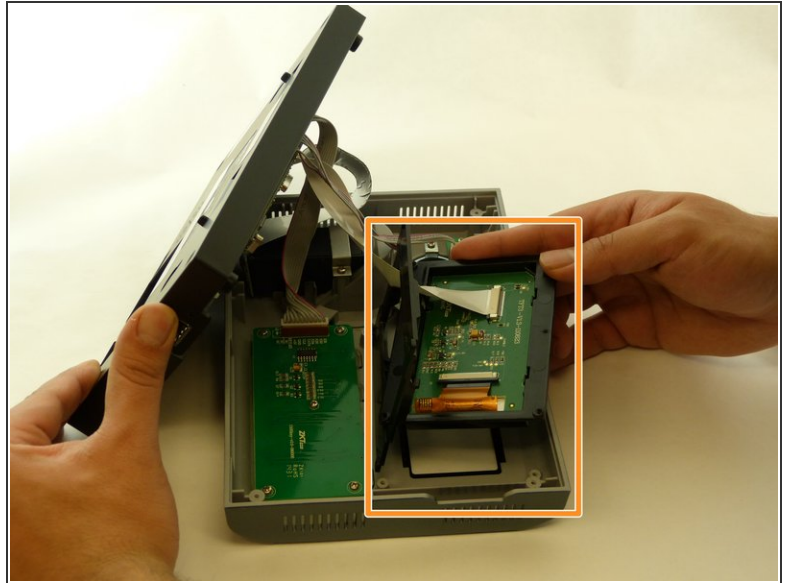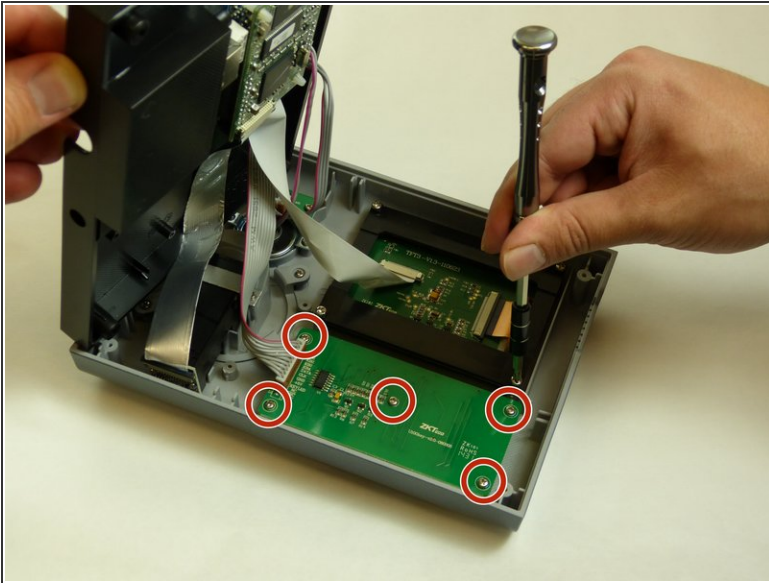

- Remove the four 10mm PH #2 screws from the screen assembly, by rotating the screw driver counter clockwise, removing the screw from the housing completely.
- Remove the screen assembly from the housing by pulling the screen up and away from the housing.

Step 4

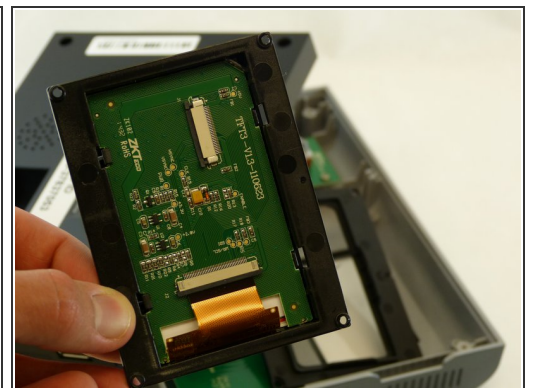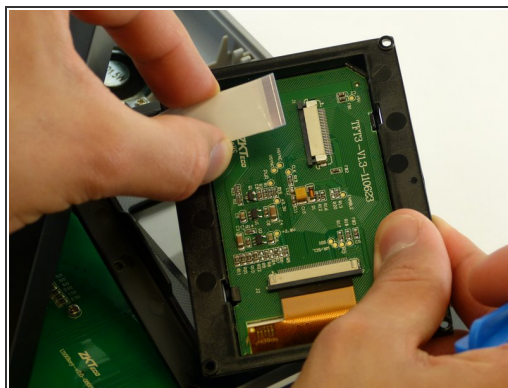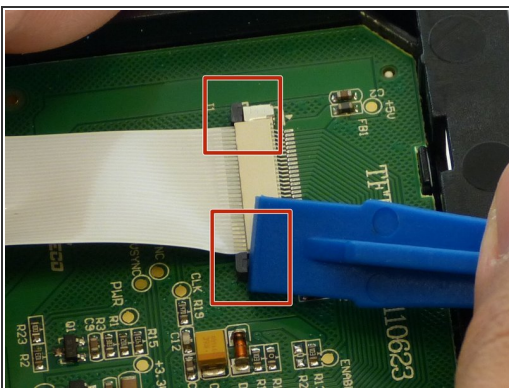

- Disconnect the ZIF connector, by using the plastic opening tool to lift up on the small locking flap. Then pull the ribbon up and away, out of the connector.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:07:28 AM (MST).

