




uAttend bn6000 Speaker Replacement

Replace the speaker in uAttend bn6000.

Written By: abdullah sumait

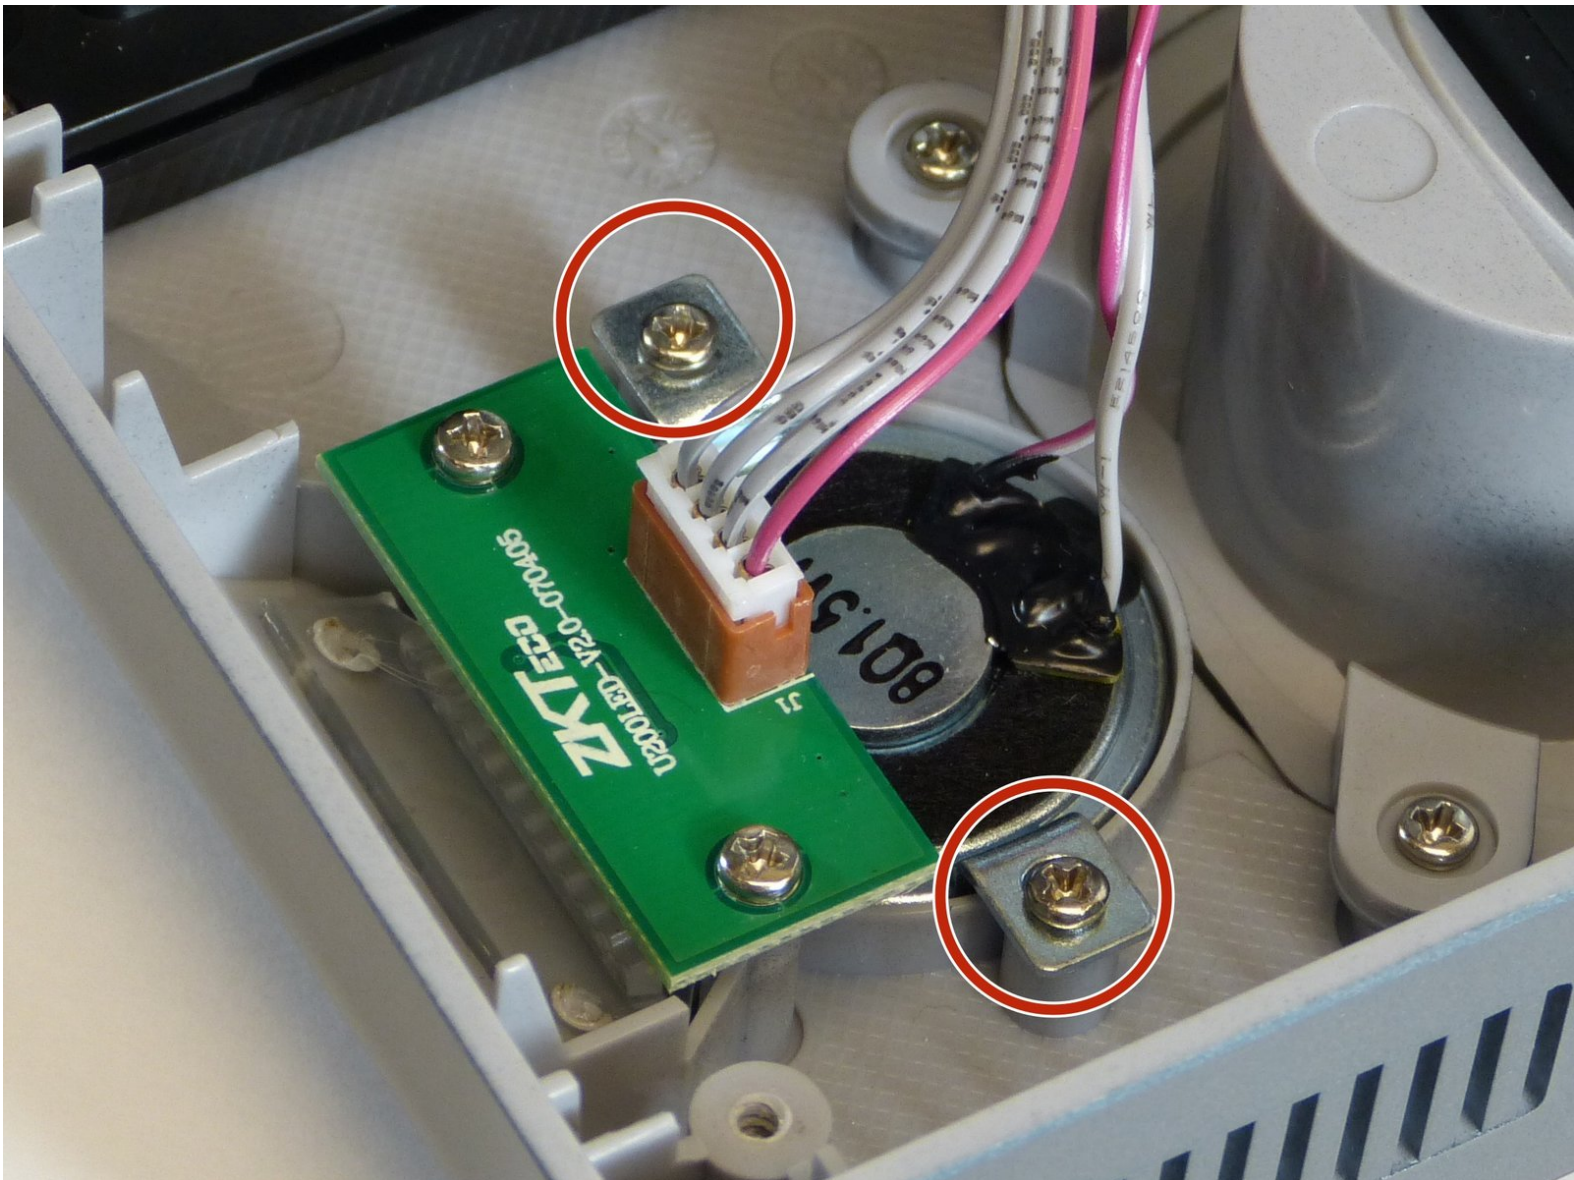

INTRODUCTION

The speaker provides sound for the unit. Take care not to damage the speaker or wiring connectors upon removal. This guide will show how to remove and replace the speaker.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Disassembly




- **i** Make sure to unplug the device before starting.
- Flip the device over.
- Remove the four 10mm PH #2 screws by rotating the screwdriver counterclockwise, removing the screw from the housing completely.

Step 2

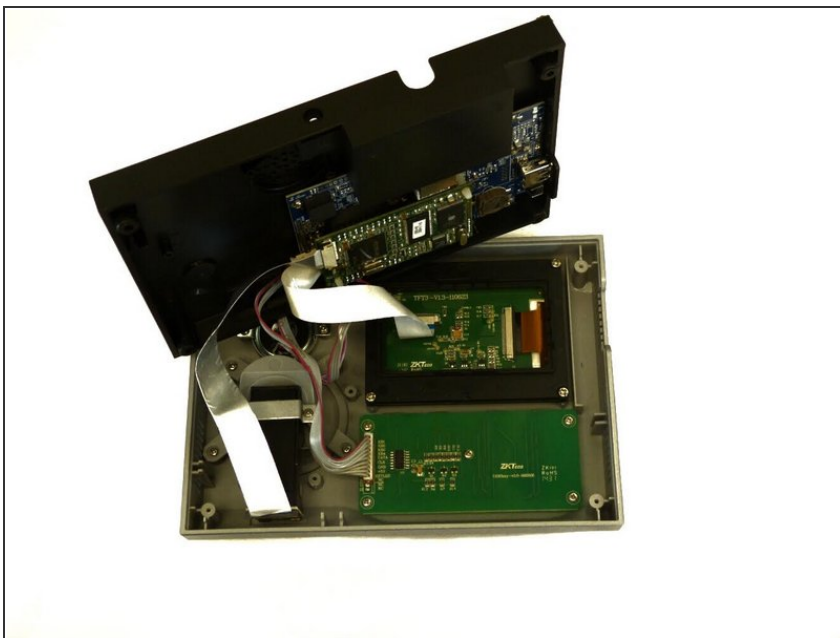



- Separate the two cover pieces carefully by pulling apart the two cover pieces away from each other.

Step 3 — Speaker

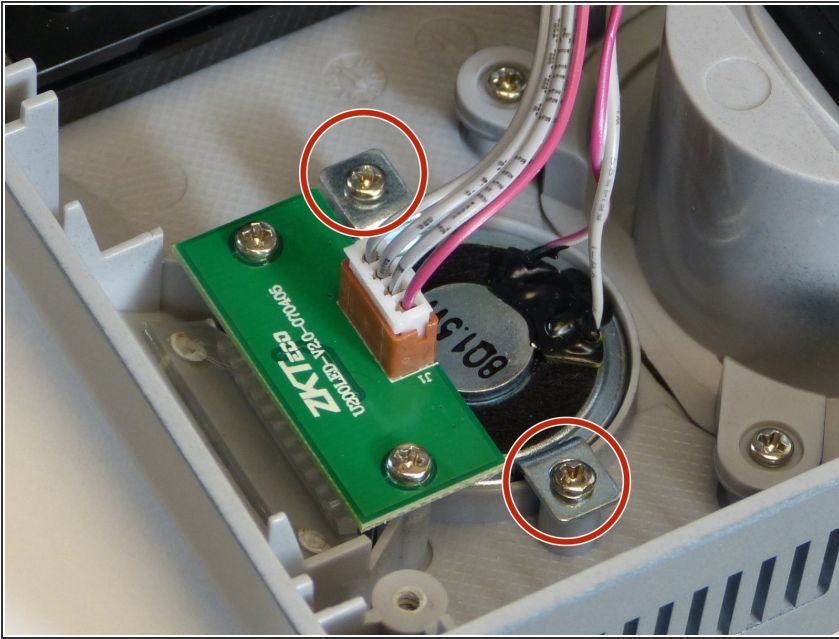

- Remove the two 5mm PH #1 screws from the speaker assembly, by rotating the screwdriver counterclockwise, removing the screw from the housing completely.
- Remove the speaker assembly from the unit, by lifting the speaker up and away from the housing.

Step 4

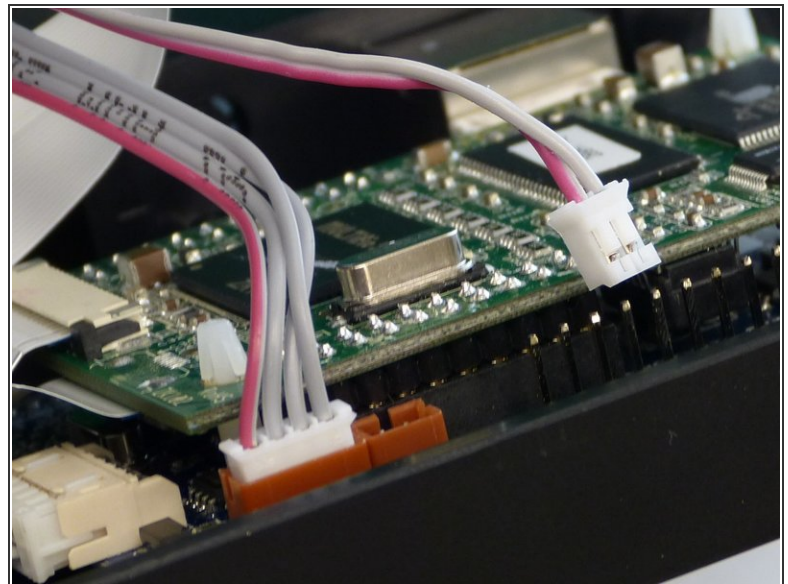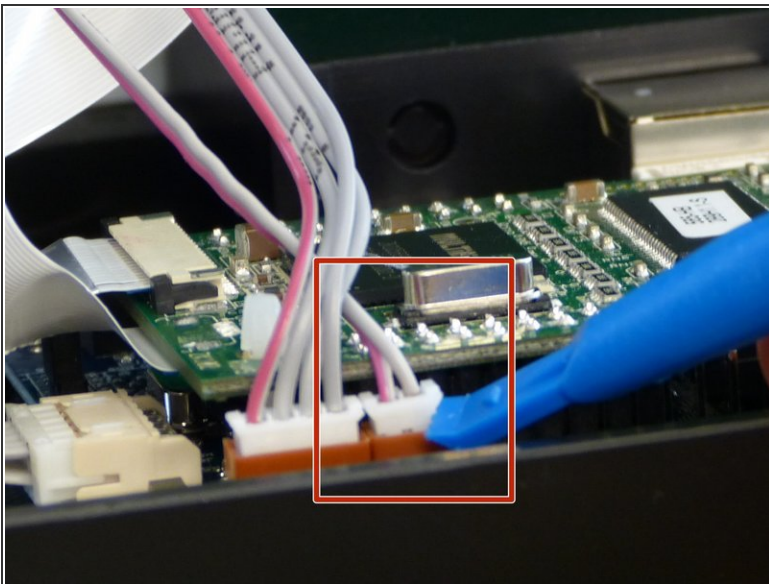

- Remove the bundled cable carefully, by prying up on it with the plastic opening tool.
- ☞ Carefully remove speaker from unit by pulling it up and away from housing.

To reassemble your device, follow these instructions in reverse order.