




Acer Chromebook C720-2827 Speakers Replacement

How to replace Acer Chromebook C720-2827 speakers.

Written By: Kennedy Morales

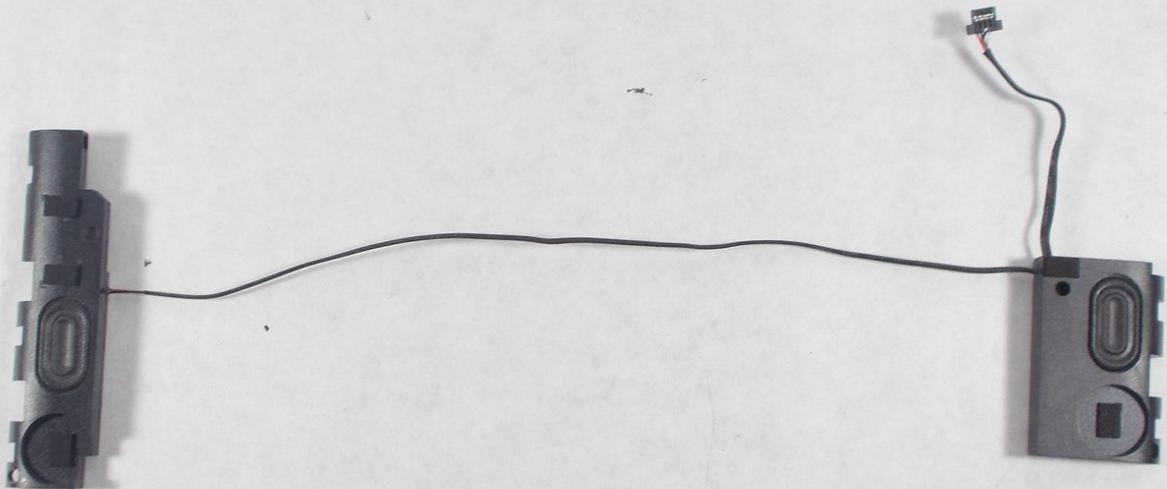

INTRODUCTION



This guide will mainly focus on removing the speakers. First, you will need to remove the back panel. Next, you will need to remove the battery.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Back Panel Assembly

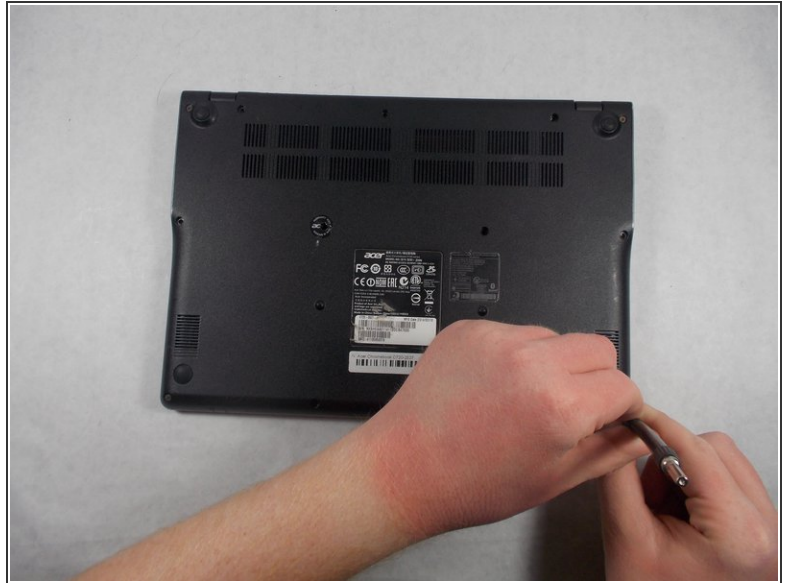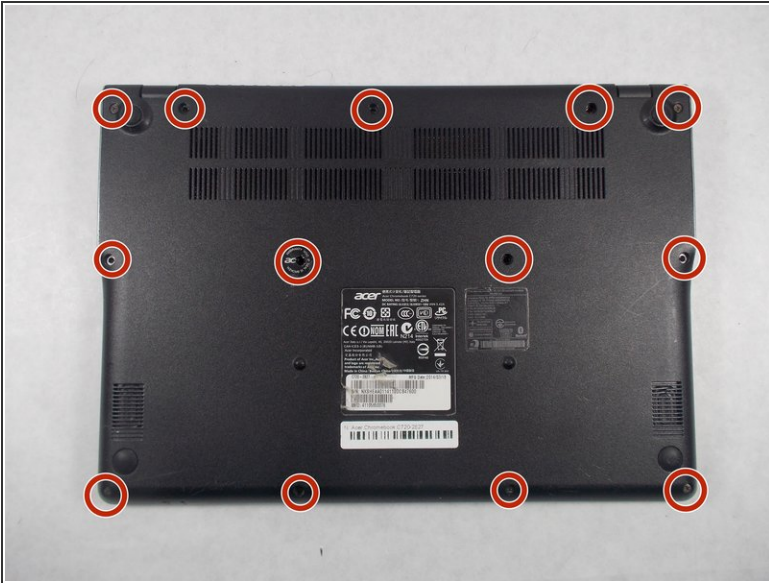

- Remove the thirteen 6.0mm screws on the back panel using your Phillips #1 screwdriver.

Step 2

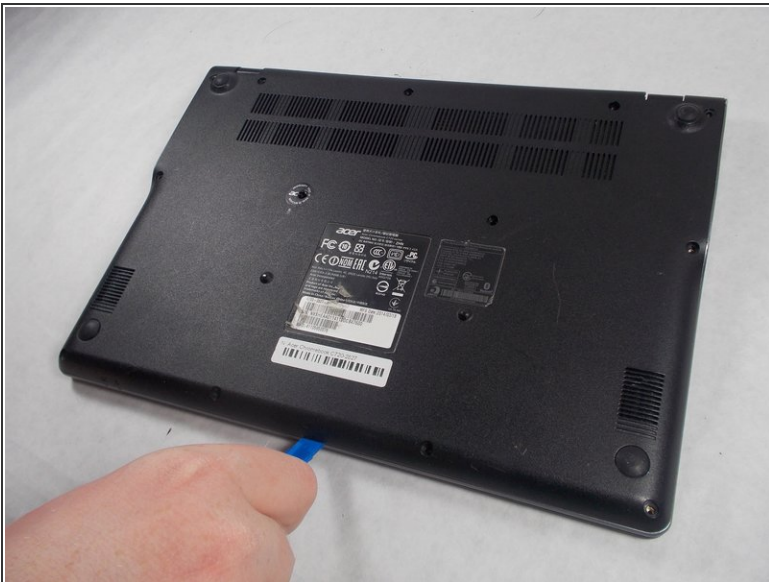



- Pry the back panel open with the plastic opening tool.

Step 3 — Battery



- Remove the two 6.0mm screws securing the battery with your Phillips #1 screwdriver.

Step 4

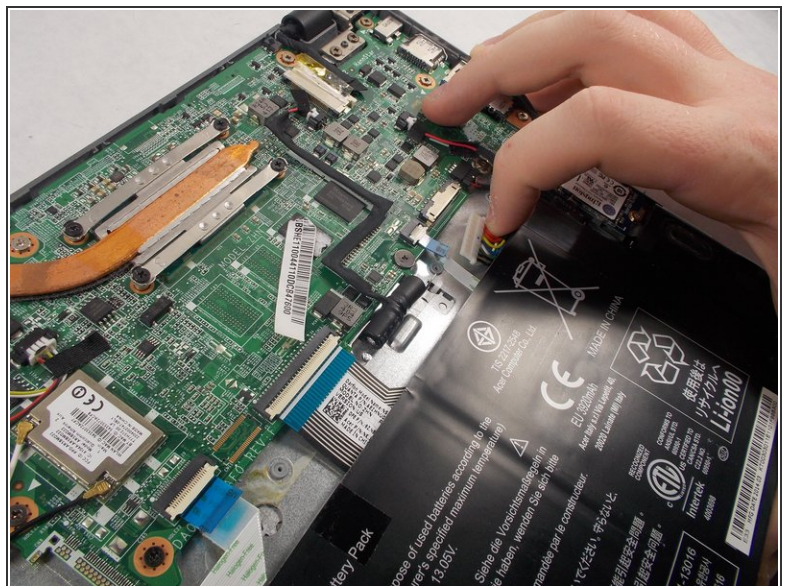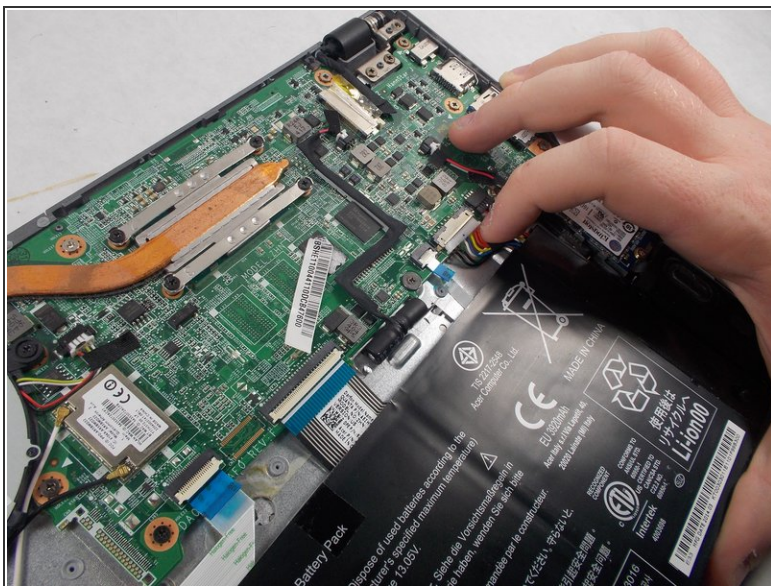



- Carefully pull out the battery wire connected to the battery port.

Step 5





- Slowly lift the battery to remove it from the Chromebook.

Step 6 — Speakers

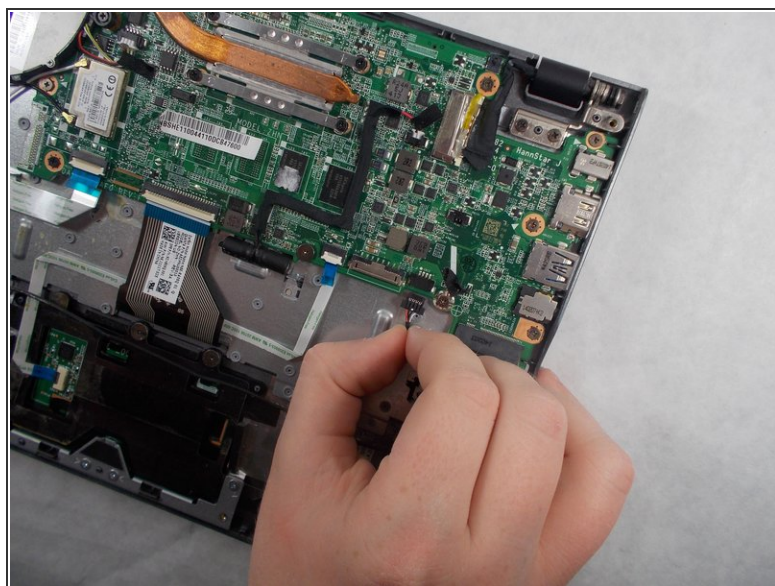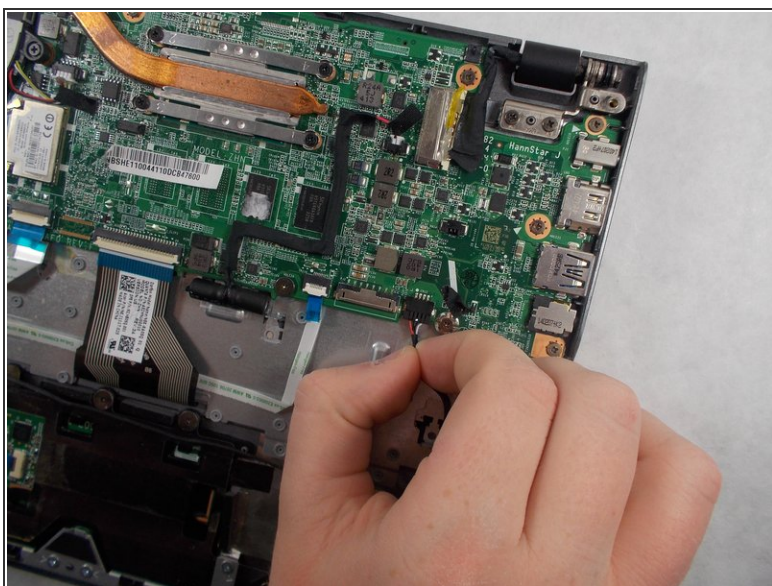

- Unplug the speaker wire from the motherboard.

Step 7

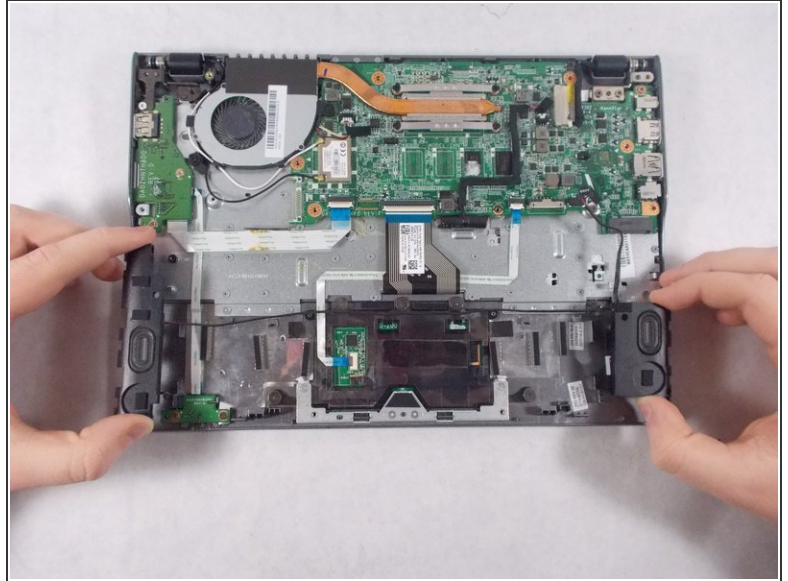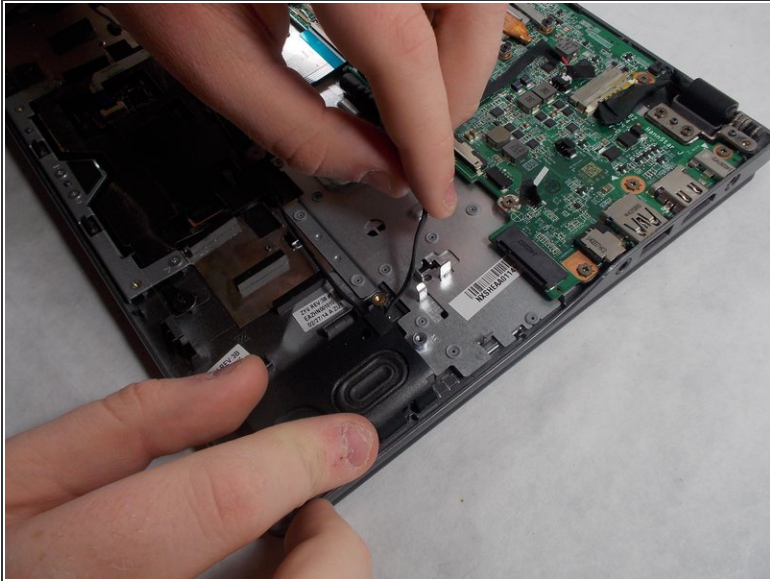

- Carefully pull out the speakers from each side of the Chromebook.

To reassemble your device, follow these instructions in reverse order.