




# Dell XPS 18 Support Feet Replacement

This guide will inform users on how to replace the support feet of the Dell XPS 18 (1810). Useful for devices with broken or missing support feet.

Written By: Austin Weir

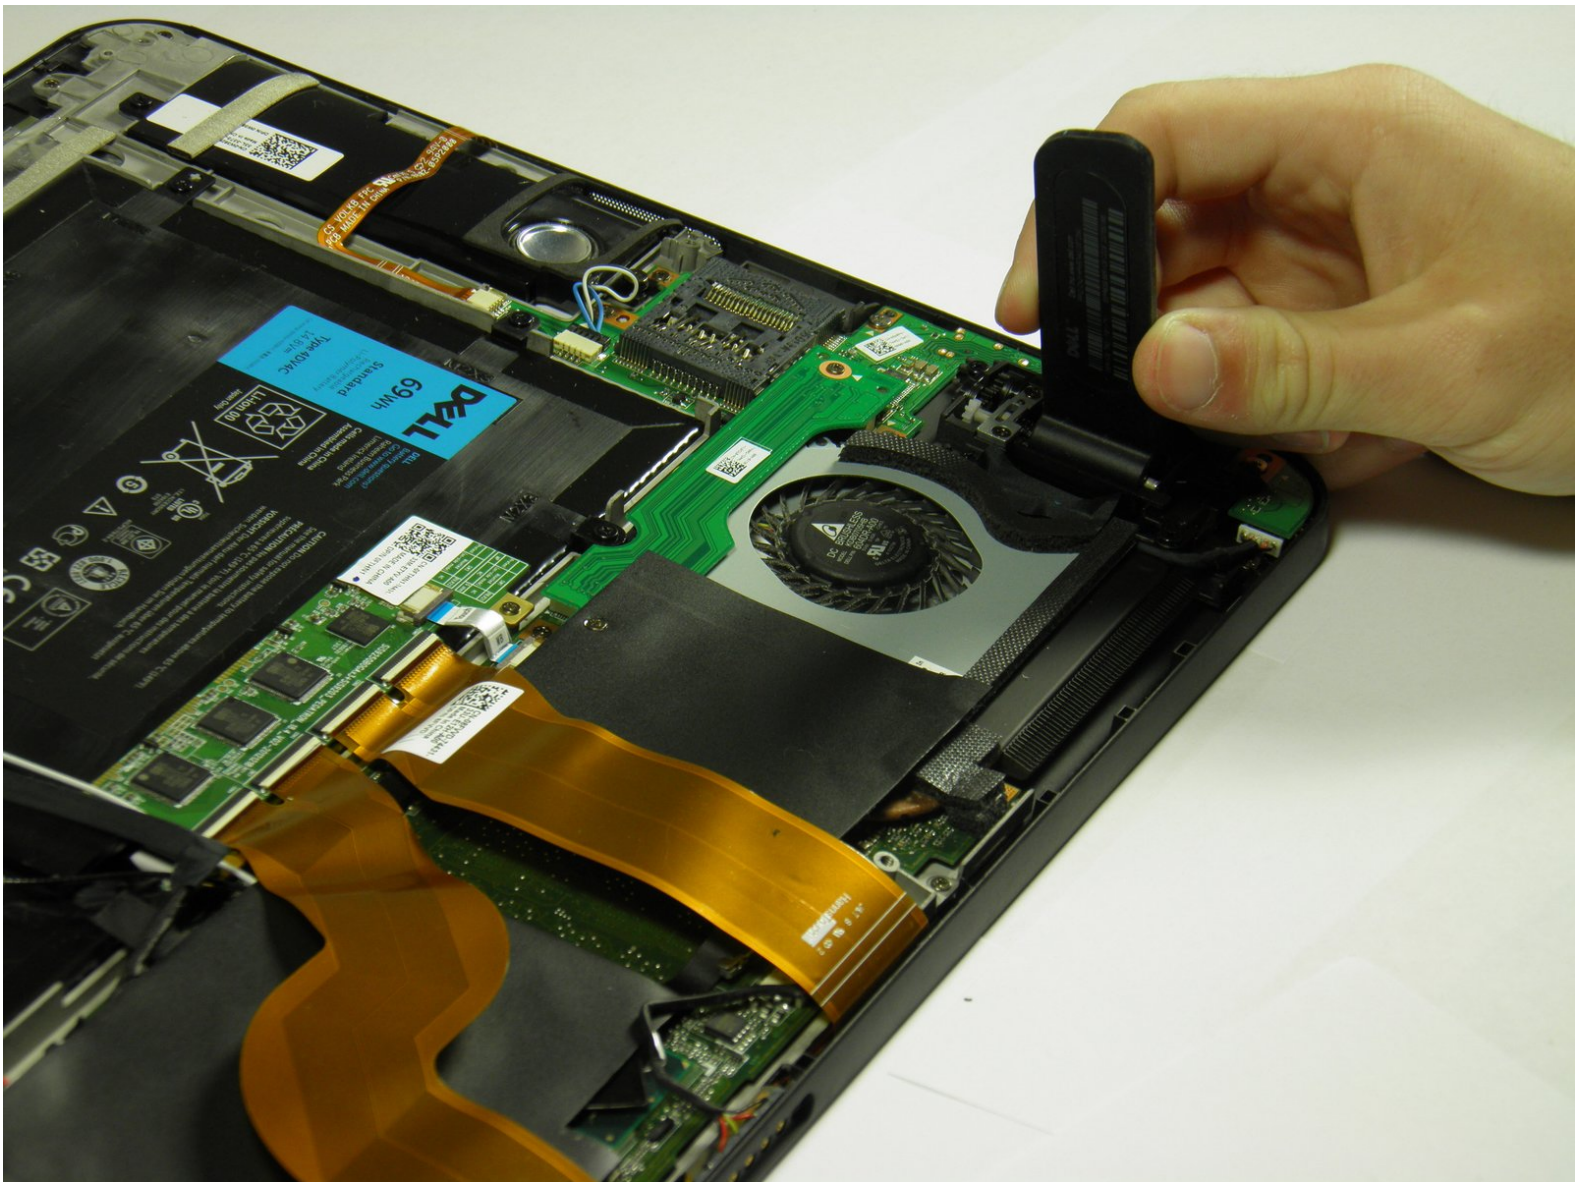

# INTRODUCTION

This guide will show you how to replace the support feet if you have broken one.



## TOOLS:

- [T9 Torx Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)



## PARTS:

- [Dell XPS 18 Left Kickstand](#) (1)
- [Dell XPS 18 Right Kickstand](#) (1)

## Step 1 — Back Cover



- Turn the device on its screen.
- Remove the ten 4mm screws using a T8 Torx screwdriver.

## Step 2



- Gently flip out support feet located near the bottom of device.




### Step 3




- Gently lift the back cover off the device. The back cover should come off easily.

### Step 4 — Support Feet

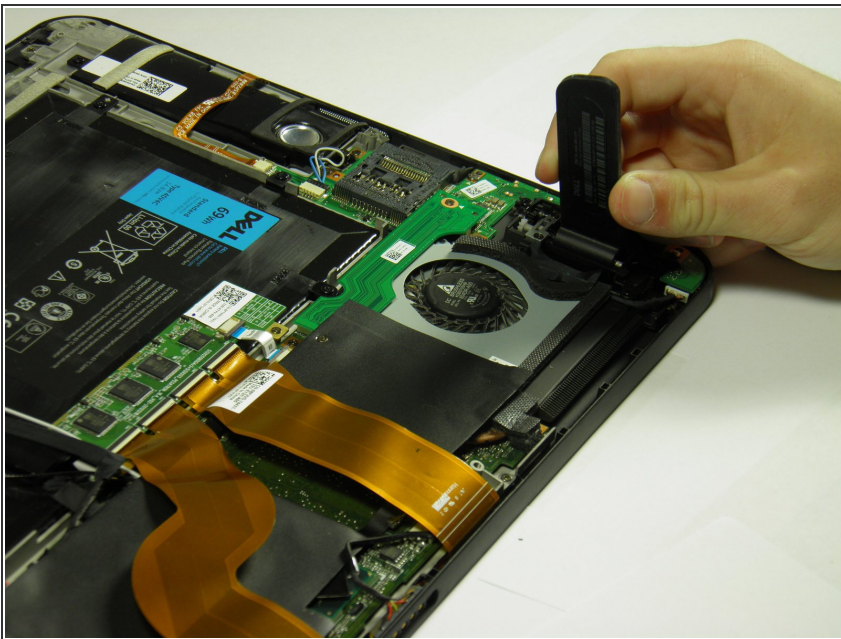


- Fold down the support foot.

## Step 5

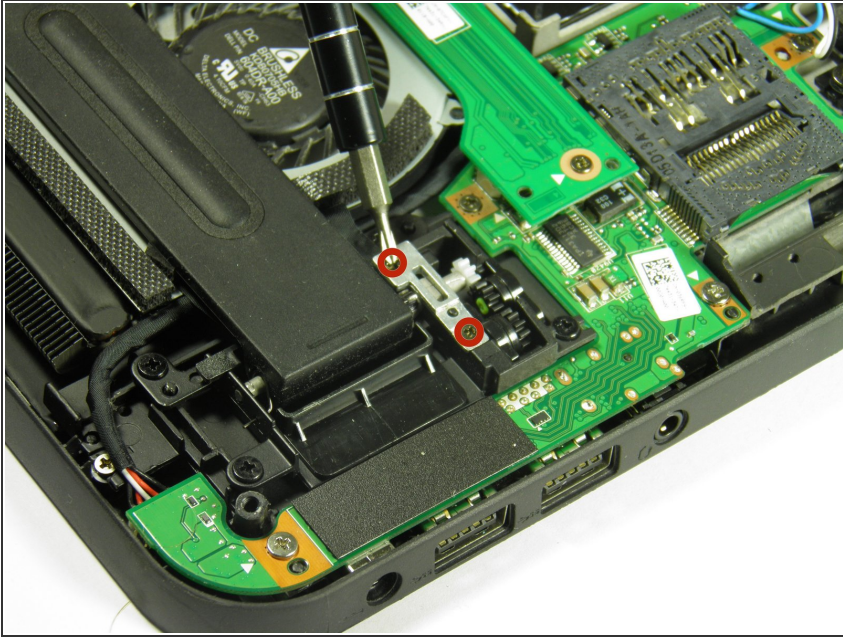


- Remove the two silver 3mm screws with a Phillips 00 screwdriver.

## Step 6

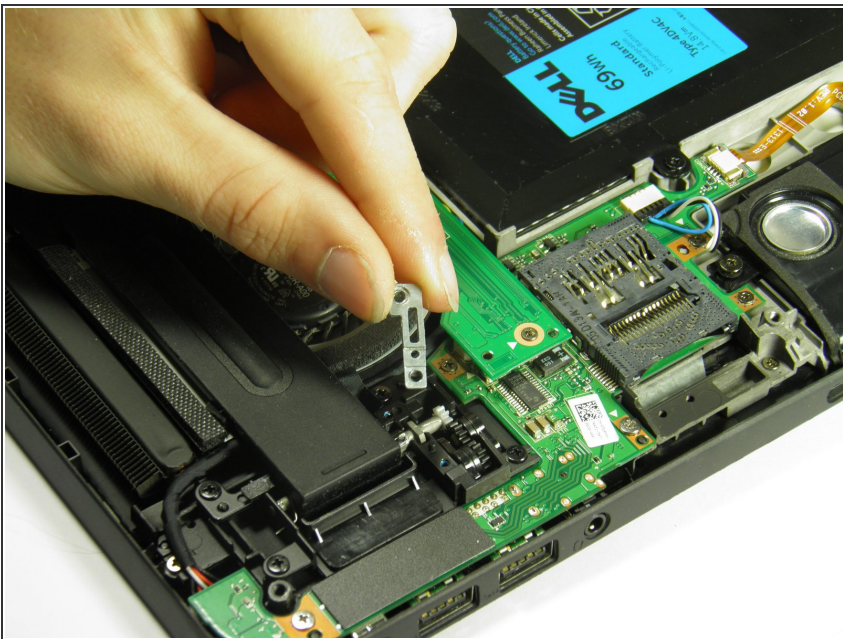

- Remove the silver metal piece holding the support feet down.

## Step 7

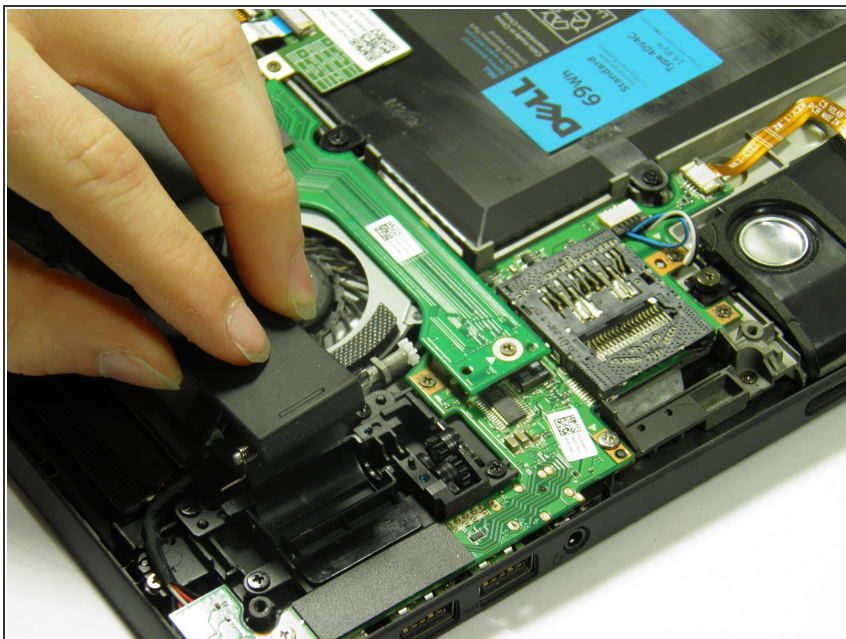

- Remove the support foot.
- ⓘ Follow these same steps for the remaining support foot.

To reassemble your device, follow these instructions in reverse order.