


Dell Inspiron 700m Battery Replacement

Battery removal and installation.


Written By: irlanda

Step 1 — Unplug The Computer

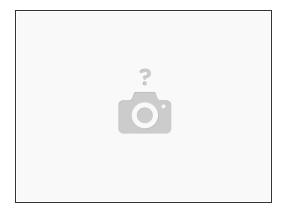


- ⚠ CAUTION: Before performing these procedures, disconnect the modem from the telephone wall
 jack. If you remove the battery while the system is powered on and power cable is connected to an
 electrical outlet and then reinstall the battery and disconnect the power cable within one and a half
 seconds, the system may shut down.
- (i) NOTICE: Do not replace the battery with the computer in standby mode.
- Ensure that the computer is turned off, set to the hibernate power management mode, or connected to an electrical outlet

Step 2 — Removing the battery

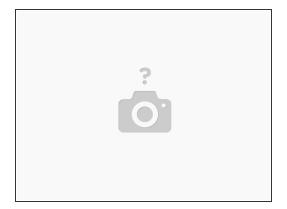

 Slide and hold the battery bay latch release on the bottom of the computer, and then remove the battery from the bay.

Step 3 — Installing the battery

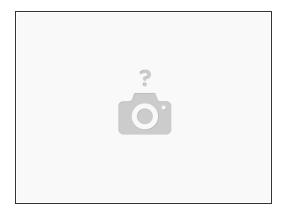

• To install the battery, slide the battery into the bay until the latch release clicks, it can be slid in easiest by sliding and holding the latch release while inserting the battery.

Good Job!

you replaced your laptop battery.