




# Dell Inspiron 700m Hinge Cover Replacement

Written By: irlandia




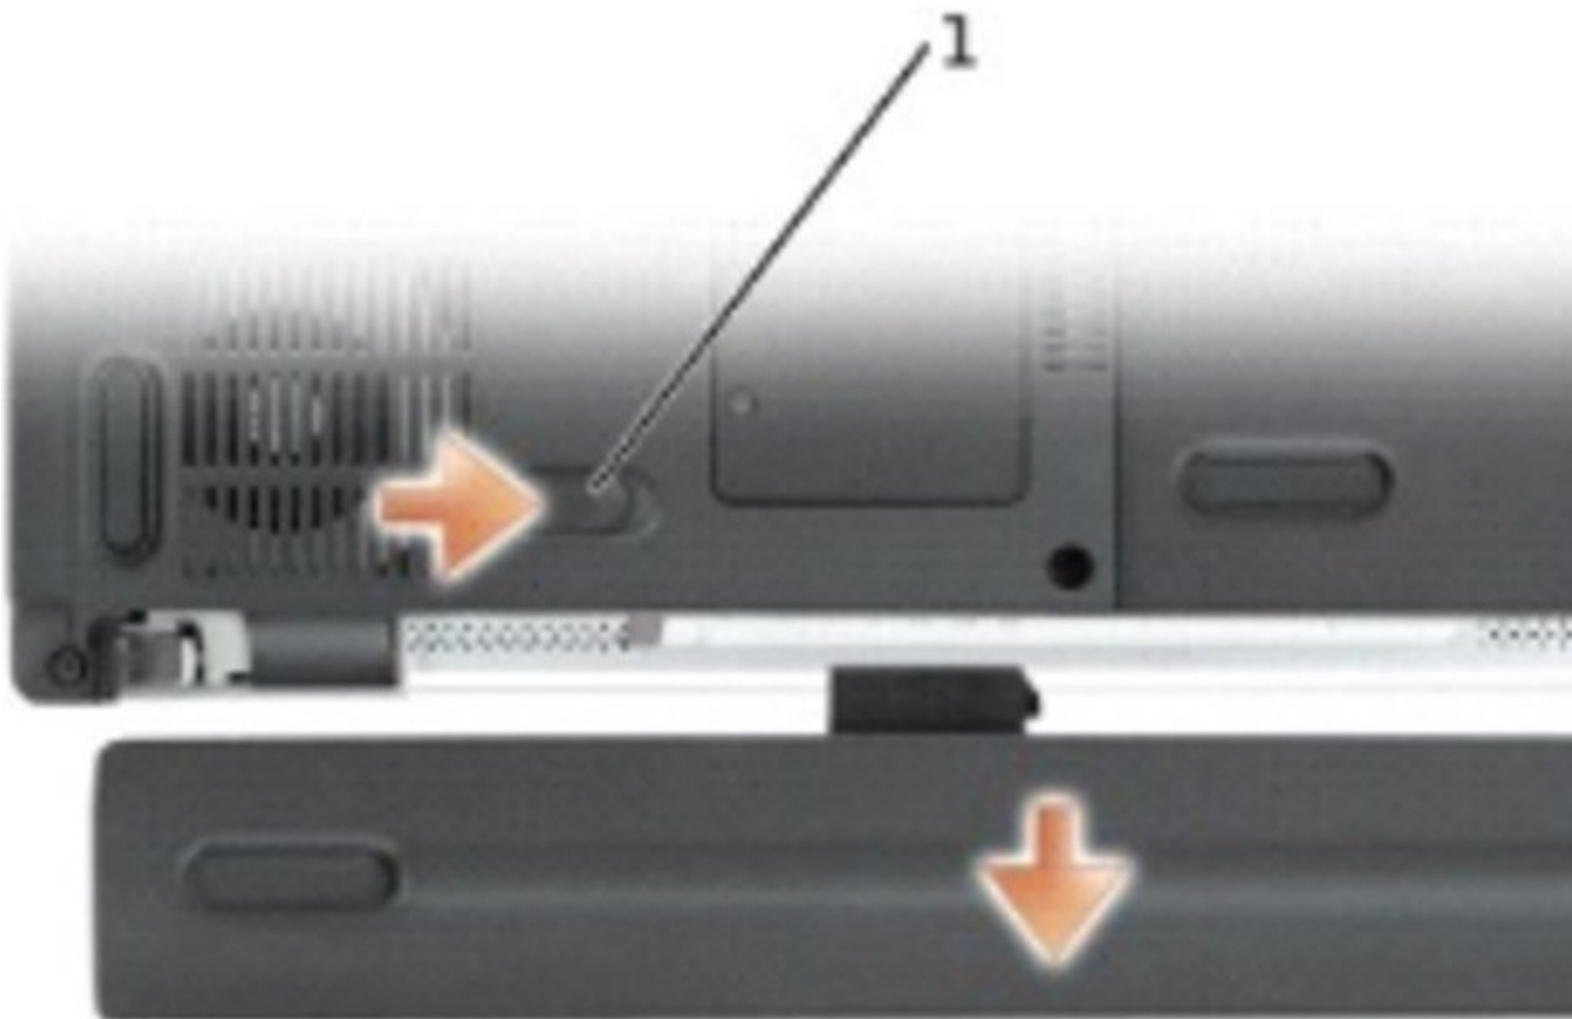

## TOOLS:

- [Spudger](#) (1)
-


## Step 1 — Removing battery

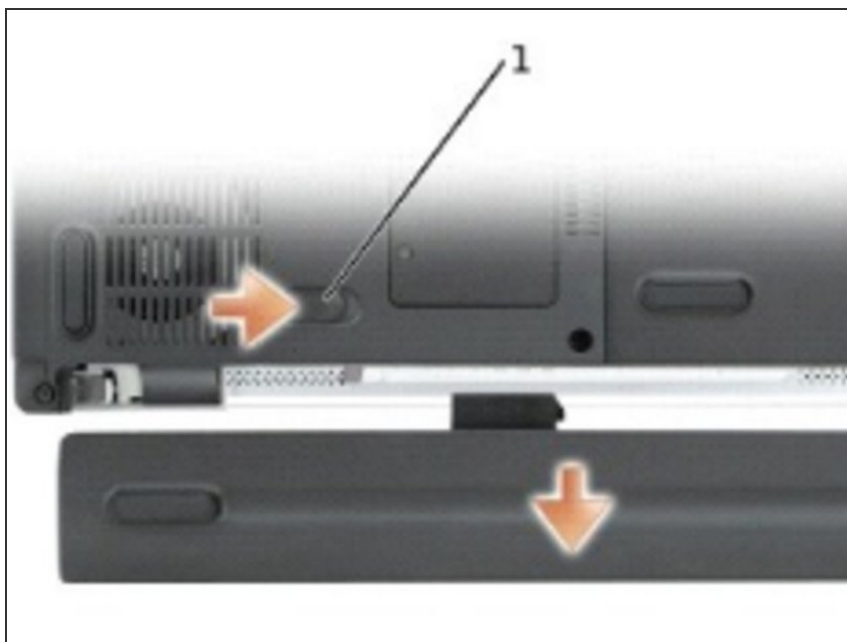

- Remove the battery by sliding and holding the battery release latch.


**⚠ Make sure your computer is turned off and unplugged.**

## Step 2 — Open display

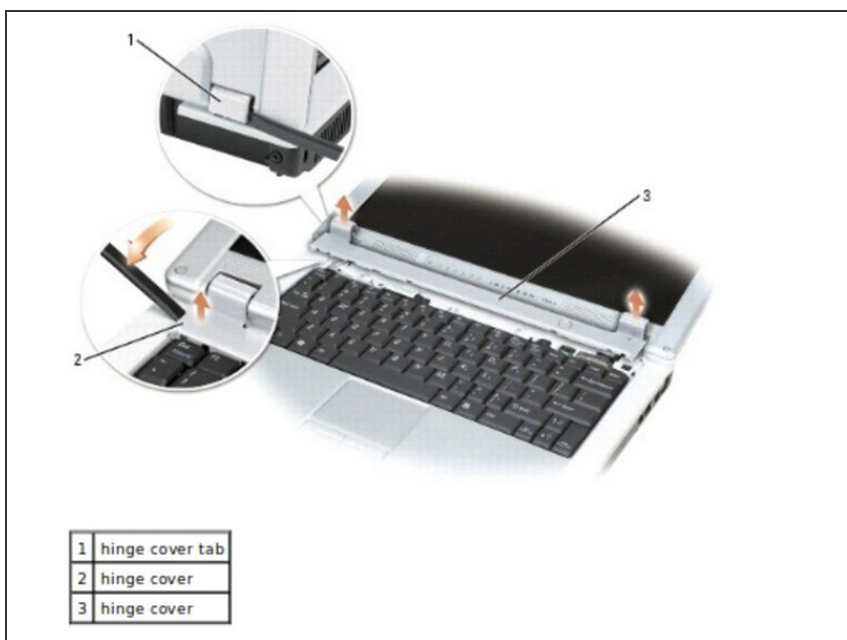

- Open the display 180 degrees.

## Step 3 — Removing Display

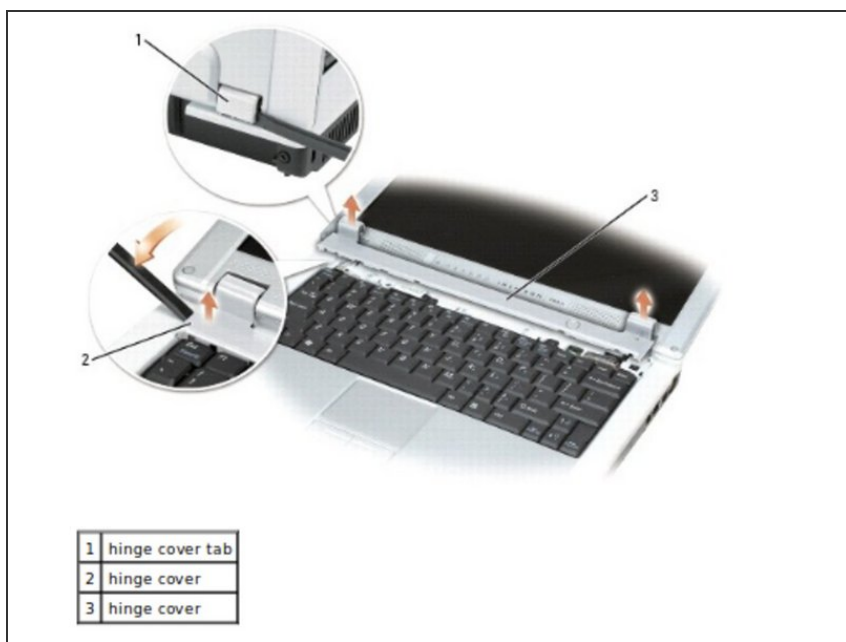

- Use a plastic flat screwdriver to slide the hinge caps away from the computer.

## Step 4 — Removing Display



- Detach the two display latches on the back of the computer.

## Step 5 — Removing Display



- Use plastic flat screwdriver to carefully pry up the latches on either side of the hinge cover

## Step 6 — Removing Display



- Carefully, lift the hinge cover from the main unit and remove it from the main unit.

To reassemble your device, follow these instructions in reverse order.