



Samsung Galaxy S7 Battery Connector Removal

Prereq-only guide to disconnect the battery in a Samsung Galaxy S7.

Written By: Adam O'Camb



INTRODUCTION


Prereq-only guide to disconnect the battery in a Samsung Galaxy S7.



TOOLS:

- [Spudger](#) (1)
-

Step 1 — Battery Connector

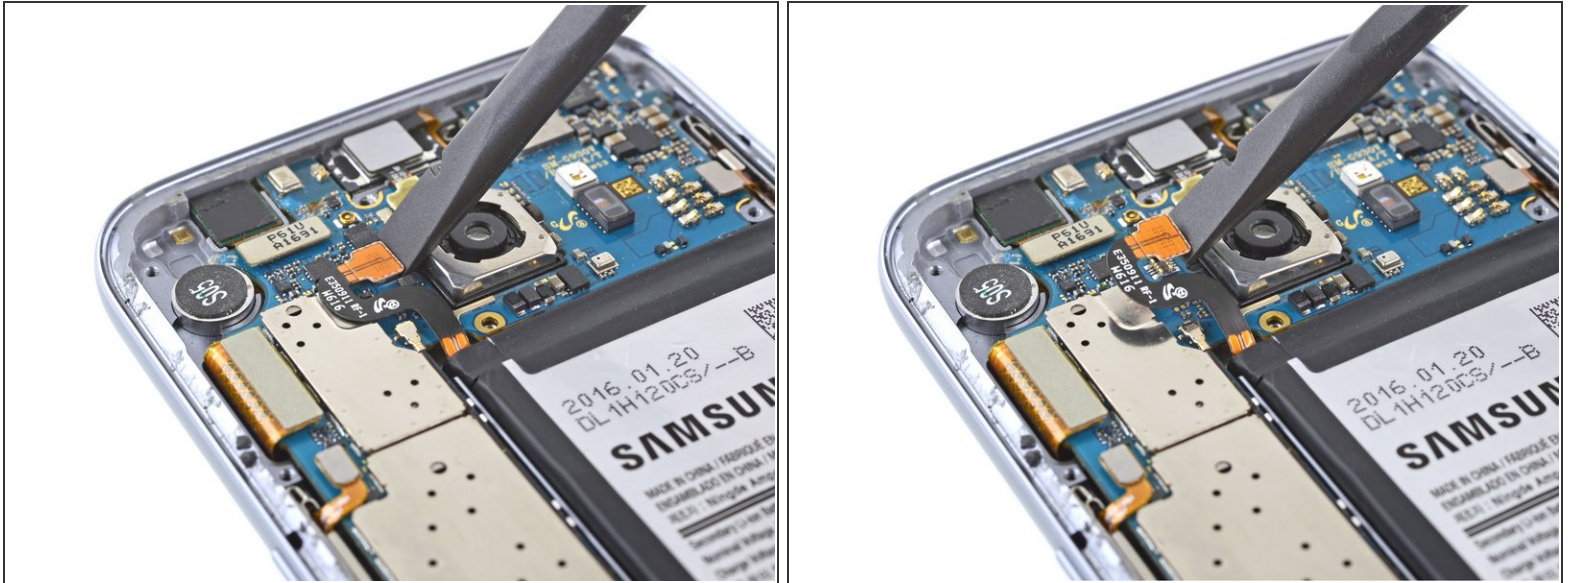

- Use the flat end of a spudger to disconnect the battery connector.

To reassemble your device, follow these instructions in reverse order.