




# Mad Catz Street Fighter IV FightPad RS-DP-LS Switch Replacement

Use this as a guide to remove or replace the...

Written By: Jefferson Hsu

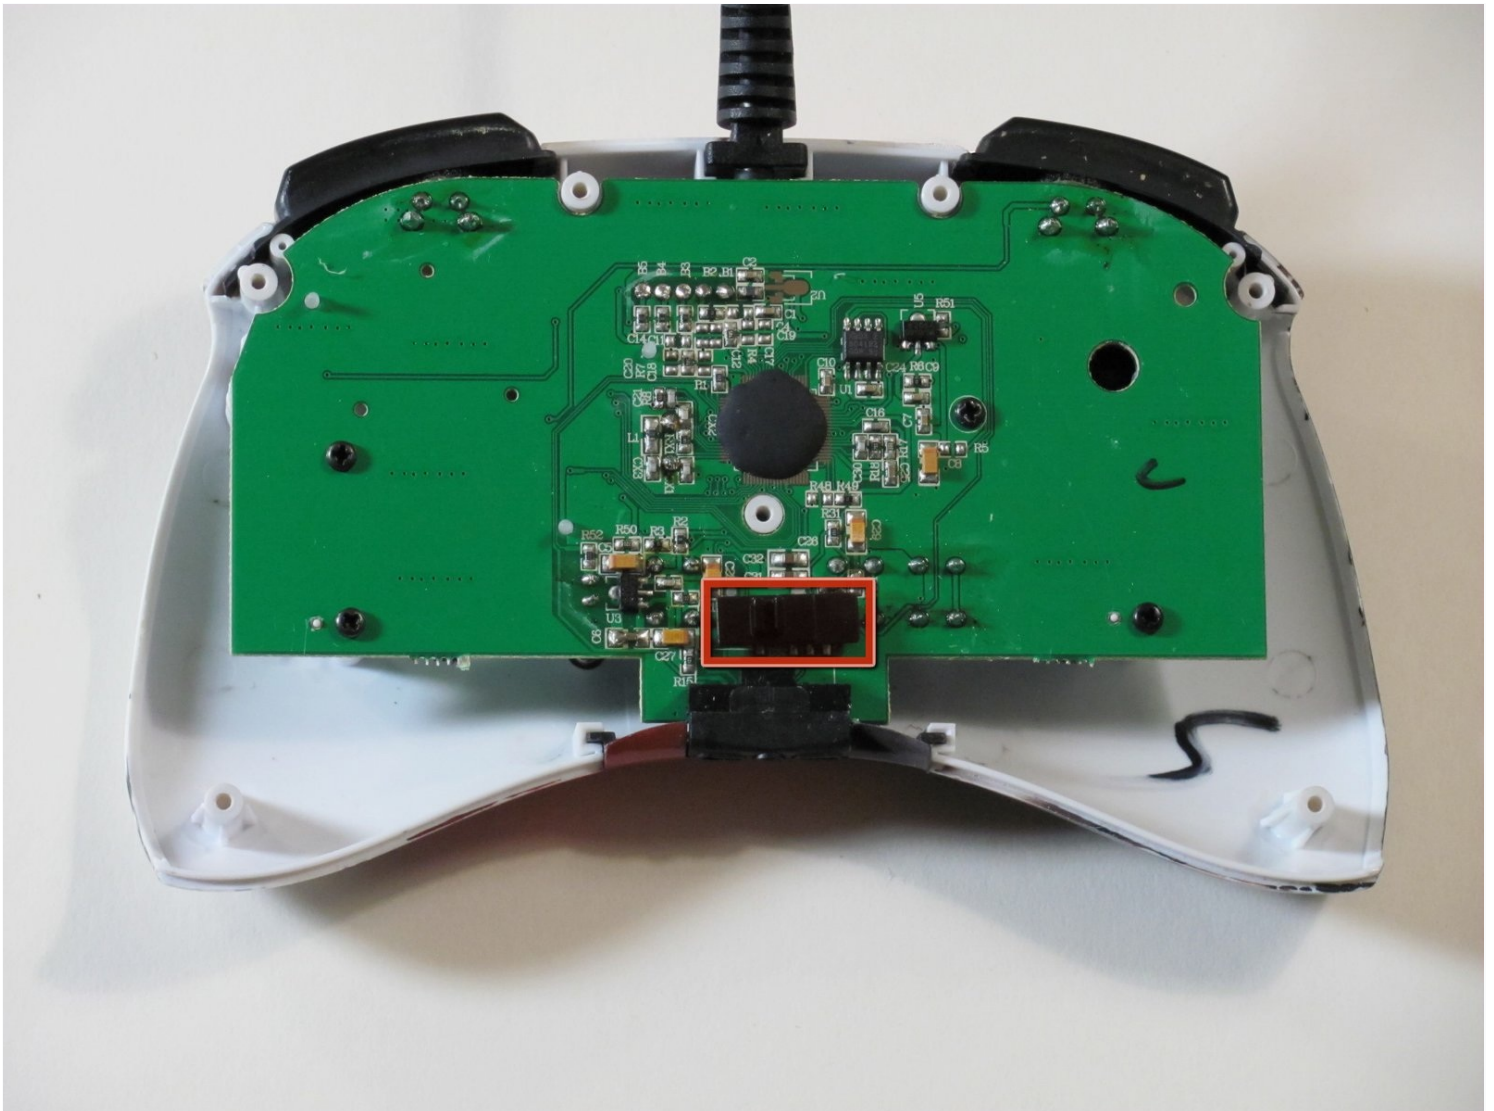

# INTRODUCTION

Use this as a guide to remove or replace the switch on the rear side of the FightPad.

## TOOLS:

[Tweezers](#) (1)

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

## Step 1 — Rear and Side Case




- Use [tweezers](#) to completely remove the sticker from the rear of controller.

## Step 2



- Find the seven 8.3 mm Phillips screws on the rear of the controller and remove them.



## Step 3

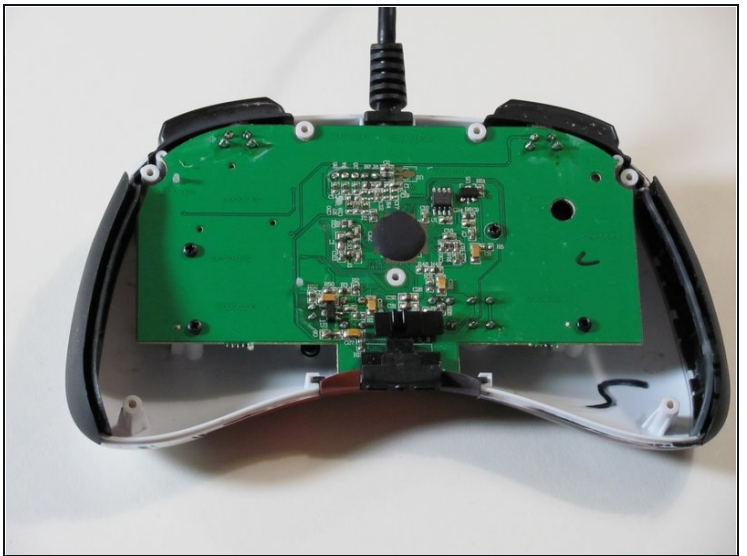

- Use a plastic opening tool to separate the rear and front casing by inserting it in-between the two cases.
- Use the plastic opening tool to pry the two cases apart.





## Step 4

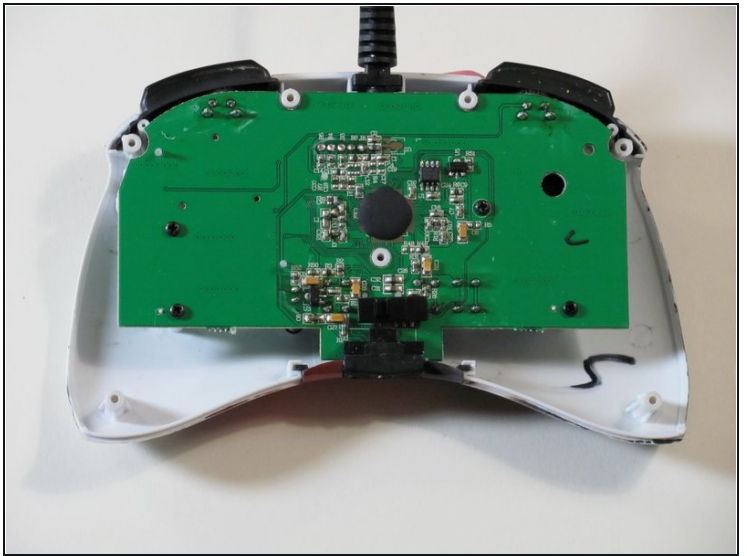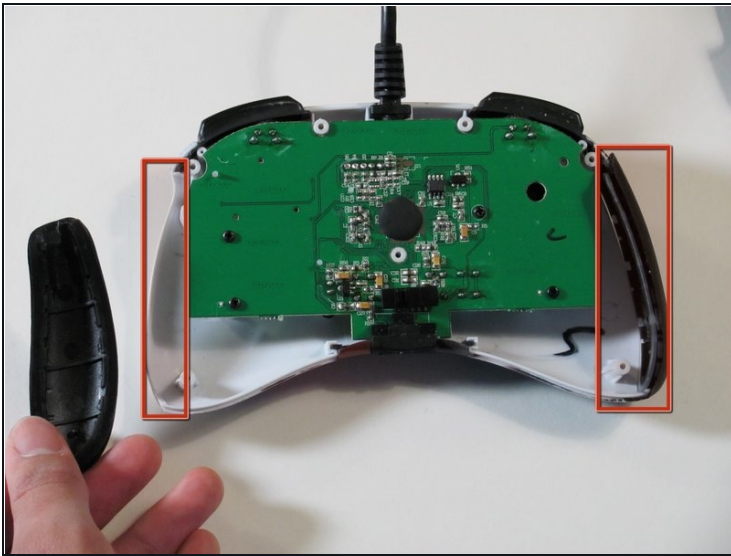

- Remove the two rubber side grips.

## Step 5 — RS-DP-LS Switch

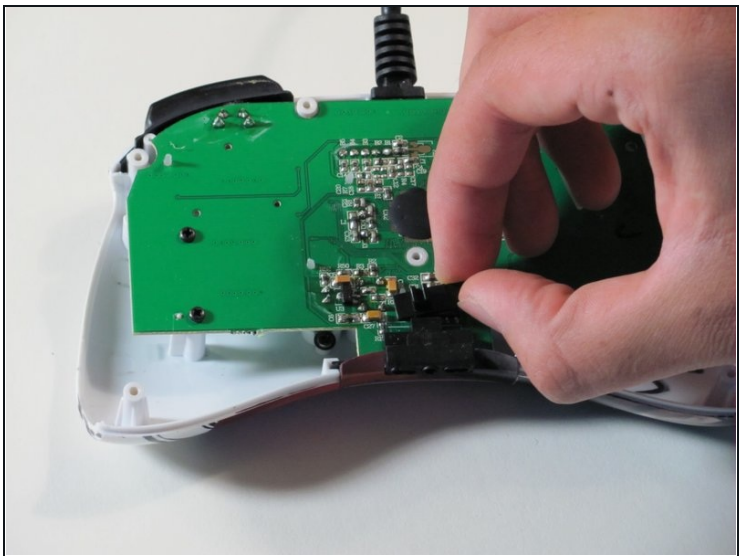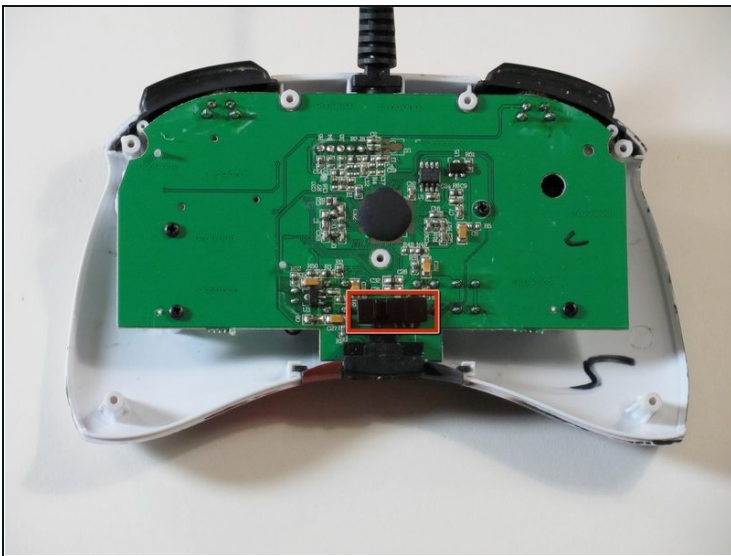

- Locate RS-DP-LS switch.
- Pull upwards on the switch to remove it.

To reassemble your device, follow these instructions in reverse order.