


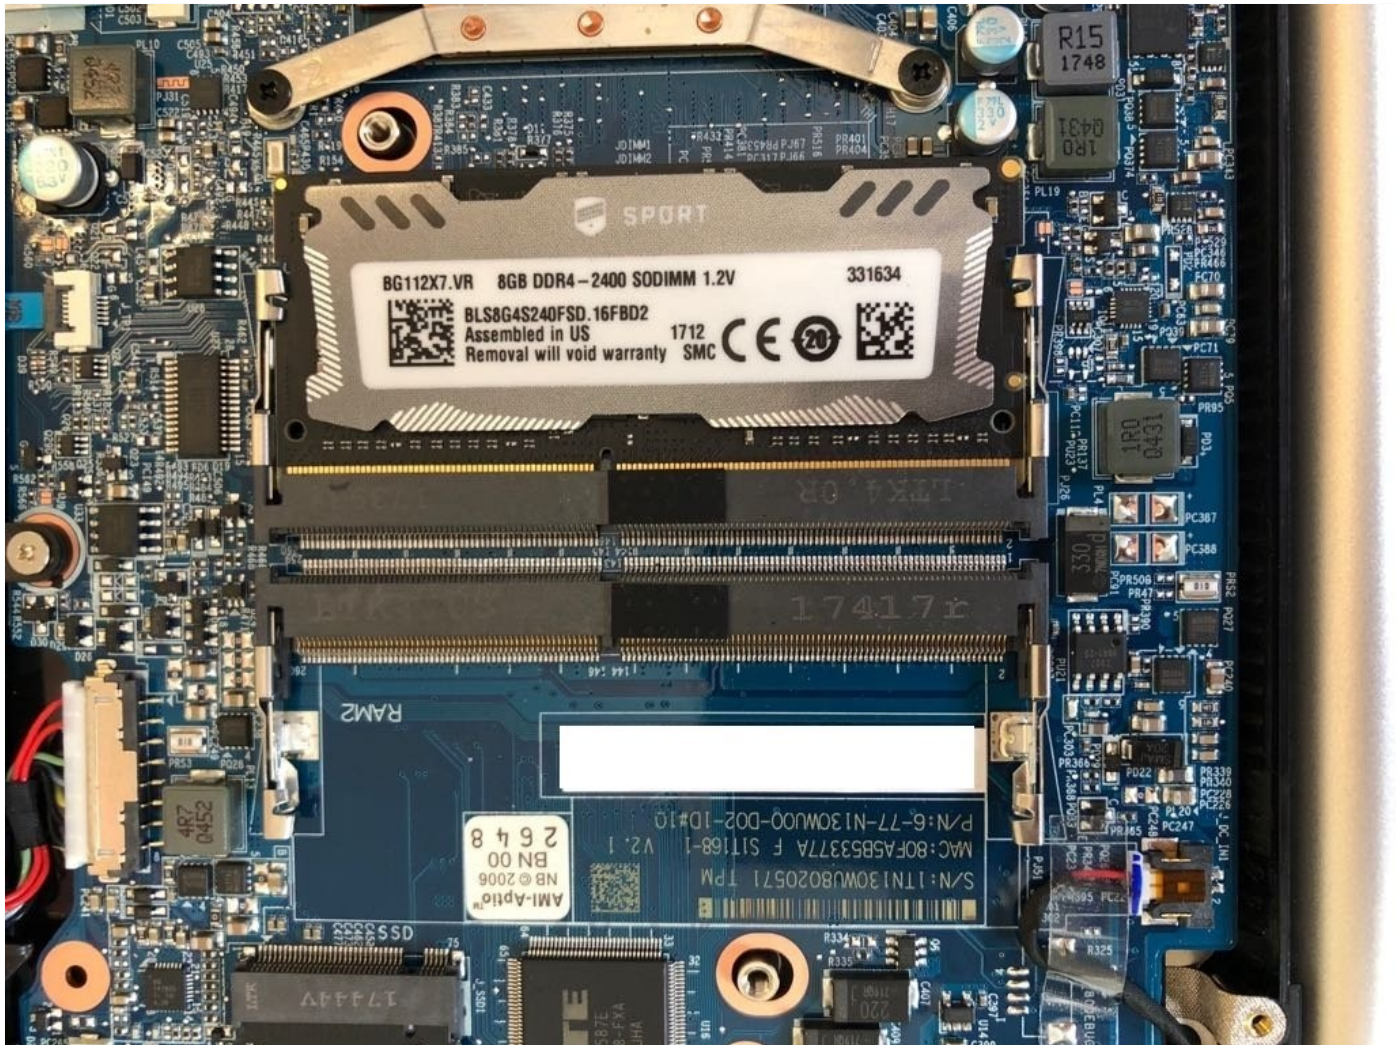

# why! N131WU/BU/ZU RAM Replacement


Written By: Felice Suglia



## PARTS:

Pièces pour why! N131BU CH (1)  
Pièces pour why! N131BU EU (1)  
Pièces pour why! N131WU CH (1)  
Pièces pour why! N131WU EU (1)  
Pièces pour why! N131ZU CH (1)  
Pièces pour why! N131ZU EU (1)

### Step 1 — Remove the Screws

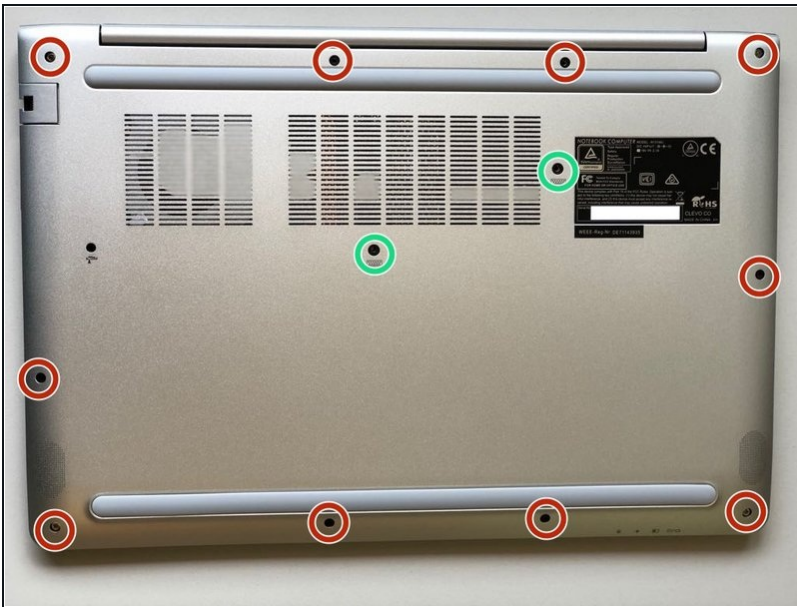

- Remove the case screws (red) and the keyboard screws (green).
- ⓘ Be sure not to lose these screws. You will need them to reassemble your laptop.




## Step 2 — Remove the Keyboard




- Using the hole provided under the case (see picture), push the keyboard out using a thin screwdriver or some other solid object.
- Hold onto the keyboard as you push the keyboard so as not to damage the two cables still attached.

## Step 3 — Remove Keyboard Connections

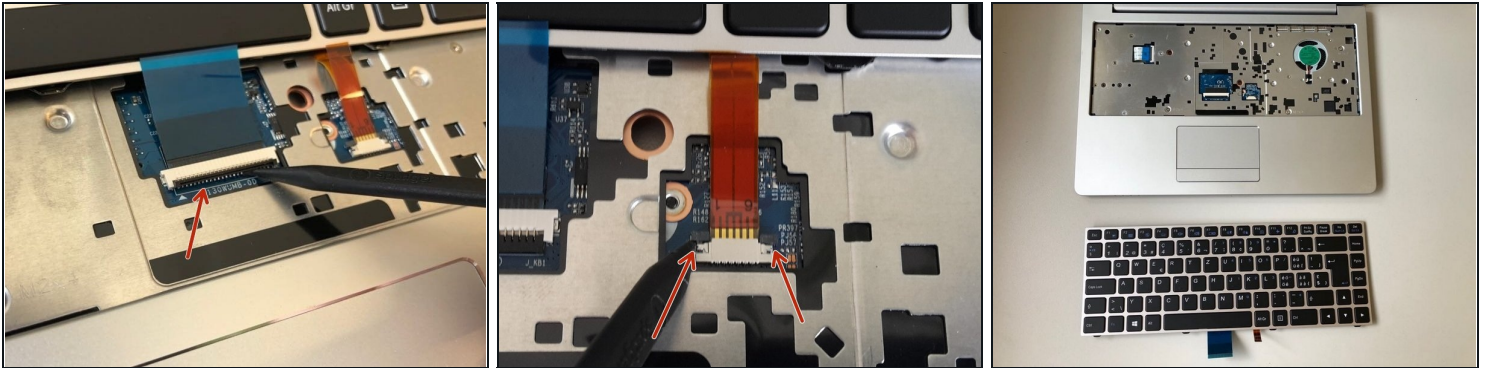


- (Blue Cable) Push up on the thin black portion on the connector and gently pull out the blue ribbon cable until it comes out.
- (Orange Cable) Remove the orange cable by sliding the gray part of the connector towards the screen, then gently pull on the ribbon cable.

## Step 4 — Remove the upper screws

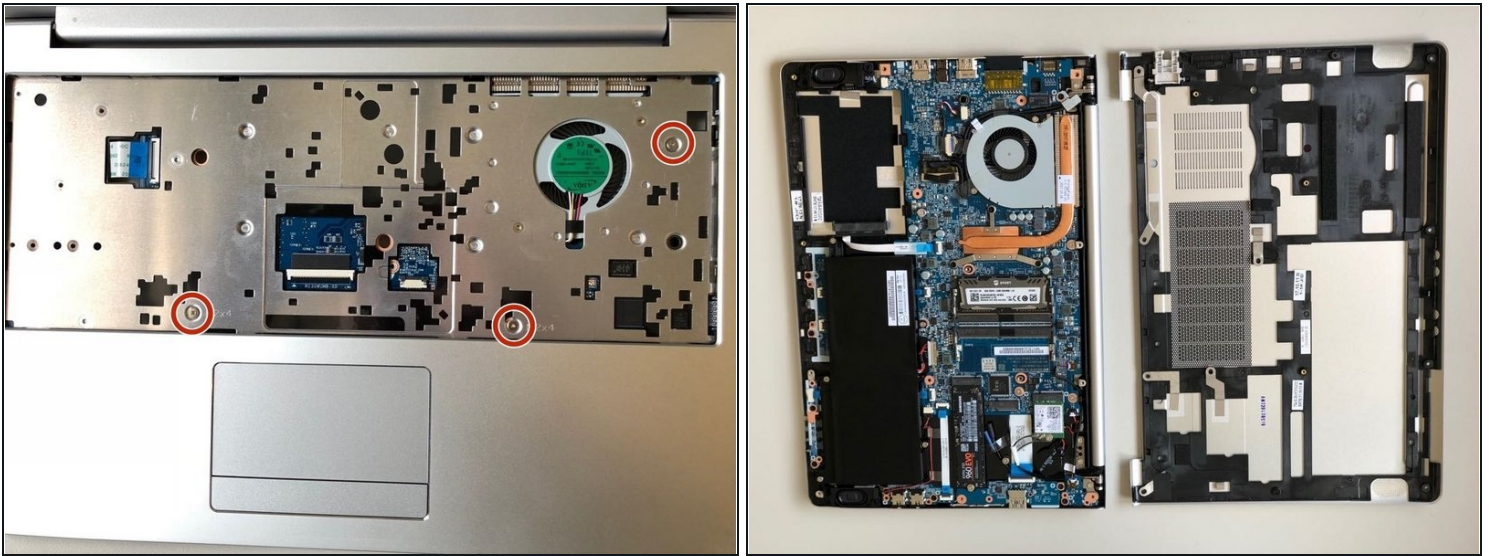

- Unscrew the three screws that were under the keyboard. Be sure to hold onto these.
- After these are removed, you can now remove the lower part of the case from the rest of the computer.

## Step 5 — RAM (Memory)

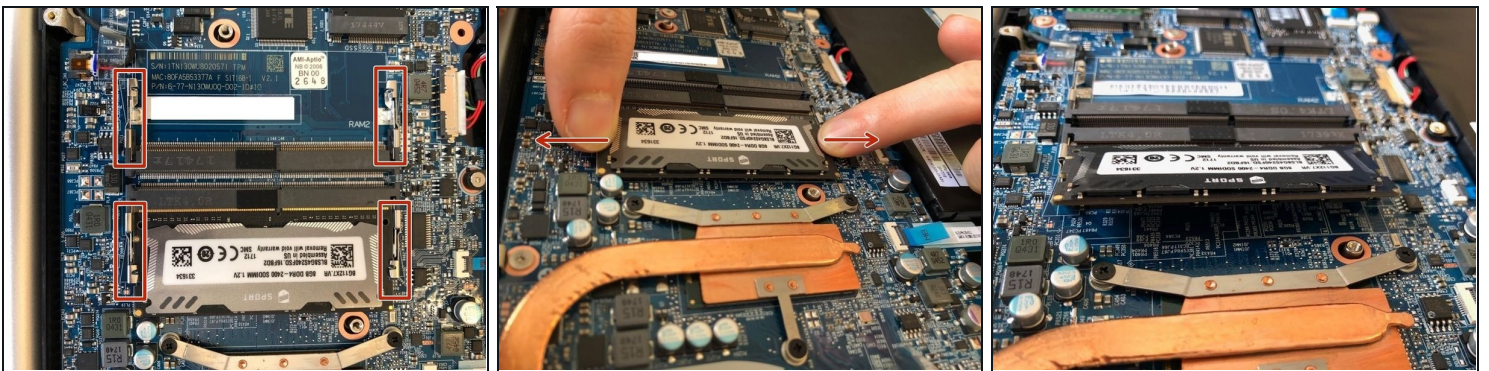

- Gently pull outwards on the clips to free the RAM stick.
- Remove the RAM Stick from its slot.

To reassemble your device, follow the instructions in reverse order.