



Mpow MPBH063 Battery Replacement

Use this guide to replace a dead or malfunctioning MPOW MPBH063 speaker battery.

Written By: Lianna Cook



INTRODUCTION

If you have identified an issue with your speaker's battery and need to replace it, use this guide to locate the battery. In order to locate, remove, and replace the battery of your MPOW Armor speaker, you will need a T6 and JIS #00 head screwdriver.



TOOLS:

- [Metal Spudger](#) (1)
- [Spudger](#) (1)
- [1.5mm Hex Screwdriver](#) (1)
- [Precision Tweezers Set](#) (1)
- [JIS #00 Screwdriver](#) (1)



PARTS:

- [iFixit Adhesive Remover \(for Battery, Screen, and Glass Adhesive\)](#) (1)

Step 1 — Battery




- Remove four Hex 10 mm screws from the outer speaker cover displaying the speaker's serial number indicated by the red circle.
- Carefully insert the spudger tool into one of the holes in the cover to pry open the outer cover of the speaker.

Step 2




- Remove four JIS J00 12mm screws.
- Remove the inner speaker cover with the precision tweezers and a spudger if needed.

Step 3

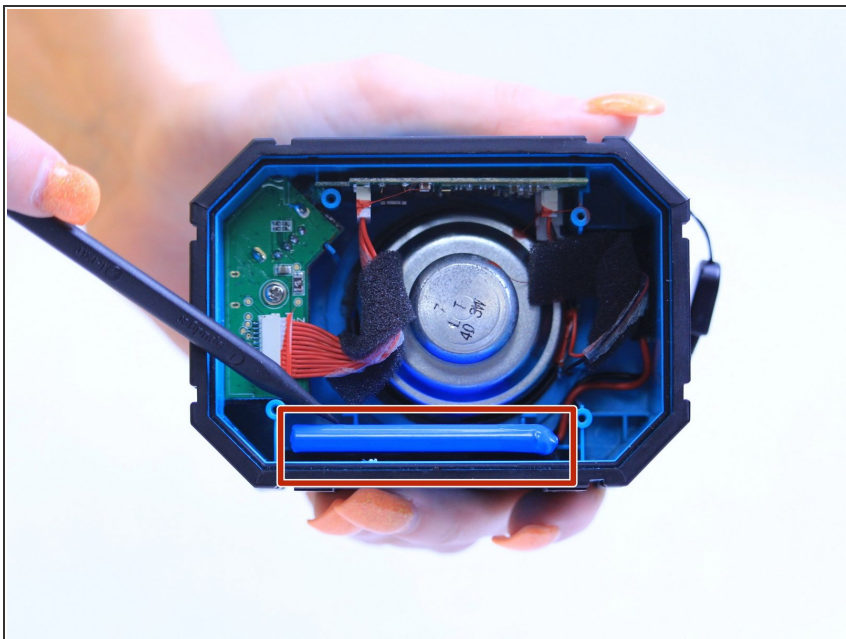

- Carefully detach the battery from the adhesive securing the battery to the inner wall of the speaker.
- Use the iFixit Adhesive Remover as directed to remove the battery from the inner wall of the speaker.
- Detach the battery from the inner wall without detaching the wires connecting the battery to the motherboard.

Step 4

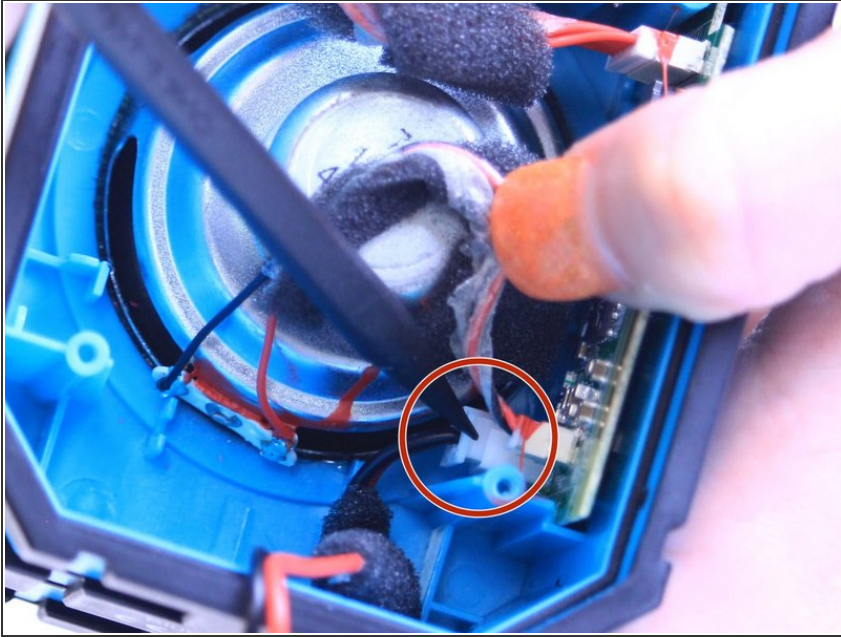

- Hold down the small lever on the white, plastic plug attached to the battery wires, and detach the wires from the white, plastic plug outlet on the motherboard.

To insert a new replacement battery and reassemble your device, follow these instructions in reverse order.