




Mpow MPBH063 External Speaker Cover Replacement

Use this guide to replace a damaged MPOW MPBH063 external speaker cover.

Written By: Bailey Bridges

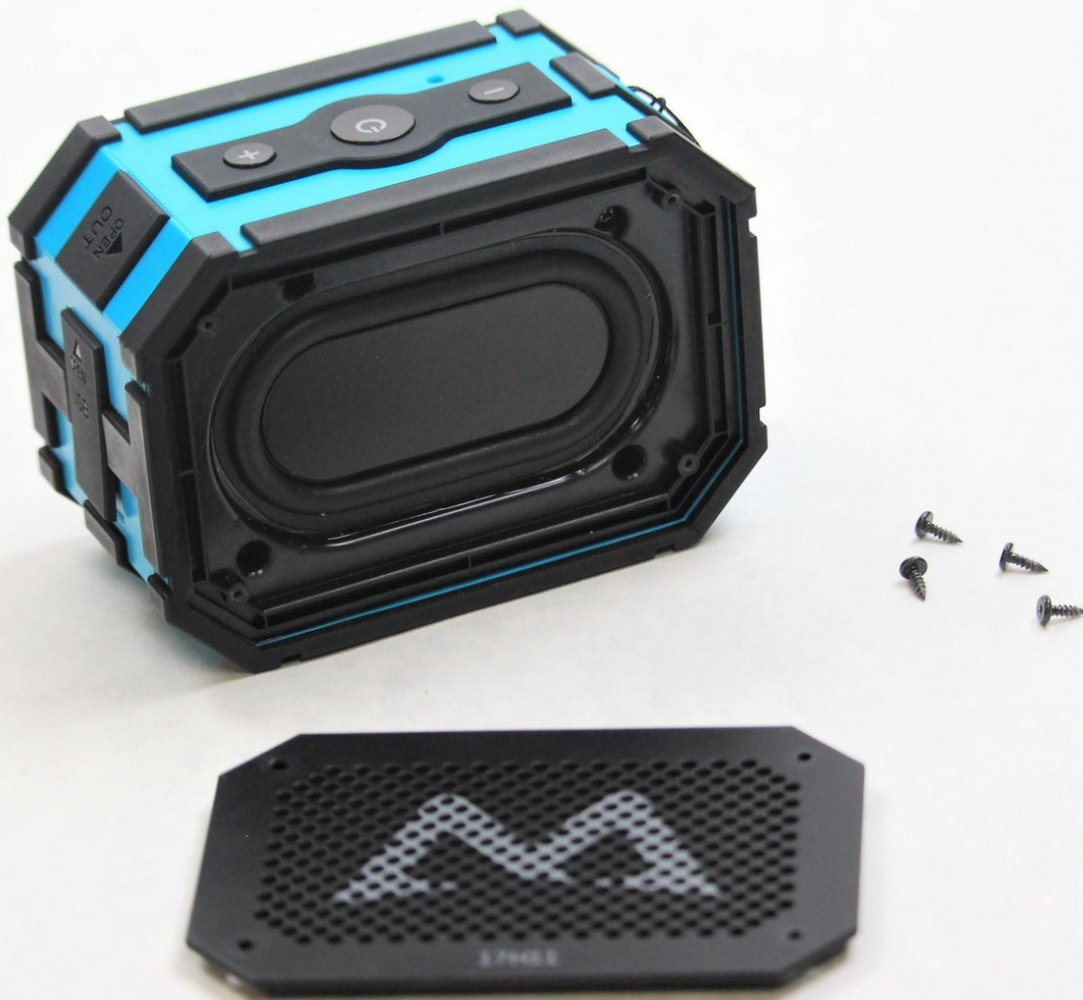


INTRODUCTION

If you have identified an issue with your speaker's external cover and need to replace it, use this guide to help you replace the speaker cover. In order to remove and replace the external cover of your MPOW Armor speaker, you will need a T6 and JIS #00 head screwdriver.

TOOLS:

- [Metal Spudger](#) (1)
 - [1.5mm Hex Screwdriver](#) (1)
 - [JIS #00 Screwdriver](#) (1)
-

Step 1 — External Speaker Cover

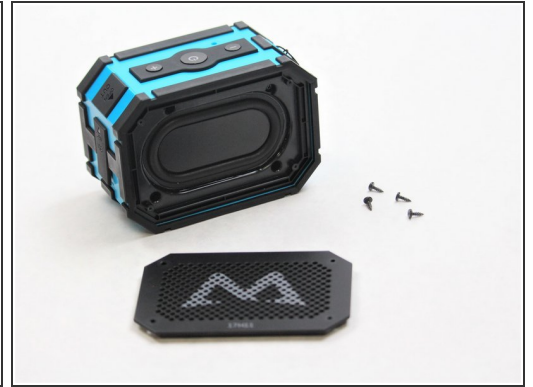

- Remove four Hex 10 mm screws from the outer speaker cover.
- Carefully insert the spudger tool into one of the holes in the cover to pry open the outer cover of the speaker.

To reassemble your device, follow these instructions in reverse order.