




Toshiba Satellite C55-B5302 Fan Replacement

This guide will help you replace the fan on the Toshiba Satellite C55-B5302 laptop.

Written By: Jacob Mayes

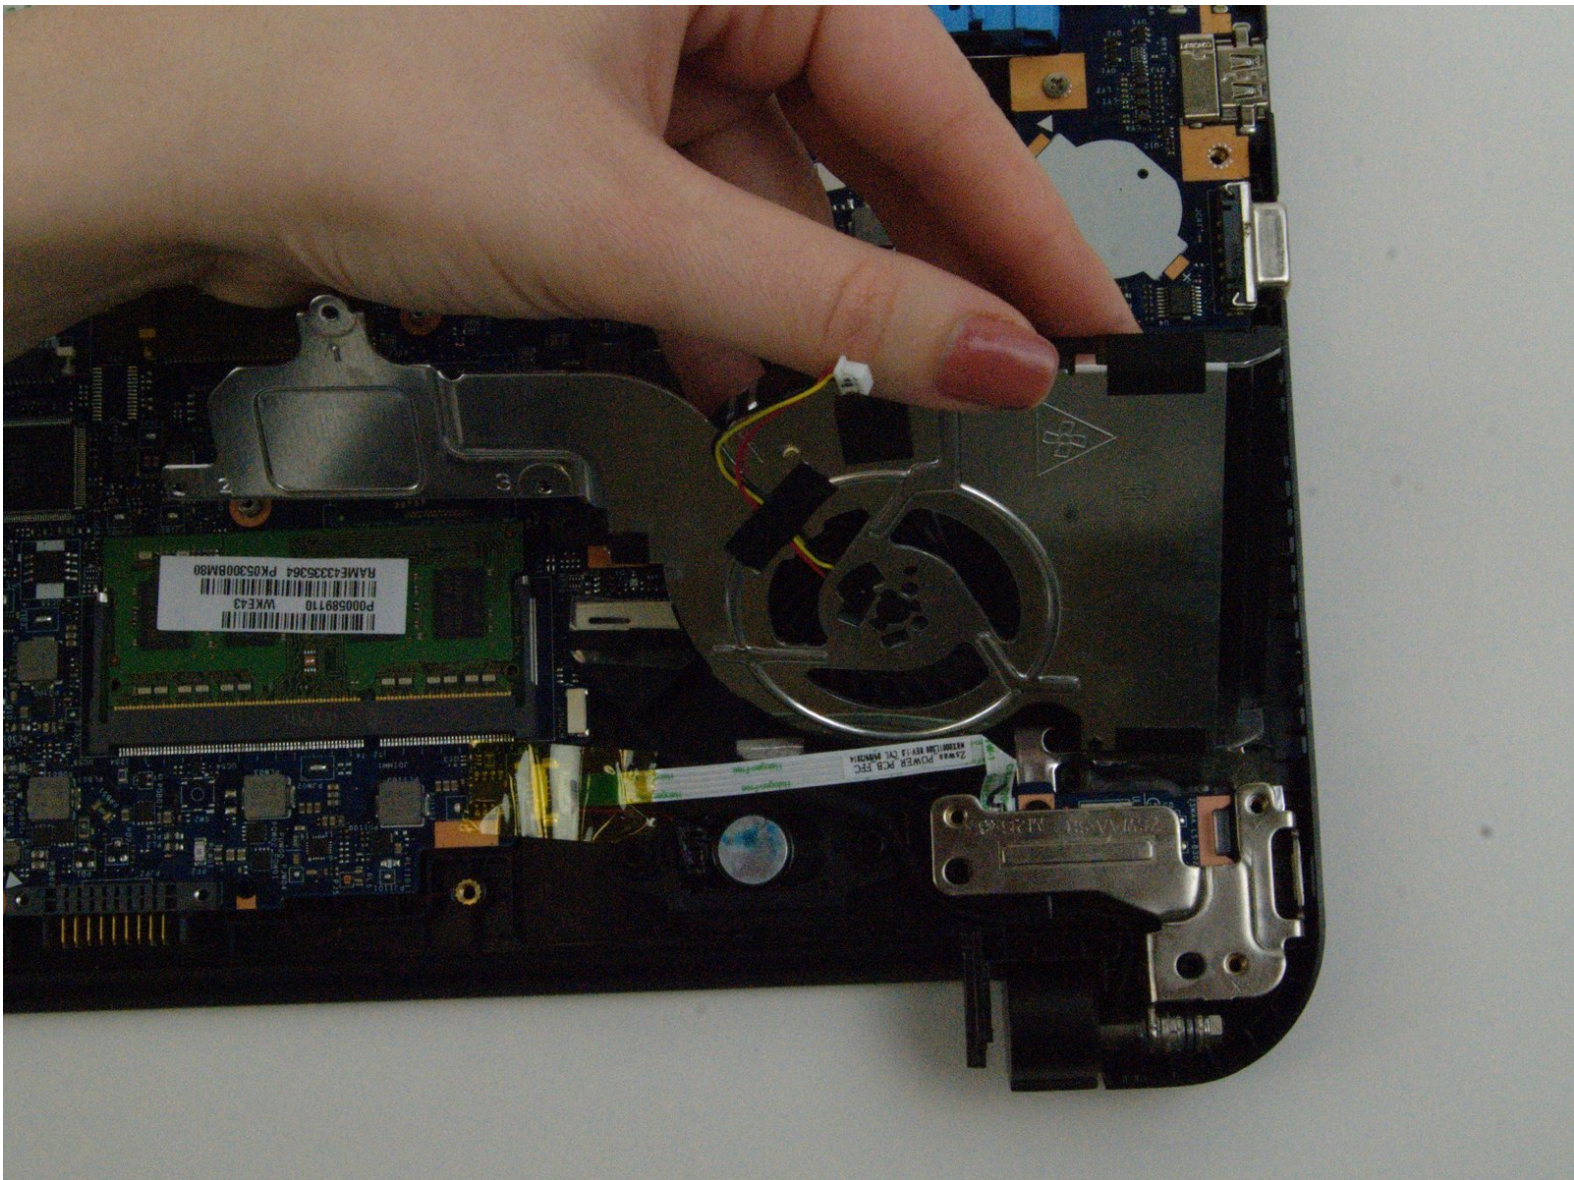

INTRODUCTION

Use this guide to remove the fan from your Toshiba Satellite C55-B5302 laptop. You will need a #0 and #00 Phillips screwdriver and a plastic pry tool. Make sure your laptop is unplugged and cool before you start. The fan is easy to remove and should take 10 to 20 minutes.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Flip laptop upside down so you can see the screws.

Step 2



- Using the Phillips #0 screwdriver, remove the two 7 mm screws from the back casing.

Step 3




- Pull the battery from the back of the laptop for removal from the laptop.

Step 4 — Fan






- Remove the remaining 7 mm screws on the back panel of the laptop with a Phillips #0 screwdriver.
 - Use the plastic opening tool to pry up a corner of the back panel and continue to pop the back panel off.
- i** Expect to hear popping as you pull the back panel off.

Step 5

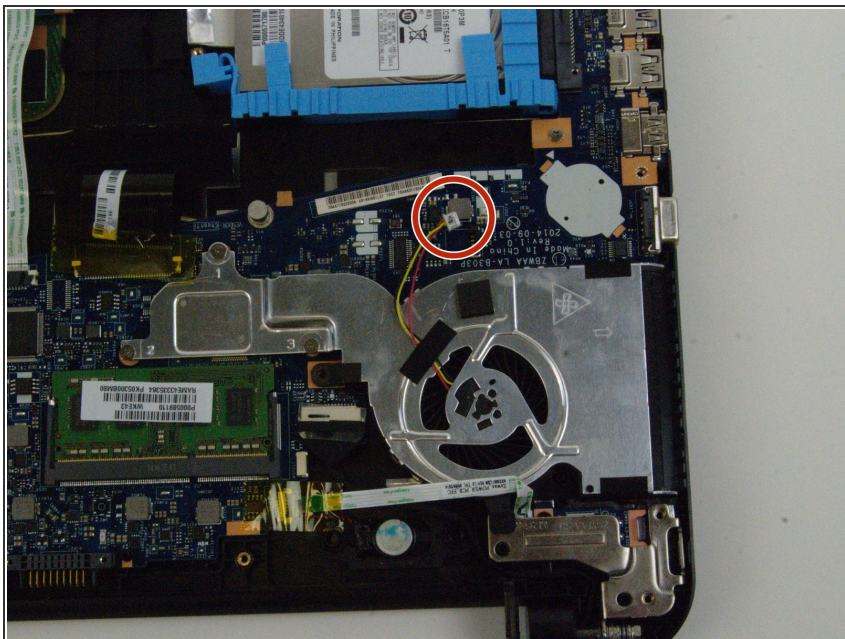


- Disconnect the fan wire from the motherboard.

Step 6

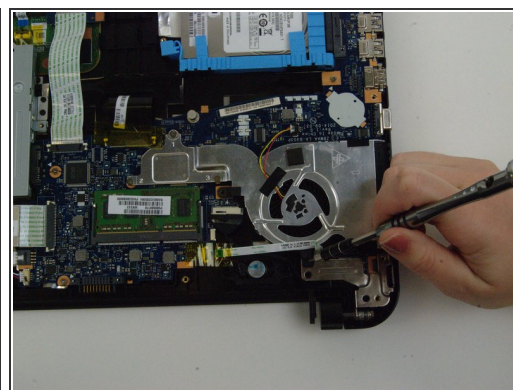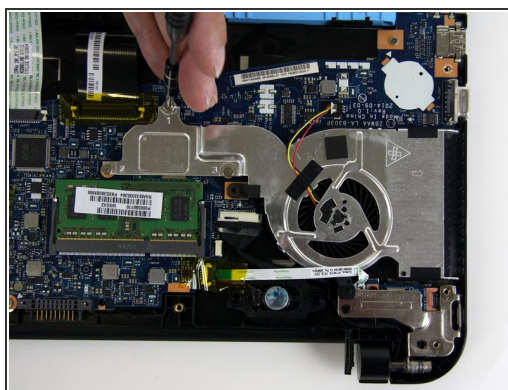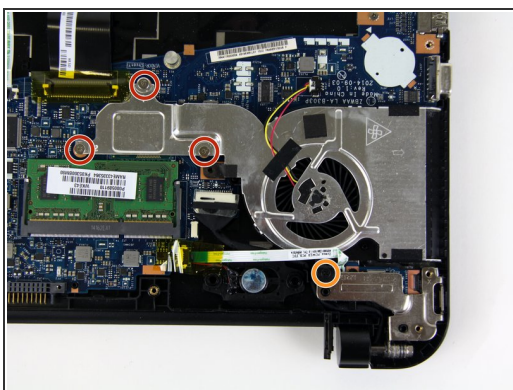

- Remove the three 3 mm screws with a Phillips #00 screwdriver.
- Remove the 5 mm screw with a Phillips #0 screwdriver.

Step 7

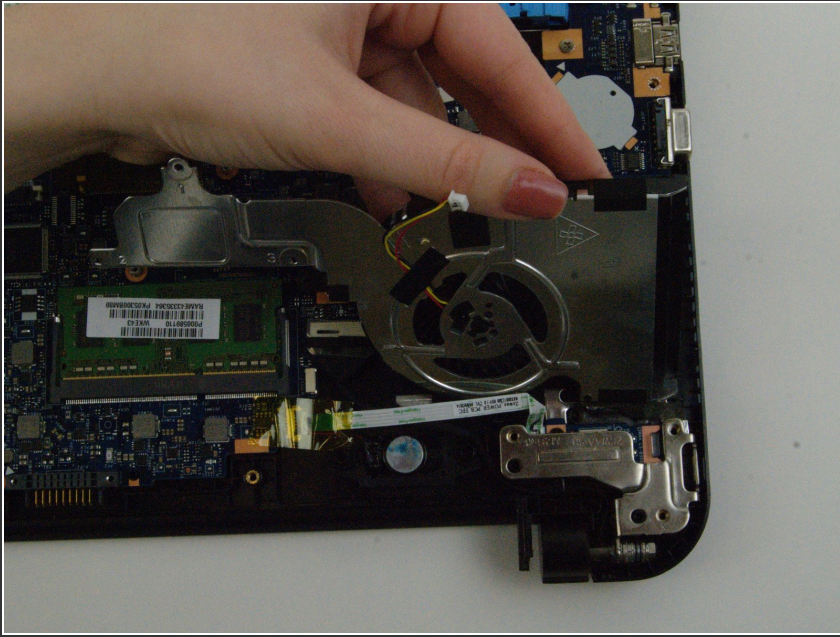

- You can now lift the fan out of the laptop.

To reassemble your device, follow these instructions in reverse order.