


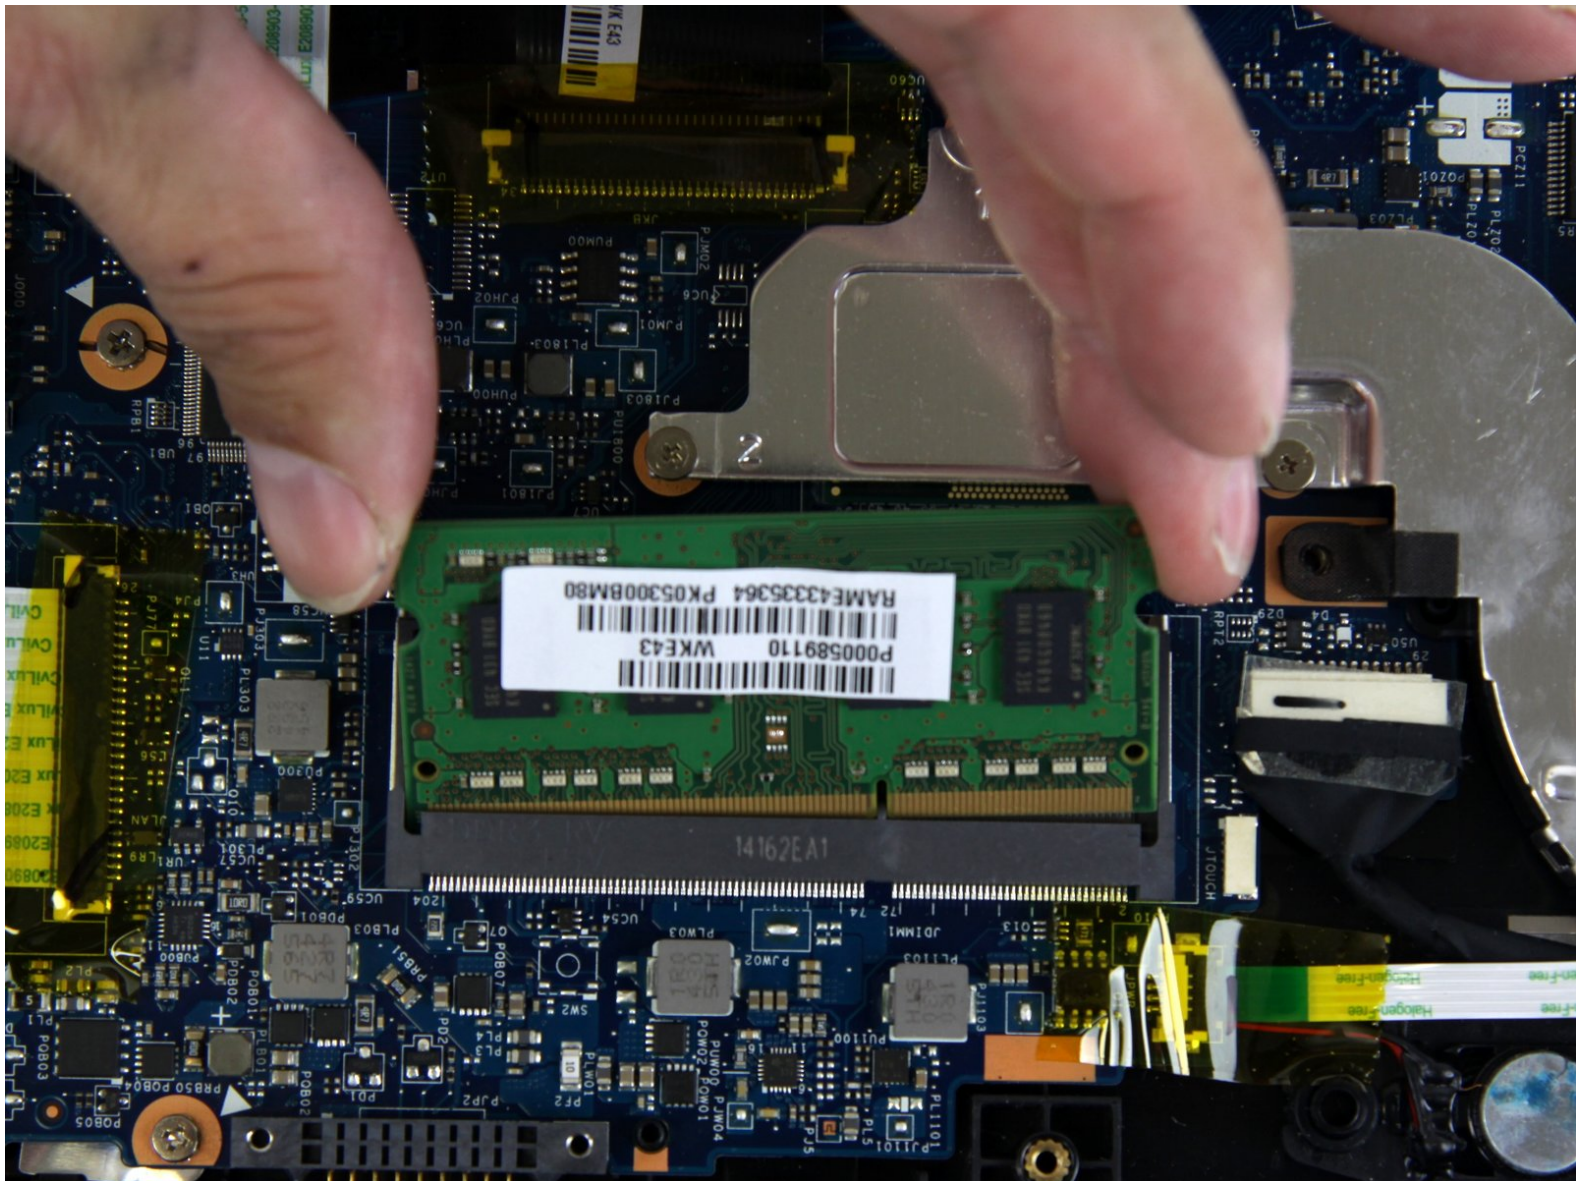

# Toshiba Satellite C55-B5302 laptop Memory chip (RAM) Replacement

This guide will help you replace the memory chip on the Toshiba Satellite C55-B5302 laptop.

Written By: Jessie



---

## INTRODUCTION

Use this guide to remove the memory chip from your Toshiba Satellite C55-B5302 laptop. You will need a Phillips #0 screwdriver and a plastic opening tool. Make sure your laptop is unplugged and cool before you start. The memory chip is easy to remove and should take 10 to 15 minutes.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Flip laptop upside down so you can see the screws.

## Step 2



- Using the Phillips #0 screwdriver, remove the two 7 mm screws from the back casing.



### Step 3





- Pull the battery from the back of the laptop for removal from the laptop.

### Step 4 — Memory chip (RAM)



- Remove the remaining thirteen 7 mm screws on the back panel of the laptop with a Phillips #0 screwdriver.
- Use the plastic opening tool to pry up a corner of the back panel and continue to pop the back panel off.
- ⓘ Expect to hear popping as you pull the back panel off.

## Step 5

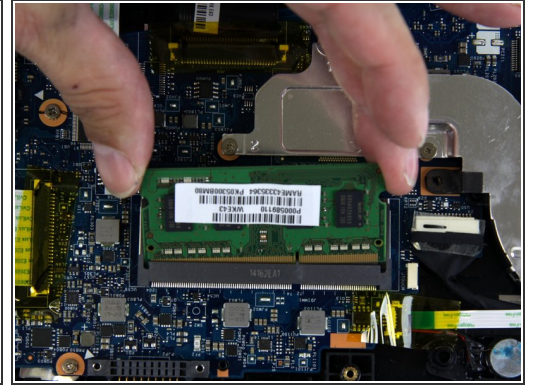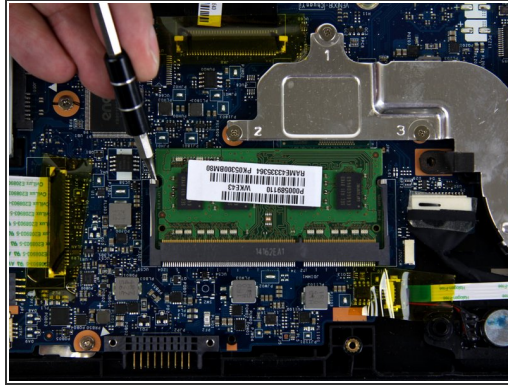

- Push down on the two clips holding the RAM chip in place.
- Pull the RAM chip up slightly and out away from the connection to remove.

To reassemble your device, follow these instructions in reverse order.