



Fujitsu LifeBook U810 Battery Replacement

This guide shows the user how to replace the battery in the Fujitsu Lifebook U810. Replacing the battery can improve the lifespan of the computer.

Written By: Emmy Hughes



INTRODUCTION

Replacing the battery for the Fujitsu Lifebook U810 is a simple process that does not require a toolkit of any kind. This guide helps repair a short battery life for the device and can improve the overall lifespan. You can find a new battery online by searching the model number and corresponding part for the U810 model.

Step 1 — Battery




- Flip the Lifebook so it's underside is showing and you see a small latch with the lock symbol on the right side.

Step 2



- Push the latch to the right to release the battery.

Step 3

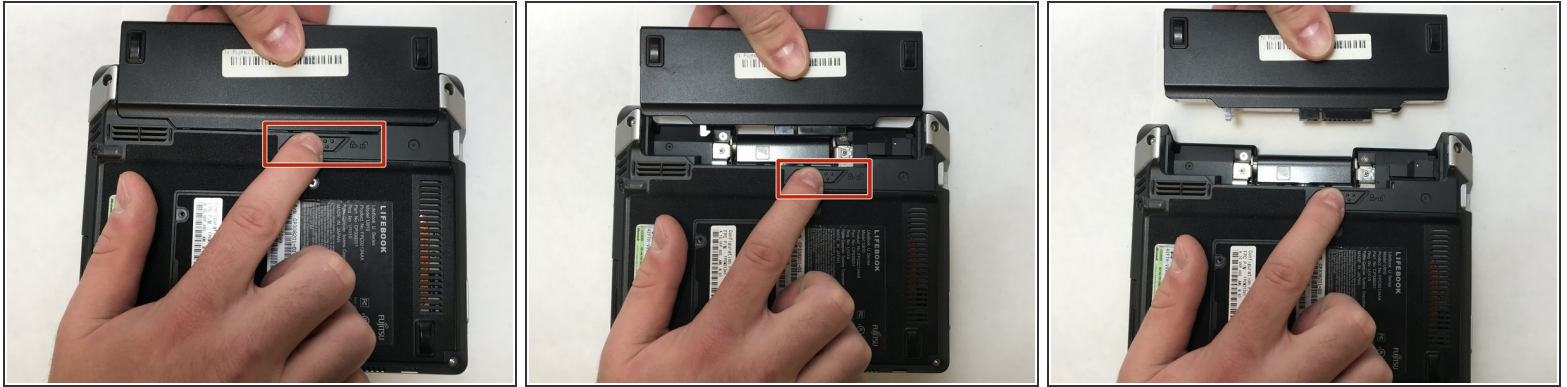

- Hold the latch in the unlocked position and with your other hand pull the battery straight out from the back of the device.

To reassemble your device, follow these instructions in reverse order.