




HP Stream x360 11-p015wm Screen Replacement

This guide will replace the Screen in the HP Stream 11 x360 -p015wm laptop.

Written By: DaisyHaskell



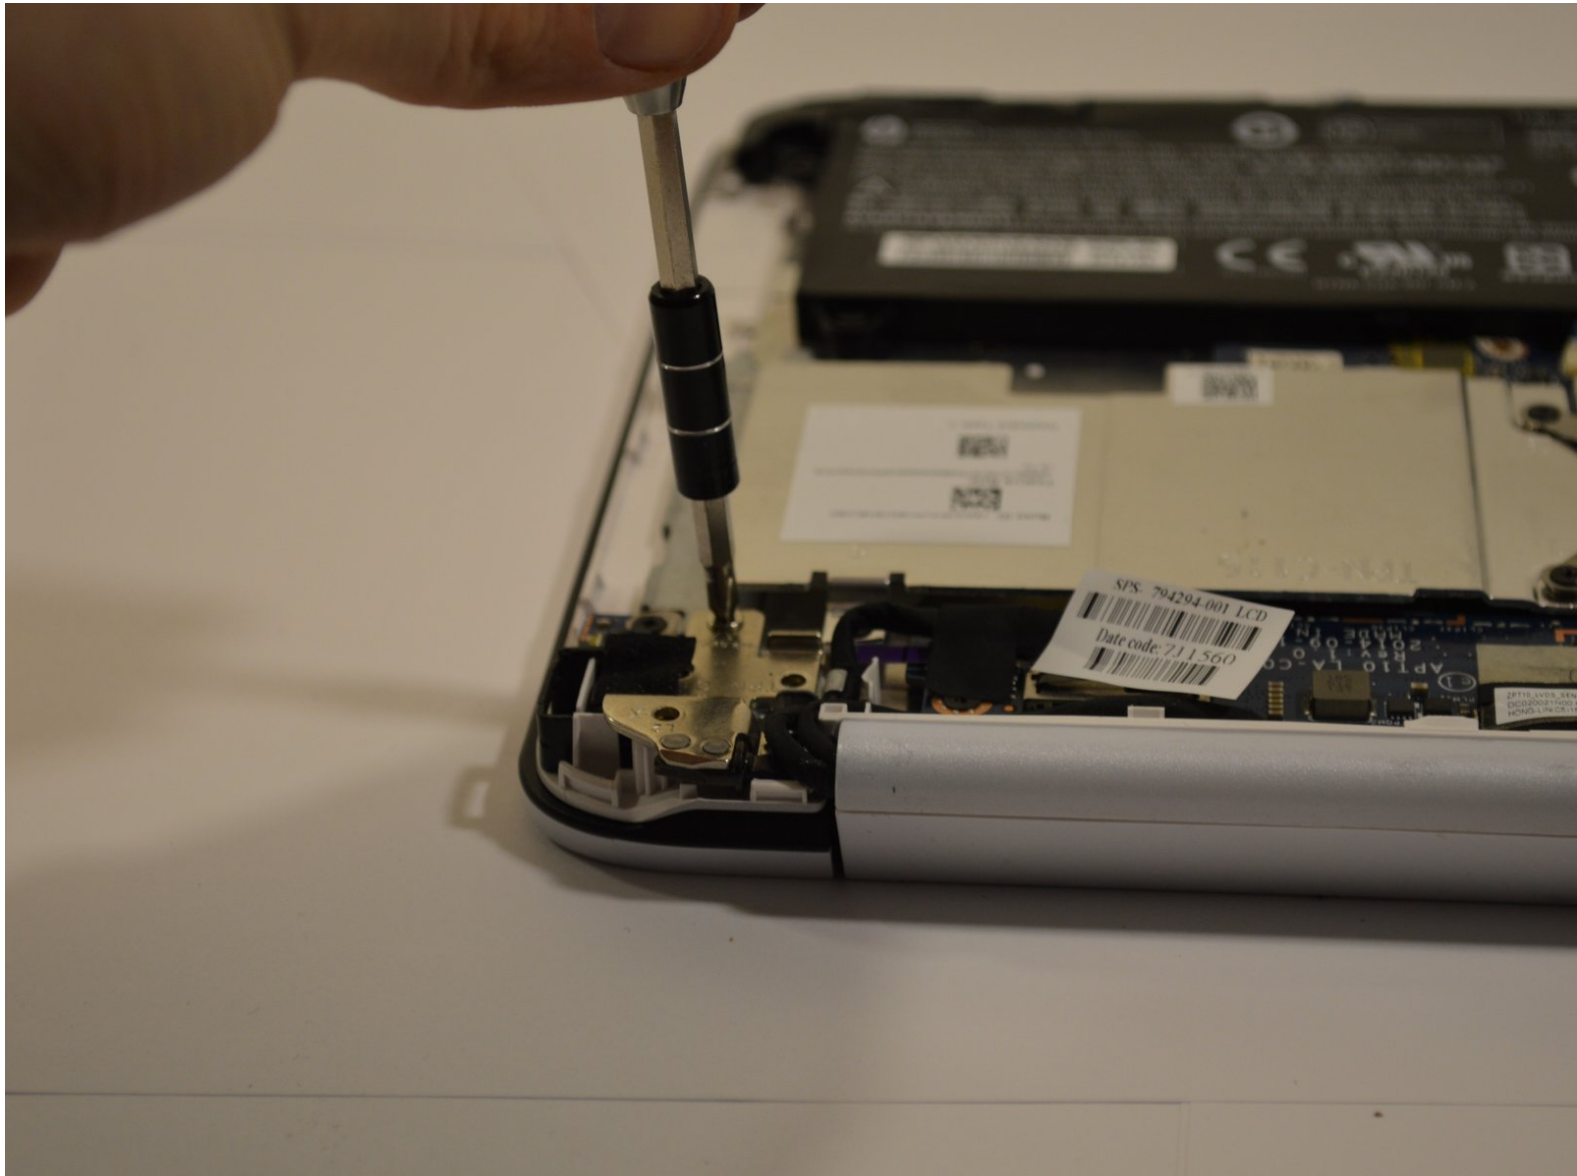




TOOLS:



- [JIS #1](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Screen

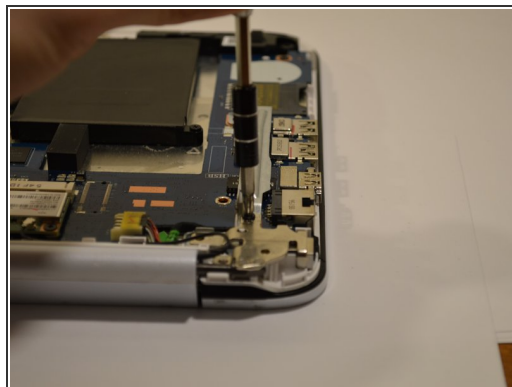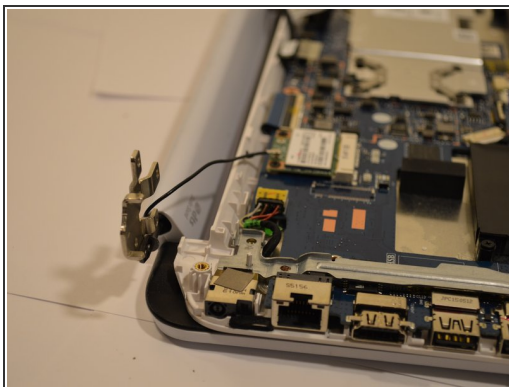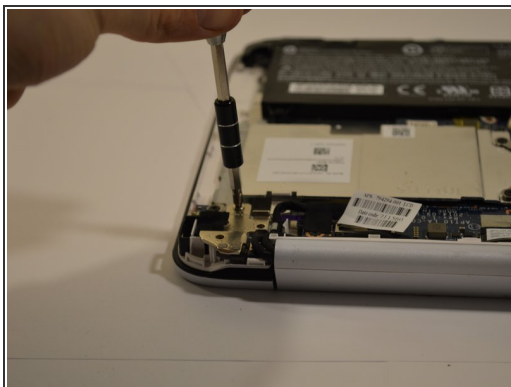


- Use JIS J1 screwdriver to remove exposed screws on hinge.
- Repeat for hinge on opposite side of laptop.

Step 2

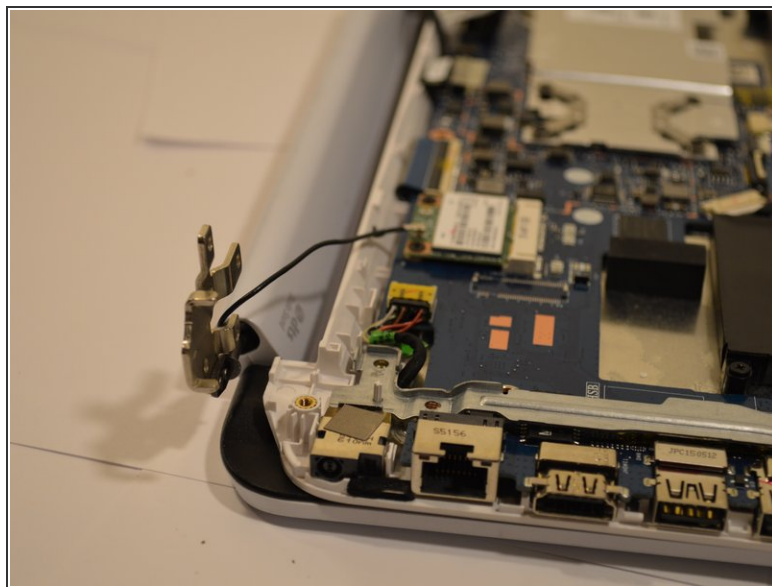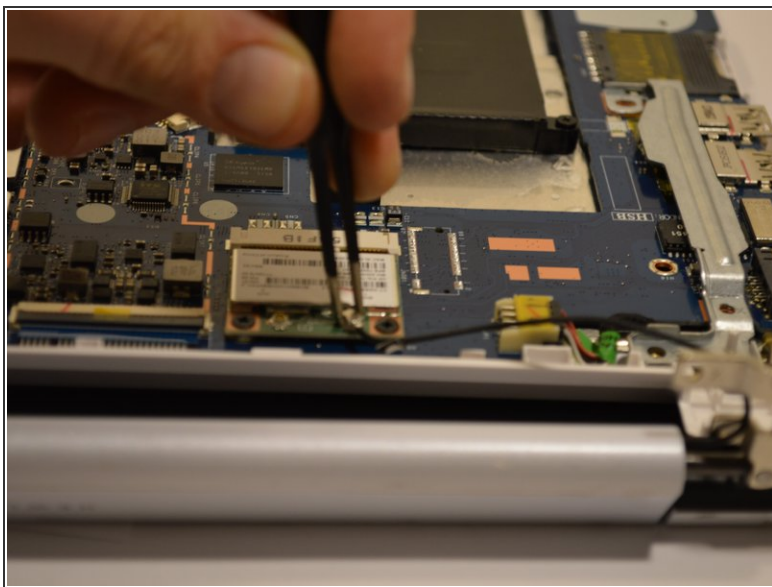

- Use tweezers to remove wire that is connected from screen.

Step 3

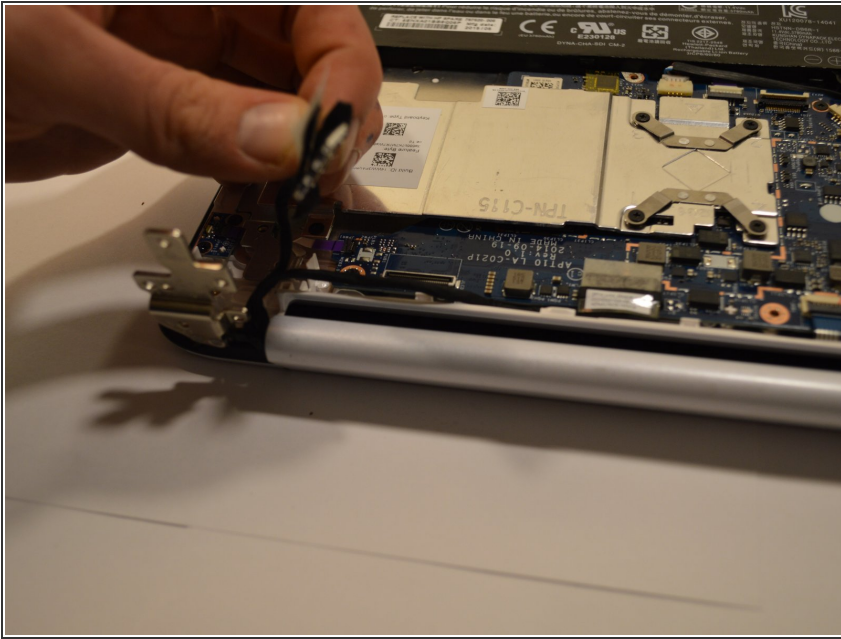

- Unplug wire from screen.

To reassemble your device, follow these instructions in reverse order.