




Samsung SGH A707 Keypad Replacement

Use this guide to replace your Samsung SGH A707...

Written By: yfm

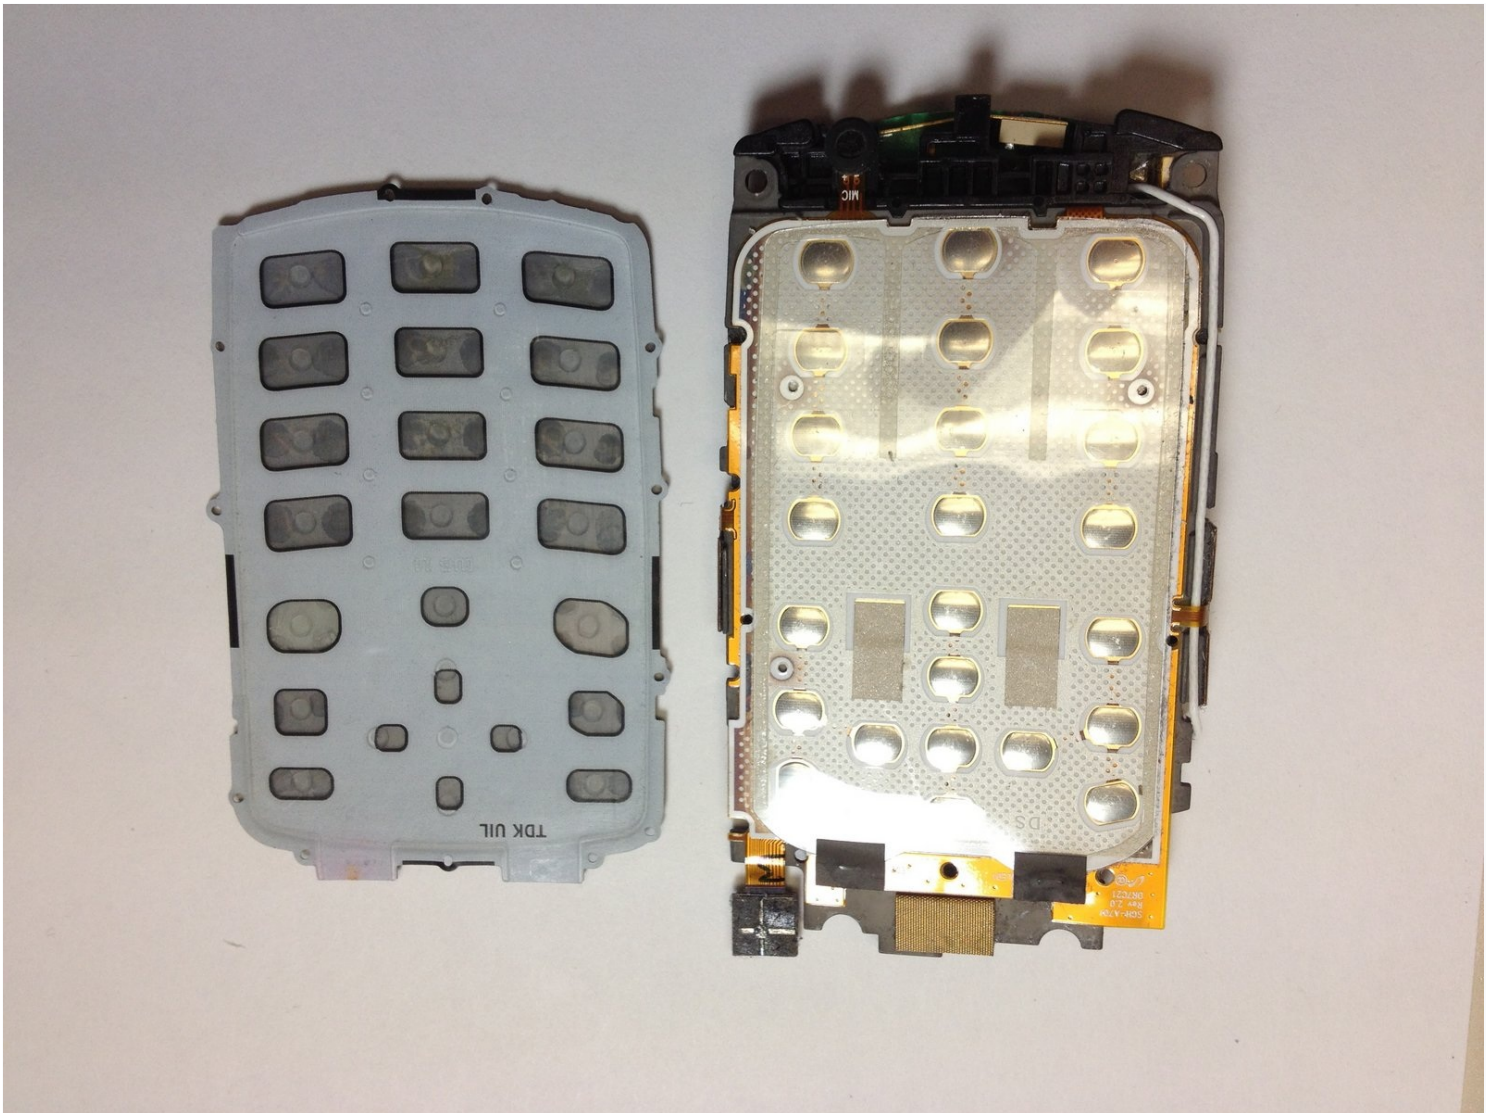

INTRODUCTION

Use this guide to replace your Samsung SGH A707 phone's keypad.

TOOLS:

[Tweezers](#) (1)

[Phillips #0 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Battery



- Press on the markings on the cover and pull it down to reveal the battery.

Step 2



- Use your fingers to pull the battery out of its position. You may also flip the phone and the battery will fall out.

Step 3



- Here is the phone without the battery.

Step 4 — Motherboard



- Unscrew the six screws on the back of the phone using the Phillips #0 screw driver.

Step 5



- Use the prying tool the pry off the phone's plastic frame.

Step 6



- Use the prying tool to disconnect the rectangular connector.

Step 7



- Use the prying tool to disconnect the small connector.

Step 8




- Gently pull off the circuit board.

Step 9



- Here is the phone without the logic board.

Step 10 — Keypad

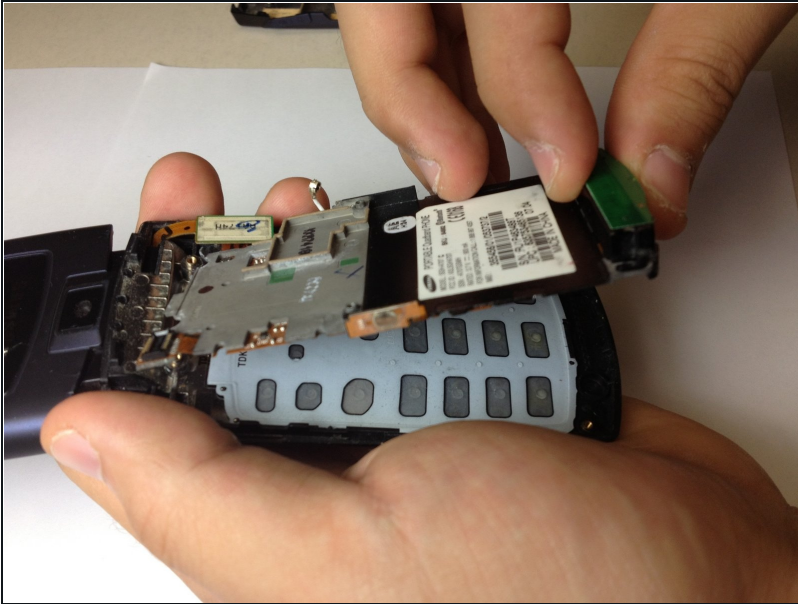

- Hold the phone and gently separate the circuit board that holds the dome switches and the front face of the phone, revealing the rubber keyboard.

Step 11




- Here is the phone without the dome switch circuit board.

Step 12



- Here is the phone and the rubber keyboard.

Step 13

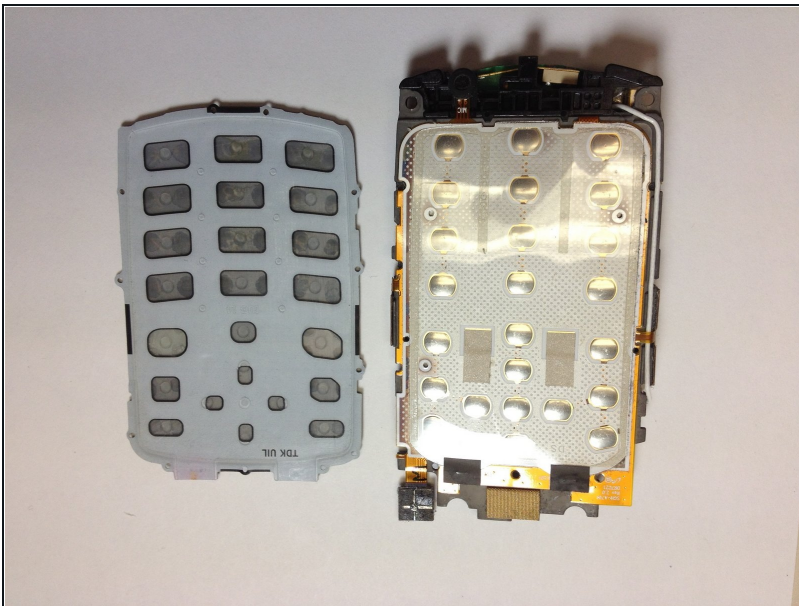

- Here is the rubber keyboard and the dome switch circuit board. A quick inspection of these elements can reveal keypad malfunctions. Look for dirt or debris that do not belong there.

To reassemble your device, follow these instructions in reverse order.