



# Samsung Galaxy S8 Active SIM Tray/Card Replacement

This guide will explain how to remove the SIM card/Tray from your Samsung Galaxy S8 Active.

Written By: Ariel Sampson



---

## INTRODUCTION


Use this guide to remove or replace the SIM card or SIM tray in your Samsung Galaxy S8 Active.

---

### TOOLS:

- [SIM Card Eject Tool](#) (1)
-

## Step 1 — SIM Tray/Card

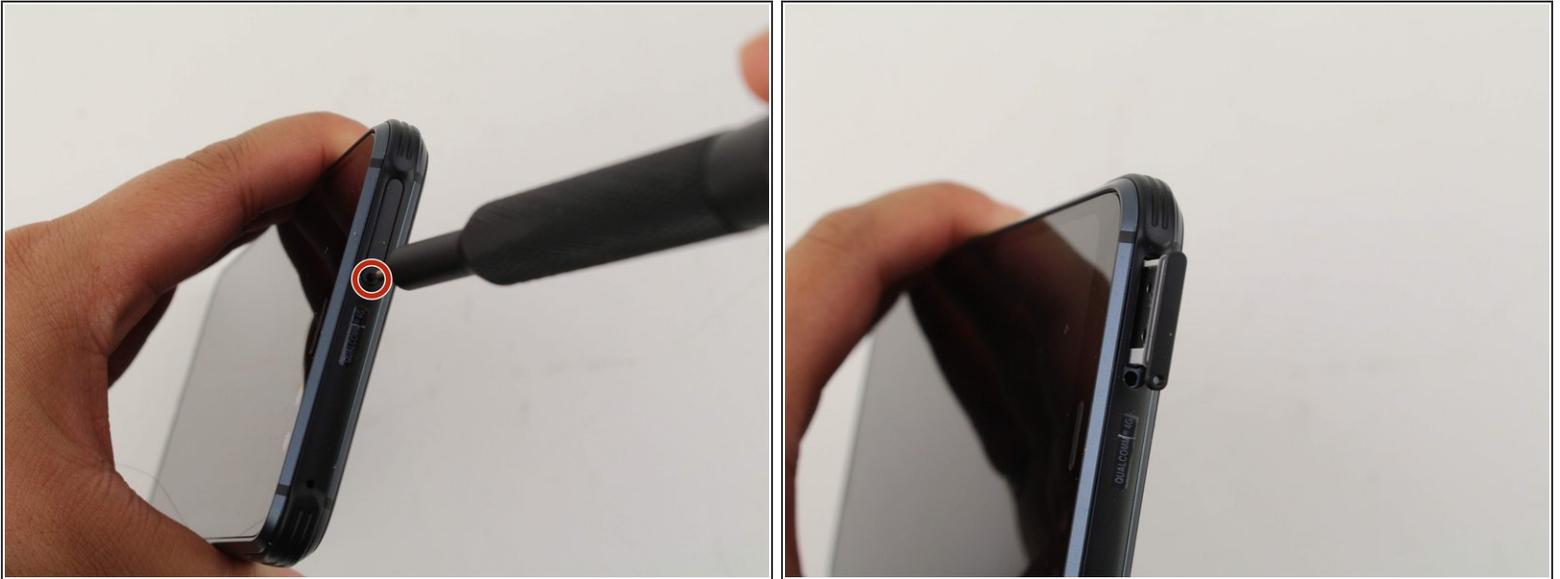

- Insert and gently push the SIM card ejector tool (or an unfolded paperclip) into the small hole on the left side of the top edge of the phone.
  - Press gently to eject the SIM tray.
  - Remove the SIM card tray from the device.
- To reinsert the SIM card tray, orient the SIM card with the gold contacts facing up and the notch to the bottom right. Reinsert the SIM card by pressing the card gently into the SIM tray slot.

To reassemble your device, follow these instructions in reverse order.