


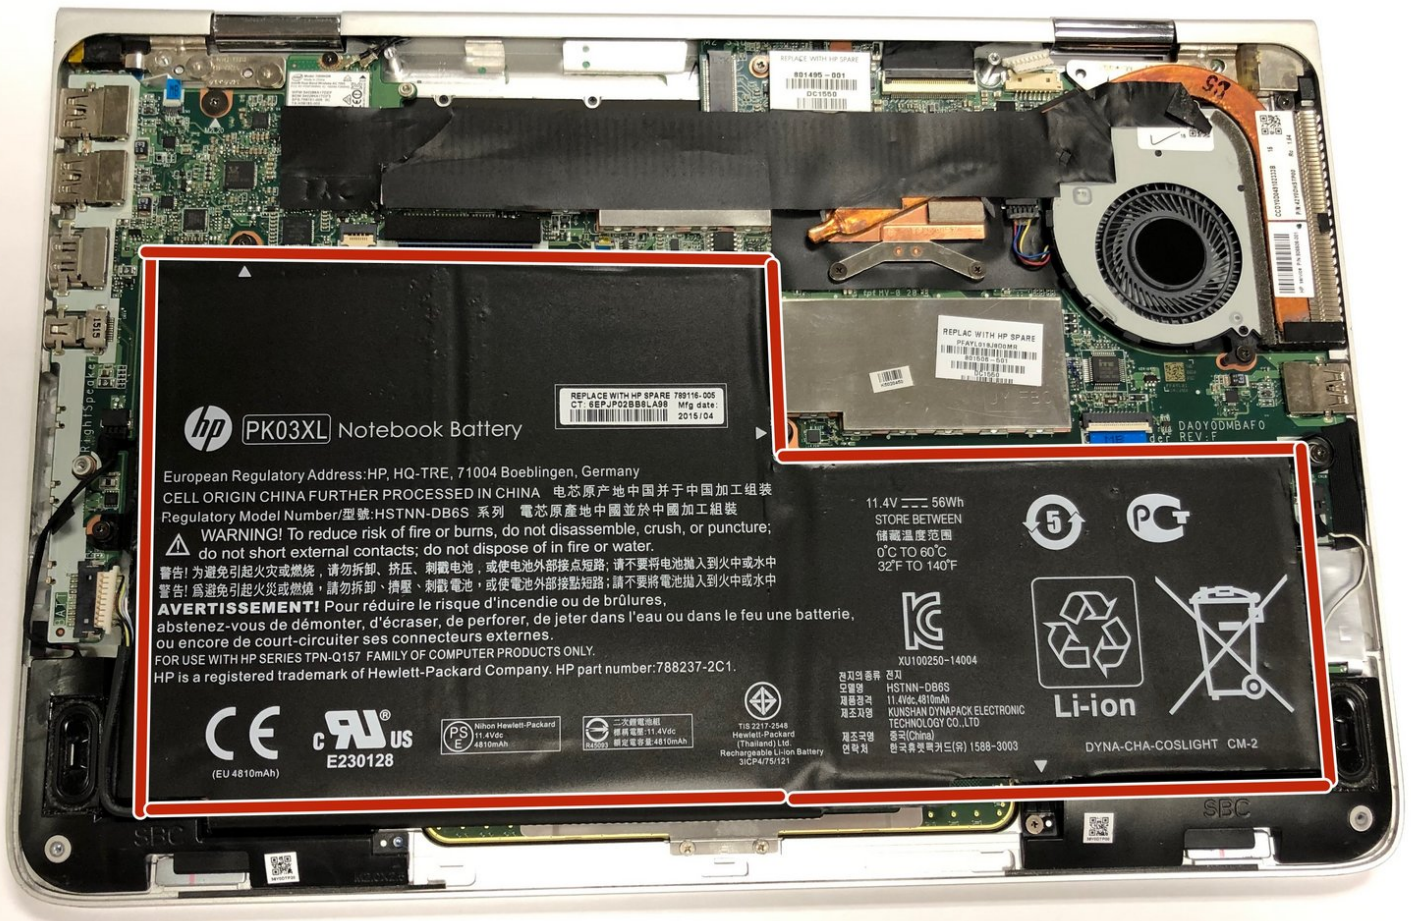

# HP Spectre 13-4002dx Battery Replacement

This guide will walk you through how to replace the battery for this HP laptop.

Written By: Cayce Stewart



# INTRODUCTION

The laptop needs to be turned off during this procedure. Disconnecting the battery while the laptop is powered on may hurt you or damage your laptop.



## TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)



## PARTS:

- [HP Spectre x360 13 Replacement Battery](#) (1)

## Step 1 — Bottom Case

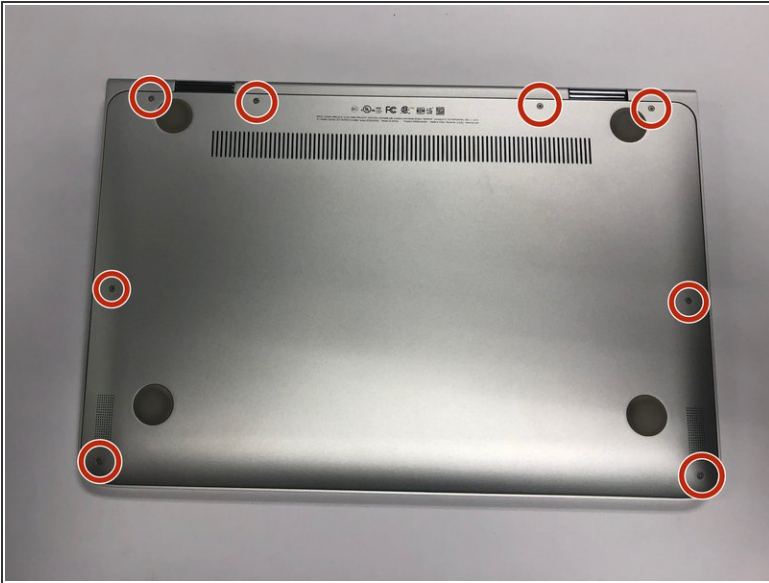

- Using the Torx T5 screwdriver, remove the eight 8 mm screws on the bottom case of the laptop.


## Step 2



- Pry up one corner of the bottom case with a spudger.
- Work the spudger around the edges, making your way towards the bottom of the laptop.
- Remove the bottom case.




## Step 3 — Battery

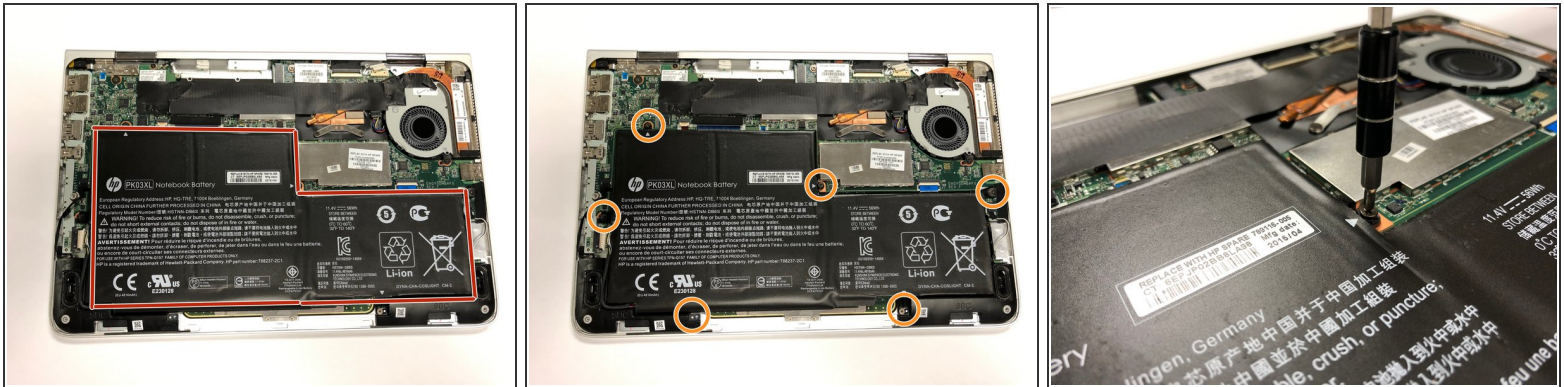

- Orient the laptop the same way as the pictures. The battery is bordered in a red outline.
- Remove the six 4 mm screws using a Phillips #000 screwdriver.


## Step 4

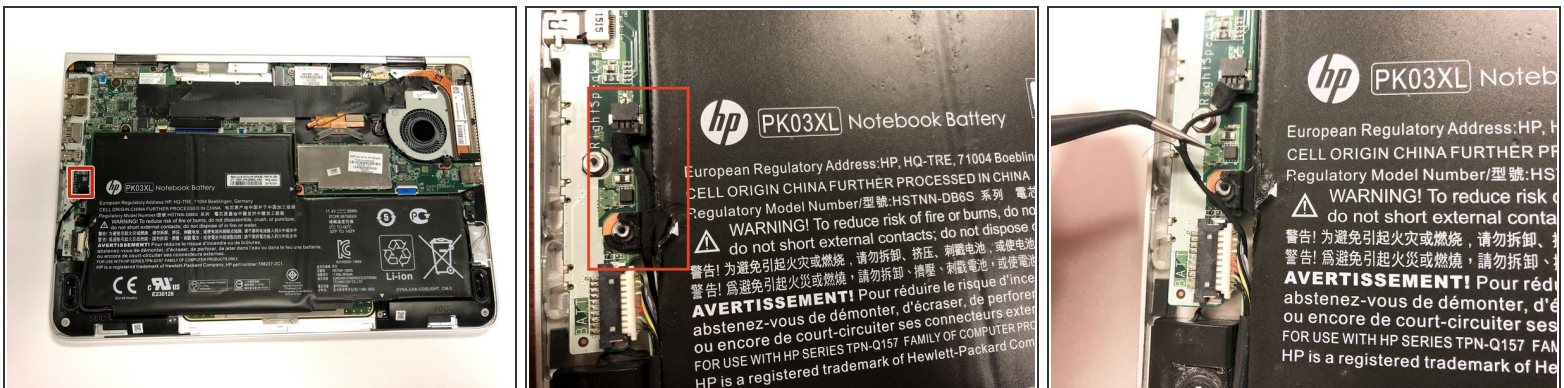

**⚠** Do not disconnect the cable connector shown in the red box.

- The speaker cable may be attached to the battery with black electrical tape. If so, remove the tape.
- Move the cable clear of the battery.


## Step 5

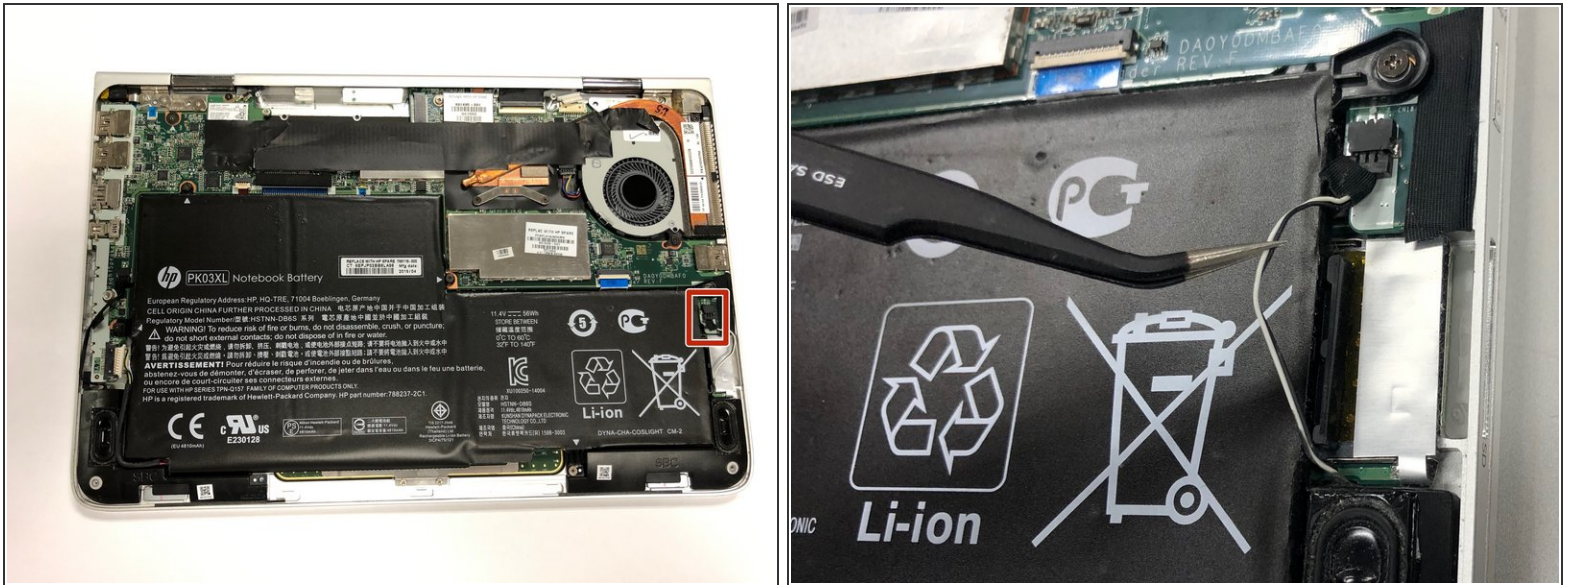

**⚠** Do not disconnect the cable connector located in the red box.

- Use tweezers to remove the speaker cable from the groove attached to the battery.
- Push the cable to the side so it does not get in the way of the battery removal.

## Step 6

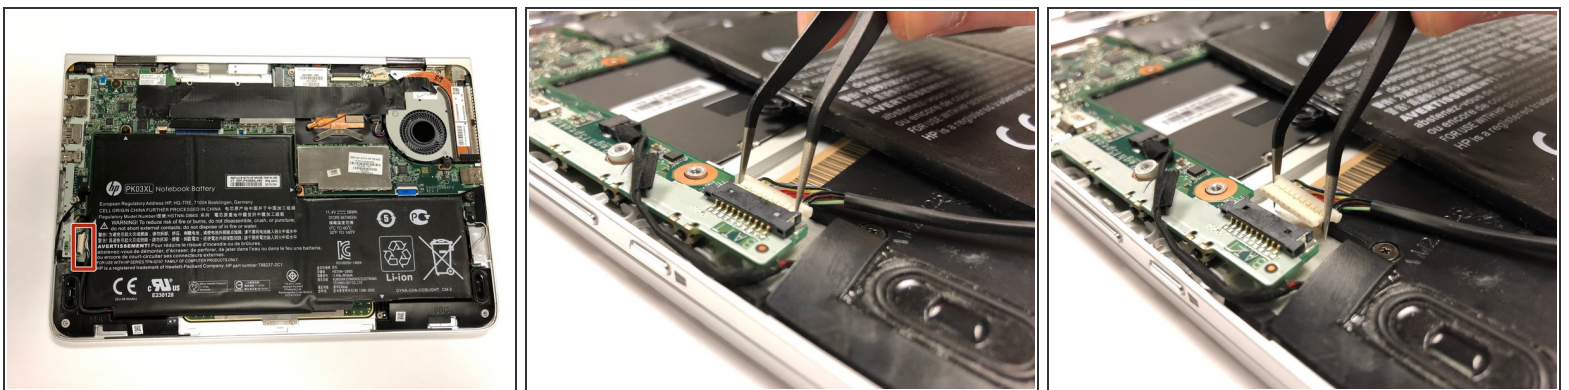

- Disconnect the battery cable connector by sliding it out of the socket.
- ① Move the battery out of the way if you need more room to disconnect the power cable.



## Step 7



- Carefully remove the battery.

To reassemble your device, follow these instructions in reverse order.