


Samsung Galaxy S9 Midframe assembly Replacement

Remove the NFC coil assembly including the antennas and other plastic components.

Written By: Sam Azevedo

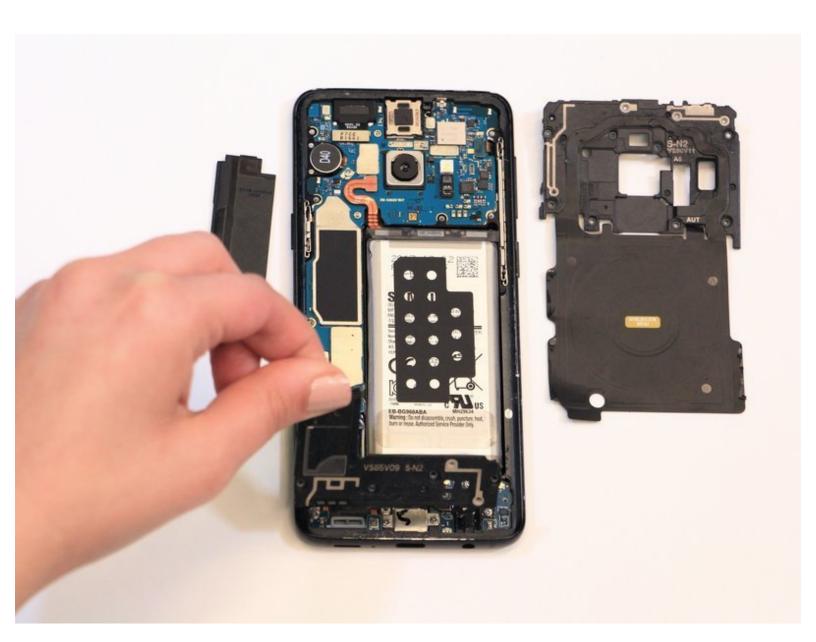

This document was generated on 2020-11-28 07:19:04 AM (MST).

INTRODUCTION

Use this guide to remove or replace the plastic frames covering the phone internals, including the NFC coil and antenna assemblies.



TOOLS:

- Phillips #000 Screwdriver (1)
- Spudger (1)

Step 1 — Midframe assembly




 Remove fifteen 4mm screws with a #000 Phillips screwdriver.

Step 2



Remove the NFC coil assembly.

Step 3

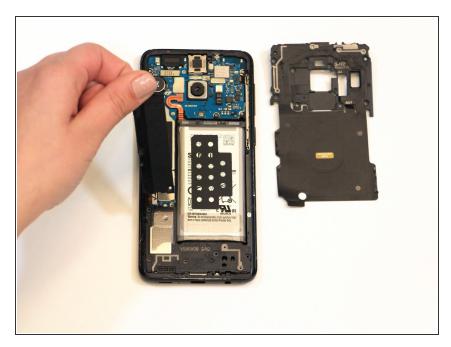

Remove the motherboard bracket.

Step 4



 Remove the speaker cover/antenna assembly.

To reassemble your device, follow these instructions in reverse order.