



Lenovo Miix 2 External Buttons on Back Cover Replacement

This guide will show the user how to replace the external buttons on the back cover of the Lenovo Miix 2.

Written By: Max Rozema



INTRODUCTION

This procedure is necessary if the user runs into a problem where the buttons on the back cover are damaged or need to be readjusted due to significant use or damage from a drop or bump of the device. This guide will show how to remove the external buttons from the back cover.



TOOLS:




- [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — External Buttons on Back Cover



- Gently insert metal spudger into back panel of the device.
- Remove the back cover with your hand.

Step 2

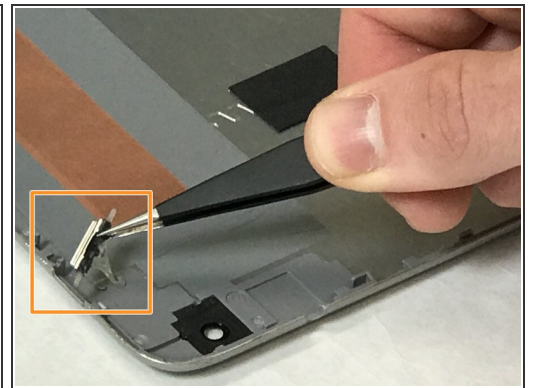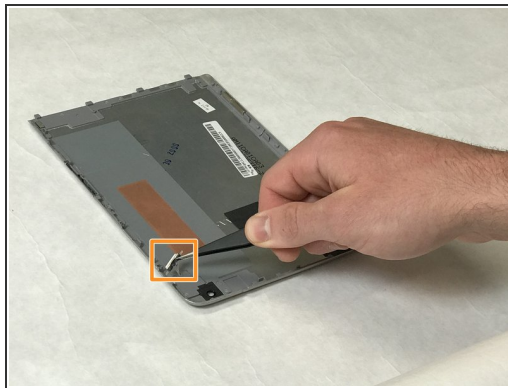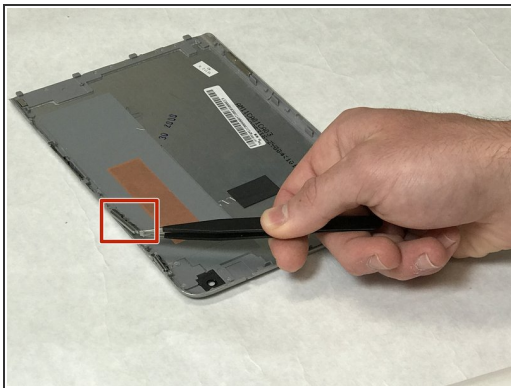

- Using the tweezers remove the volume button located towards the top of the device, near the rear camera cut out.
- Next, gently lift up on the power button, once again using the tweezers, which is located above the volume button along the same side of the device.

To reassemble your device, follow these instructions in reverse order.