




# Pioneer A1 XW-SMA1-K Speaker Replacement

How to replace Pioneer A1 XW-SMA1-K speakers.

Written By: Luke Patton

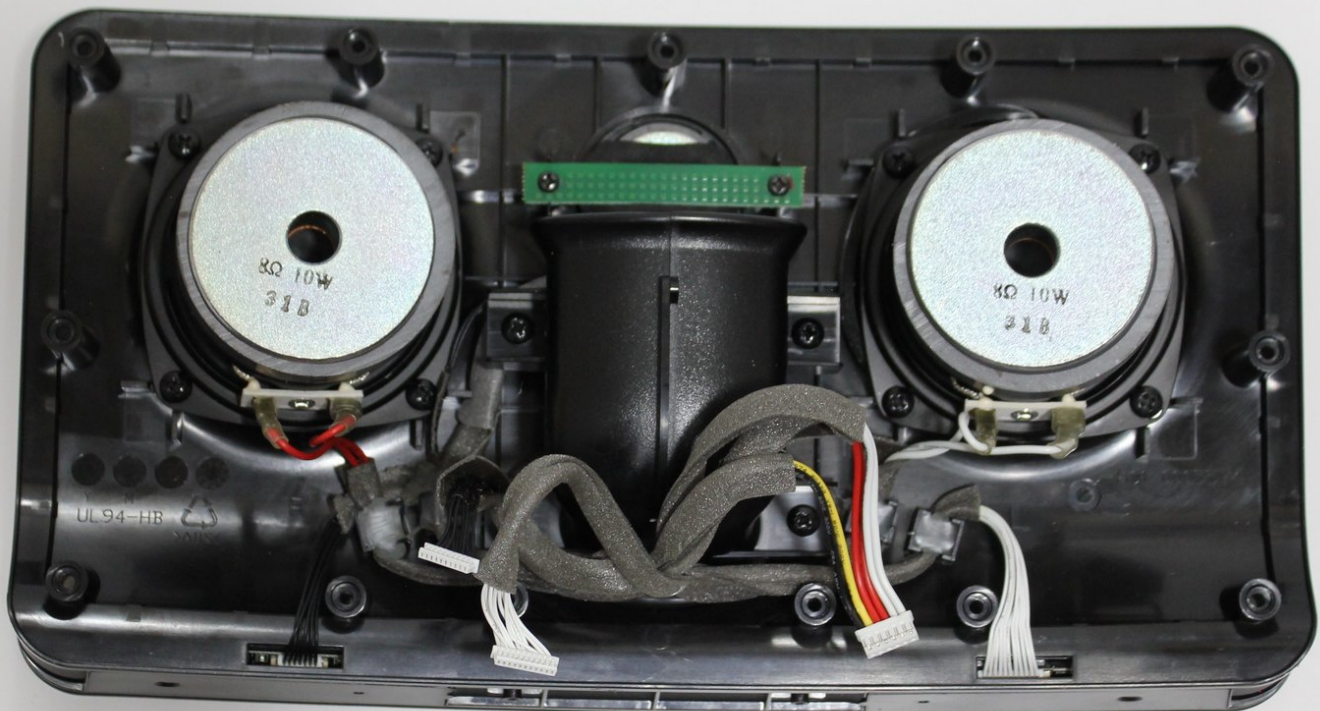

---

## INTRODUCTION

If you are looking to replace the speaker in your Pioneer A1 XW-SMA1-K then this is a guide instructing you how to.

---



### TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Front Panel




- Use the spudger to remove the mesh front panel.

## Step 2 — Speaker



- Use a Phillips #1 screwdriver to remove the thirteen 12 mm screws in the speaker frame.
- Remove the speaker frame by pulling vertically and flip to reveal the speakers.

### Step 3

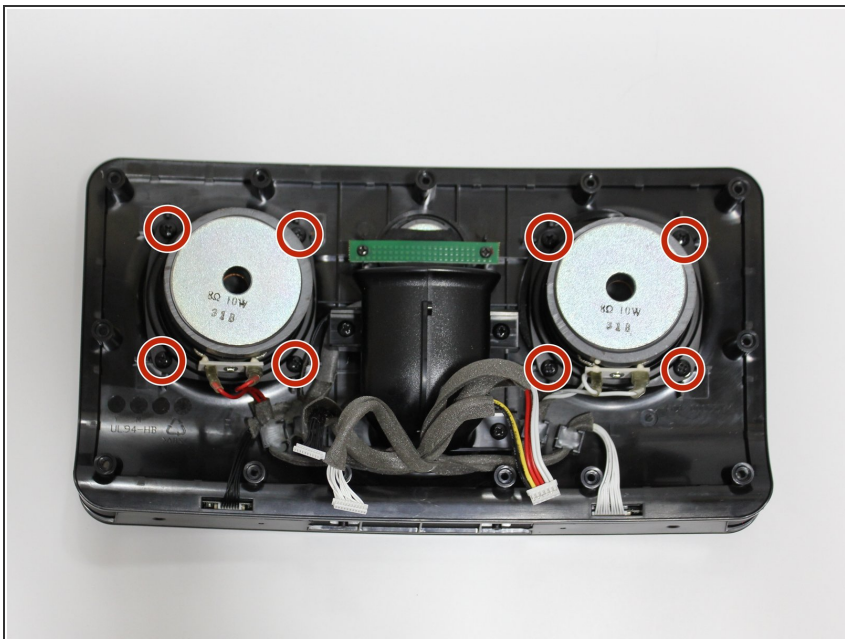

- Use a Phillips #1 screwdriver to remove the eight 12 mm screws from the left and right speakers.

### Step 4



- Remove the left and right speakers from the speaker frame by pulling gently up and detaching the wires.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 07:22:24 AM (MST).

