



# Pioneer A1 XW-SMA1-K Antenna Replacement

How to replace the antenna in your Pioneer A1 XW-SMA1-K speaker.

Written By: Drew Dickenson



---

## INTRODUCTION

If you are looking to replace the antenna of your Pioneer A1 XW-SMA1-K, here is your replacement guide.

---



### TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Back Panel




- Use the spudger to remove the mesh front panel.

## Step 2



- Use a Phillips #1 screwdriver to remove the thirteen 12 mm screws in the speaker frame.
- Remove the speaker frame by pulling vertically upwards revealing the motherboard.

## Step 3

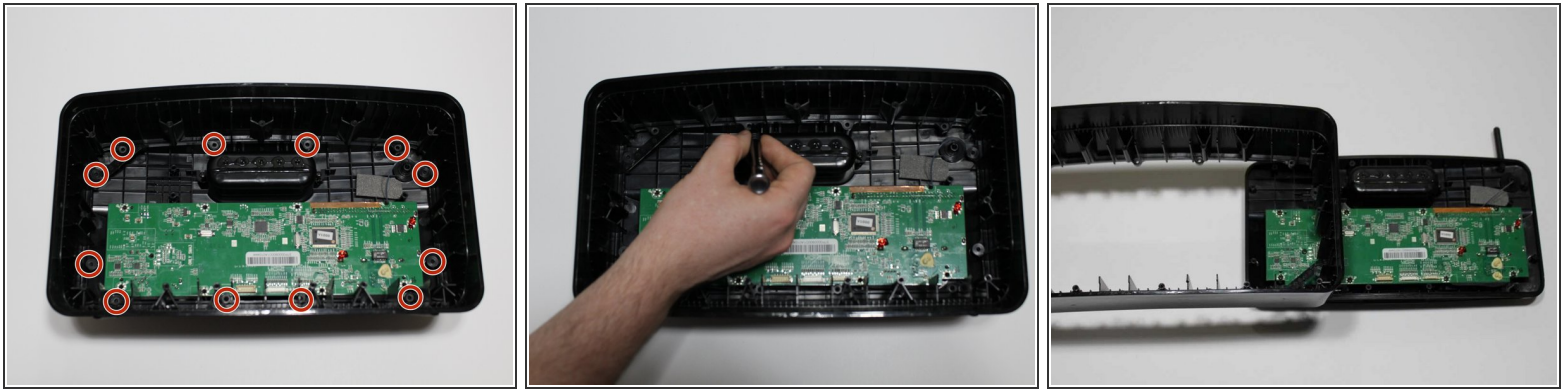

- Use a Phillips #1 screwdriver to remove the twelve 12 mm screws from the middle frame.
- Remove the middle frame by pulling upward and vertically.


## Step 4



- Use the Phillips #1 screwdriver to remove the nine 12 mm screws from the motherboard.
- Flip the motherboard over.
- Remove the motherboard by detaching the antenna.



## Step 5 — Motherboard

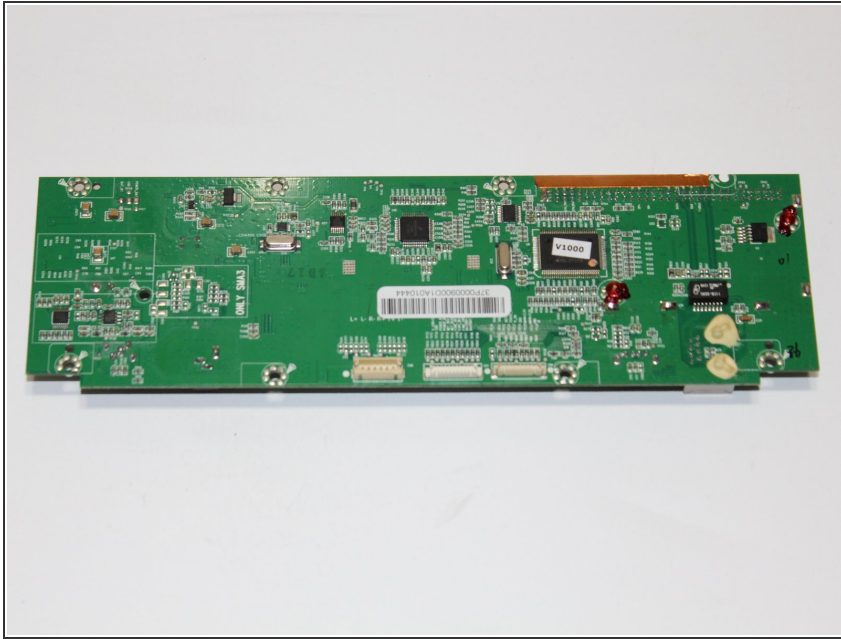

- Remove the motherboard from the speaker.

## Step 6 — Antenna



- Flip over the back panel and pull the antenna up and out.

To reassemble your device, follow these instructions in reverse order.