




HP Envy M6-1205DX Disassembly

The guide will explain how to remove the back panel from the HP Envy m6-1205dx laptop.

Written By: Ryan Hatton

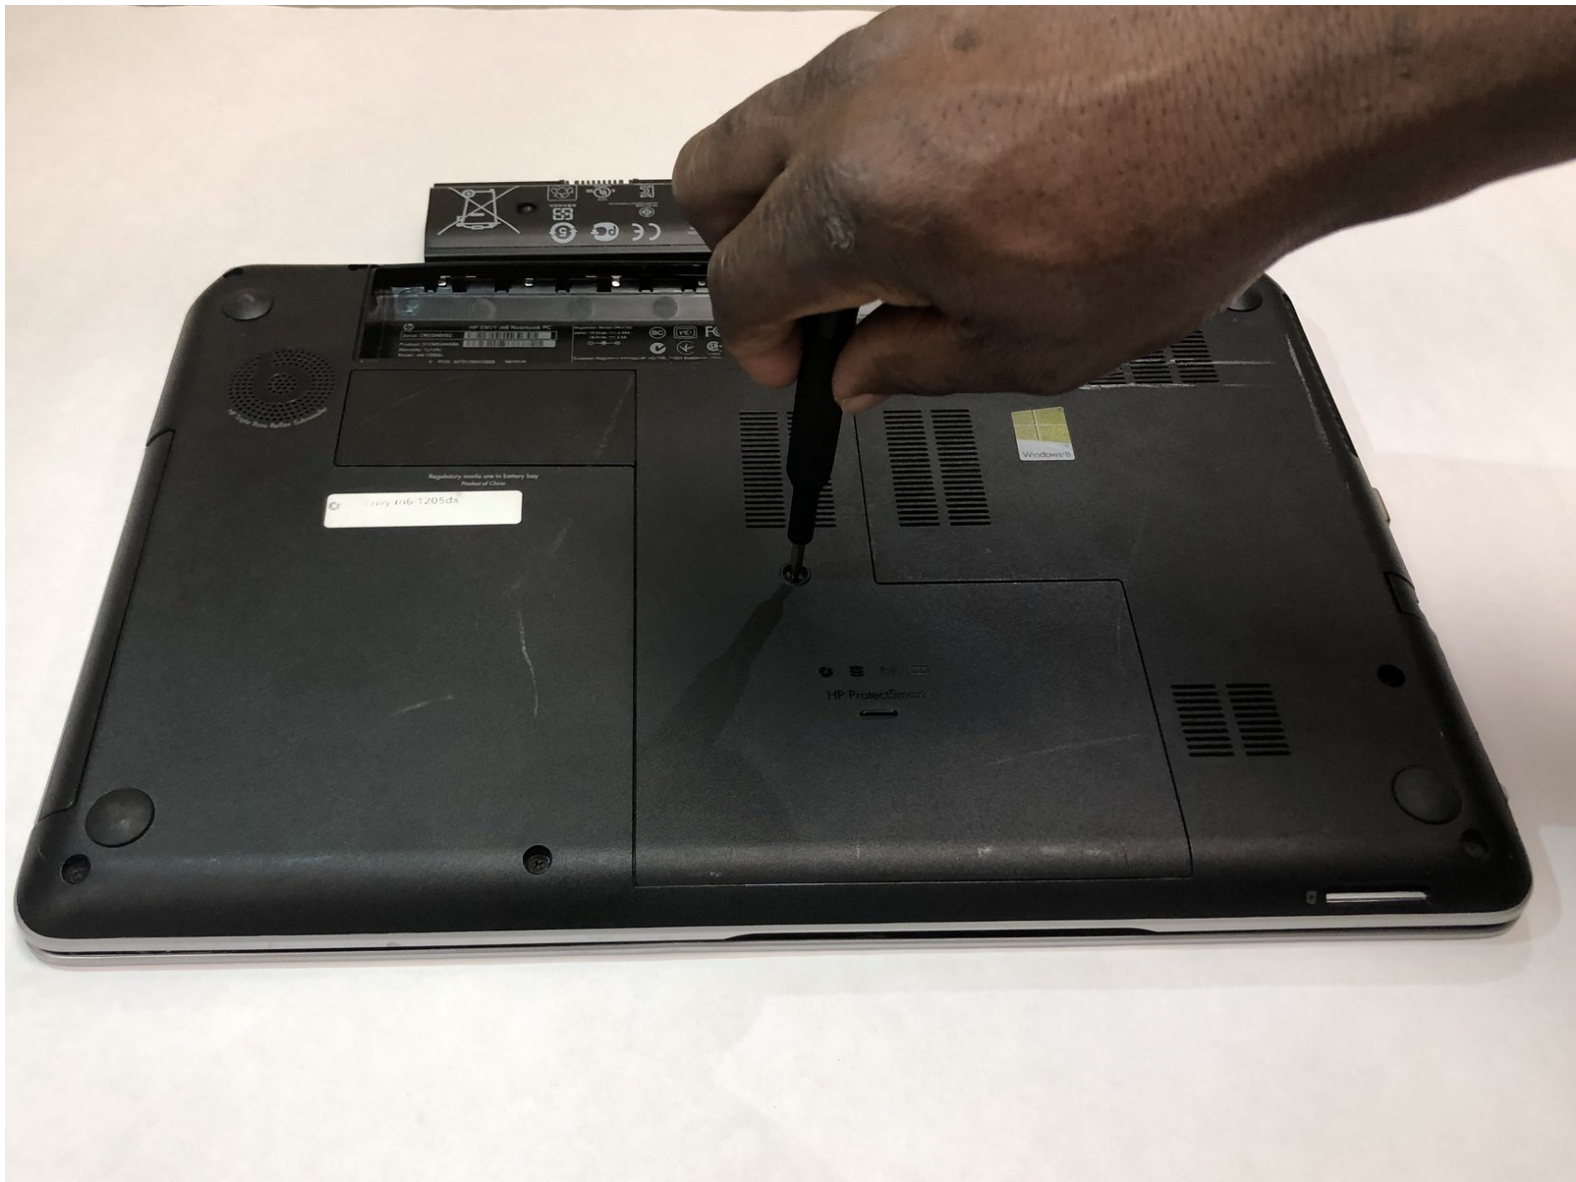



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Lay the device face down to begin.

Step 2




- Slide the release mechanism to the left to release the battery.

Step 3



- Remove the battery.

Step 4 — Back Panel

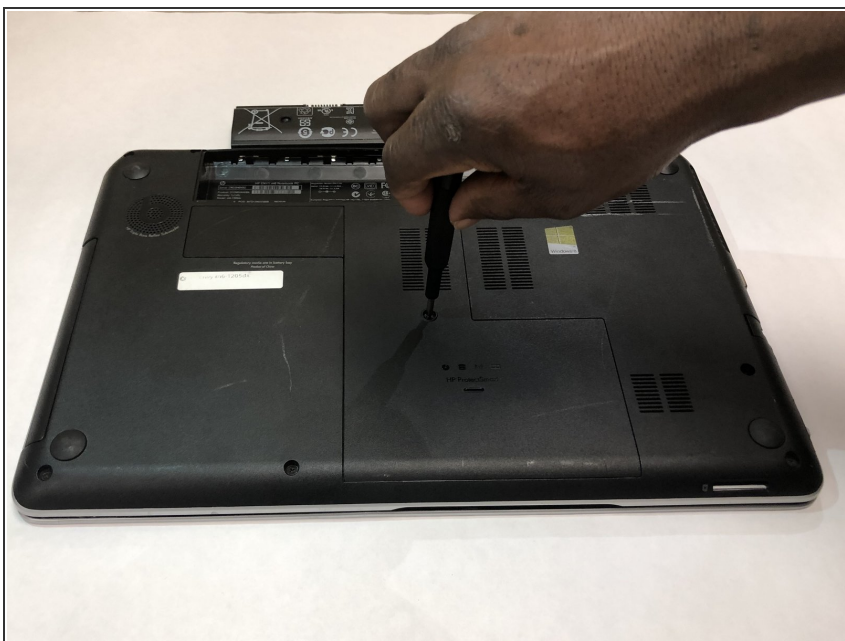

- Using a Phillips #1 screwdriver, remove the 8.6 mm screw.

Step 5



- Slide the center panel down to remove it.

To reassemble your device, follow these instructions in reverse order.