



HP Spectre x360 13-ac023dx Battery Replacement

Follow this guide to replace the battery of your HP Spectre x360 13-ac023dx.

Written By: Dylan Beery



INTRODUCTION

If your HP Spectre x360 13-ac023dx laptop is overheating or is having trouble charging properly, use this guide and follow it to replace the battery.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)
- [T5 Torx Screwdriver](#) (1)



PARTS:


- [HP Spectre 13 Battery](#) (1)

Step 1 — Battery




- Flip the laptop over so the model sticker faces the ceiling.

Step 2

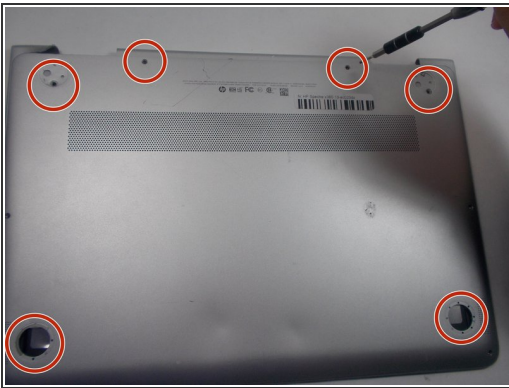

- Use a Torx #5 screwdriver to remove the six 3.5 mm screws holding the back cover to the laptop.

Step 3

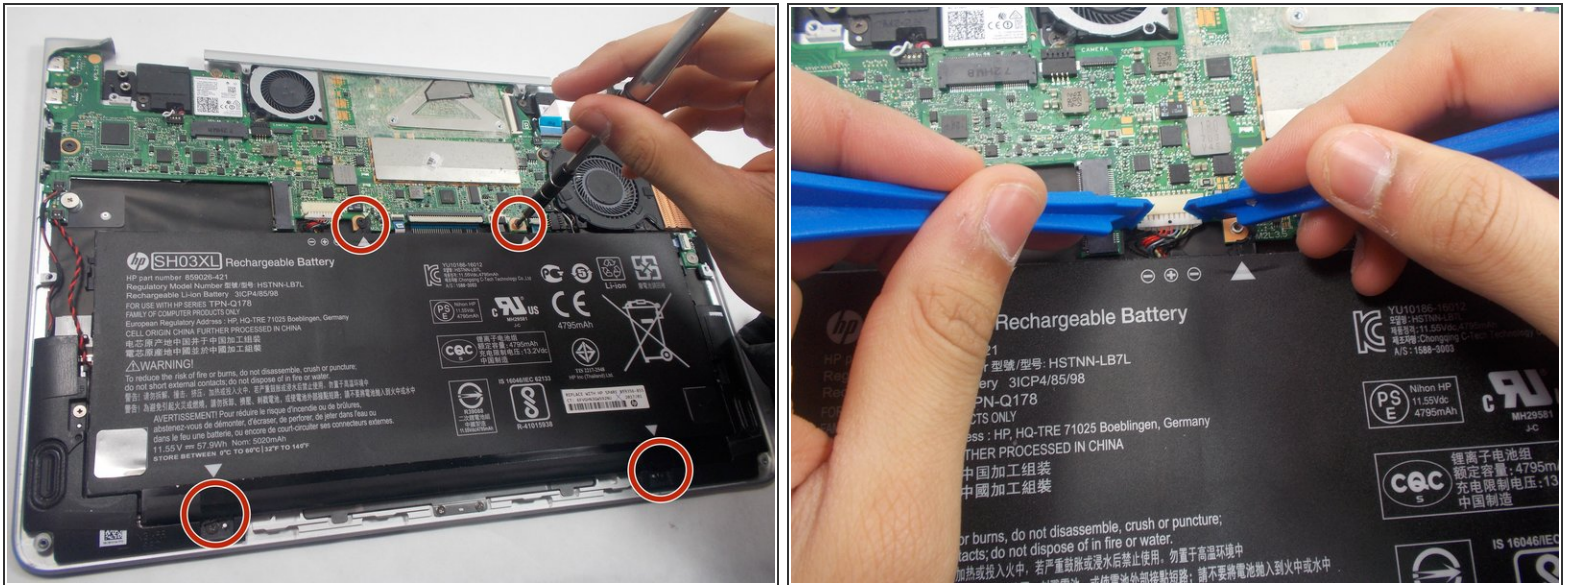

- Use the Phillips #000 screwdriver to remove the four 3.5 mm screws holding the battery.
- After removing the screws, detach the battery wire from the motherboard with the iFixit opening tool.
- Then, carefully lift the battery off with the iFixit opening tool.

To reassemble your device, follow these instructions in reverse order.