



Lenovo IdeaPad Flex 5-1570 Back Panel Replacement

This guide will show you how to remove and replace the back panel of your Lenovo IdeaPad Flex 5-1570.

Written By: Will Schafer



INTRODUCTION

Almost everything that may need replacing in your Lenovo IdeaPad Flex 5-1570 can be found underneath the back panel. A damaged back panel is problematic on its own but can also lead to other more serious problems if not replaced. Removing the back panel is a little tricky, however following the steps in this guide should allow for a smooth removal.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)



PARTS:

- [Lenovo Flex 5-1570 Lower Case](#) (1)

Step 1 — Back Panel




- Remove the ten 5 mm Phillips #00 screws that are holding the back panel on.

Step 2



- Use a spudger to pry open the back case at the two hinge cutouts.
- Gently use the plastic opening tool around the edges of the laptop to pry up the clips holding the rest of the back panel.

Step 3

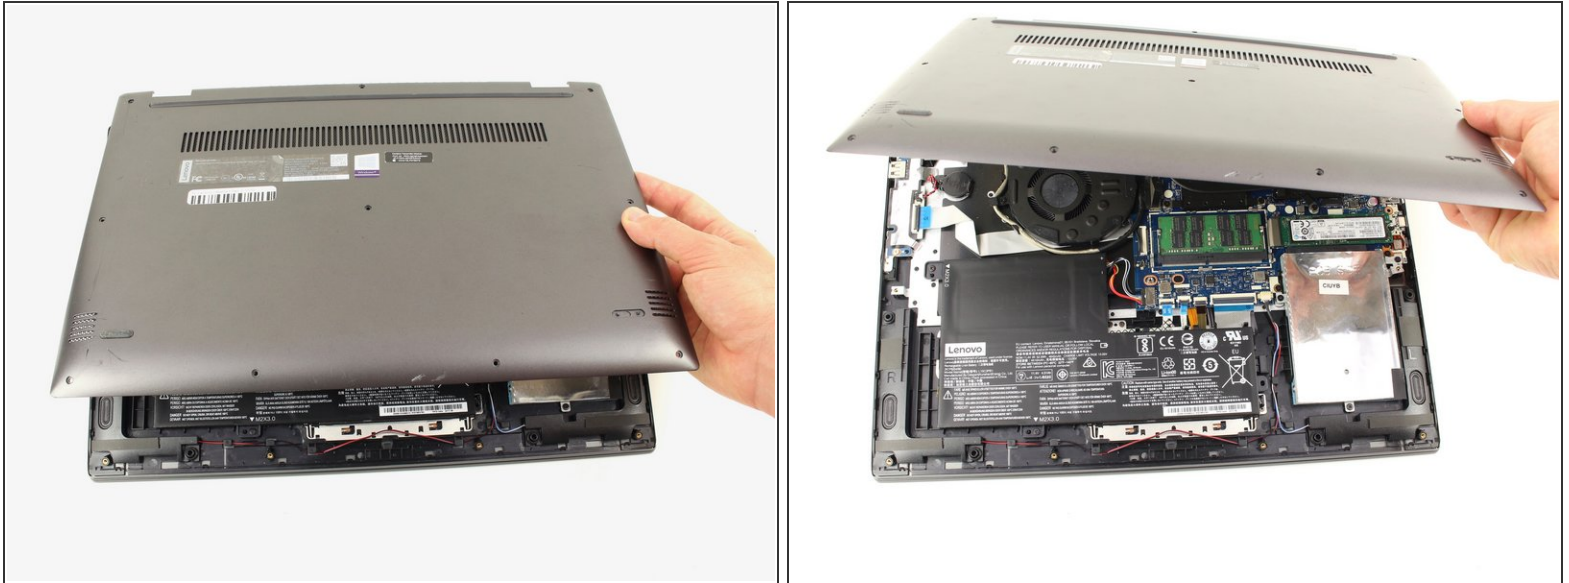

- Once all the clips have been disengaged, lift off the back cover.

To reassemble your device, follow these instructions in reverse order.