



MacBook Pro 13" Retina Display Late 2012 I/O Board Data Cable Replacement

Prereq for logic board.

Written By: Walter Galan




INTRODUCTION

Prereq for logic board.

TOOLS:

- [Spudger](#) (1)
-

Step 1 — I/O Board Data Cable

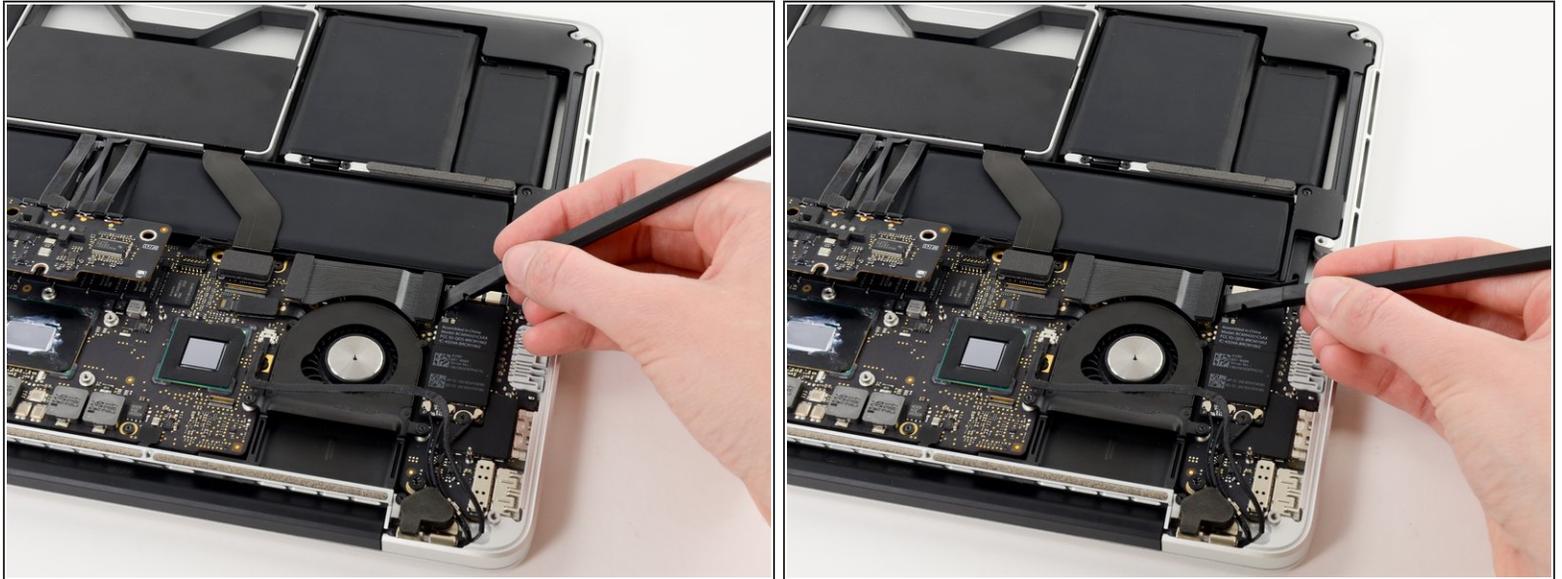

- Use the flat end of a spudger to pry the right side of the I/O board data cable connector up off its socket on the I/O board.

 When prying the I/O board data cable connector from its socket, make sure to pry the connector itself and **not** the socket. Prying the socket may cause irreversible damage to the I/O board.

Step 2



- Wedge the flat end of a spudger beneath the left side of the I/O board data cable connector.
- Gently twist the spudger to disconnect the I/O board data cable connector from its socket on the logic board.

Step 3



- Lift and remove the I/O board data cable from the MacBook Pro.

To reassemble your device, follow these instructions in reverse order.