



How to repair a lint trap on a Kenmore 67132 Dryer.

These steps will help you fix your lint trap on...

Written By: Hayley Cardinale



INTRODUCTION

These steps will help you fix your lint trap on a Kenmore 67123 dryer. If your lint trap won't close all the way this guide will show you how to fix that problem. This guide will help you step by step on how to remove the lint trap and see inside. This will help to see why the lint trap won't close all the way. This is an important guide because your dryer could start on fire if the lint trap isn't closing all the way. I hope this guide will help someone that has the same problem I did.

TOOLS:

Phillips #0 Screwdriver (1)
Vacuum Cleaner (1)

PARTS:

4 half inch Philip head screws 3 one inch Philip head screws. (1)

Step 1 — How to repair a lint trap on a Kenmore 67132 Dryer.



- Using your Phillips #0 remove two 12.7 mm screws on each side of the door.
- Remove the door.

Step 2



- Using the Phillips #0, remove three 25.4 mm screws that hold the lint trap to the dryer.

Step 3



- Remove the lint trap. You can see that there is a lot of lint in there. Once you take off the lint trap, you need to move it to the side. That way you have access to the trap and all the lint.
- ① This is probably the reason the lint trap will not close.

Step 4



- Use your hands to clean out all the lint from the trap. Grab all the lint inside the trap.

Step 5




- Use an attachment to vacuum the remaining lint out of the trap.

Step 6




- Use a washcloth and wipe down the trap and clean it.

Step 7

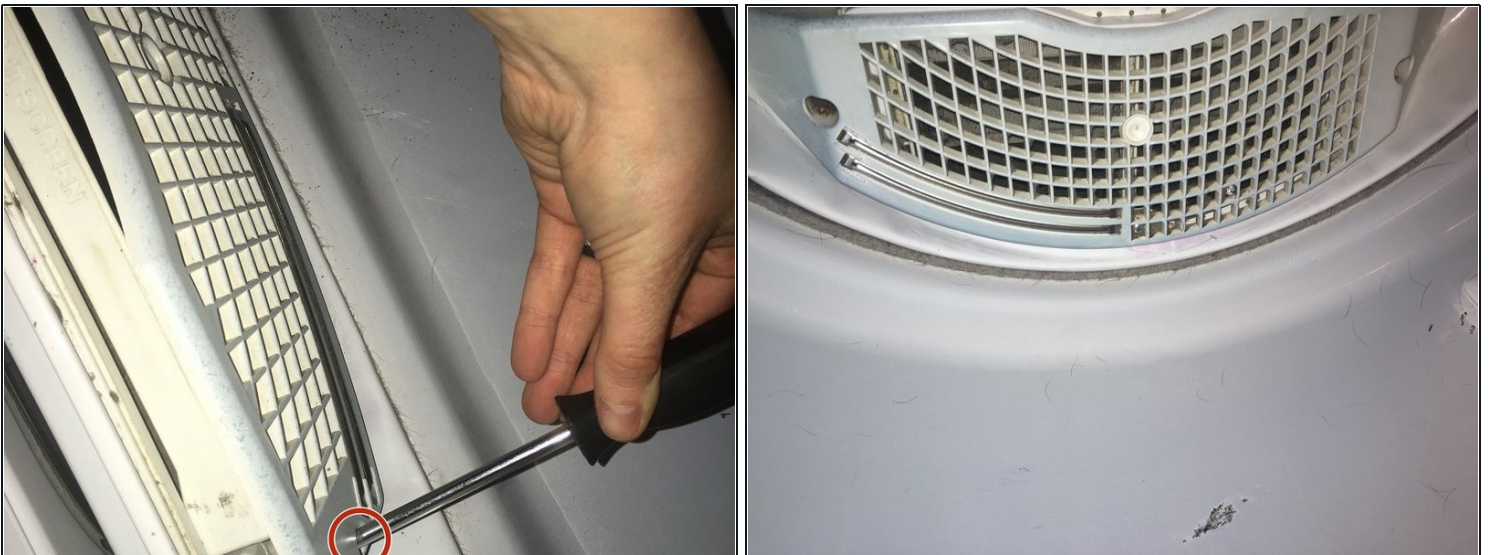

- Replace the lint trap and using the Phillips #0 screwdriver, screw the three 25.4 mm screws to secure the lint trap.

Step 8

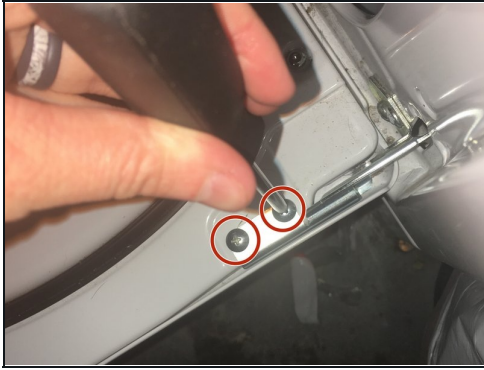

- Using the Phillips #0 replace the four screws for the dryer door. Each side has two 12.7mm screws.

To put everything back start with the door, then putting the lint trap back on and then you are done. This guide is very simple. When you finish you should not have any screws left.