


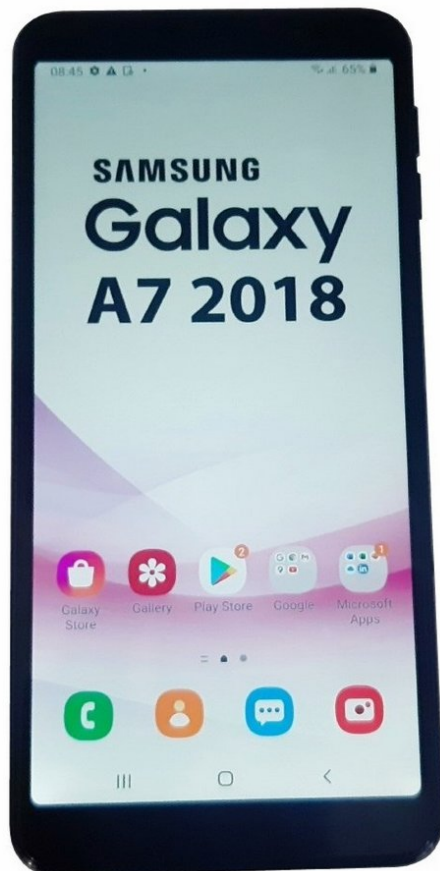

# Samsung Galaxy A7 (2018) Front Camera Replacement

Written By: ZFix



---

## INTRODUCTION

[video: <https://youtu.be/Ow73iZmStOM>]


---



## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Heavy-Duty Suction Cups \(Pair\)](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Reset Camera App

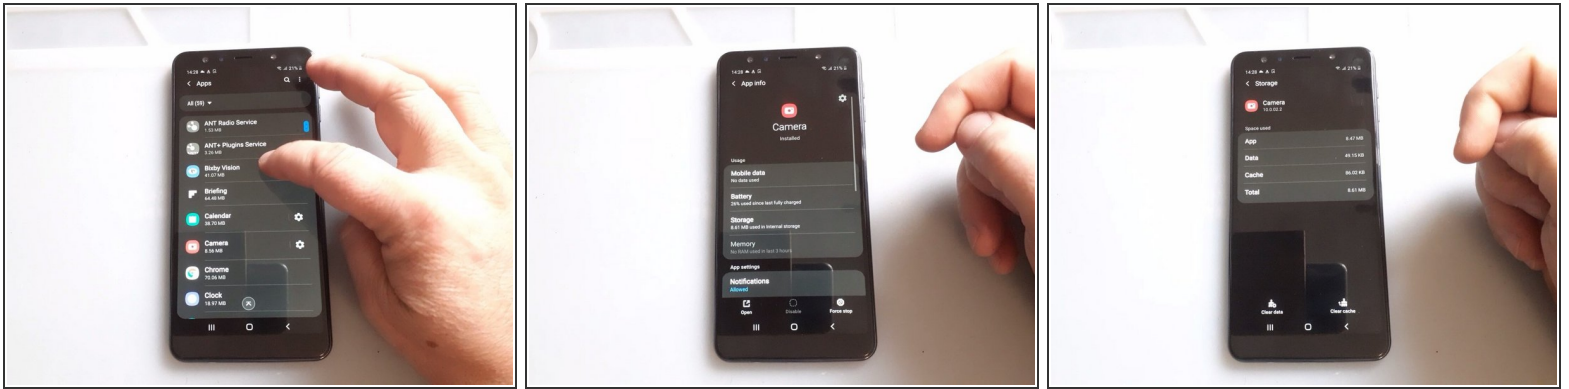


- At the beginning reset the Camera app.
- To reset the camera app go to "Settings", "Apps", "Camera"
- Select "Storage", then "Clear cache" and "Clear data".
- Now "Force stop" the app and test the camera.

## Step 2 — Factory reset

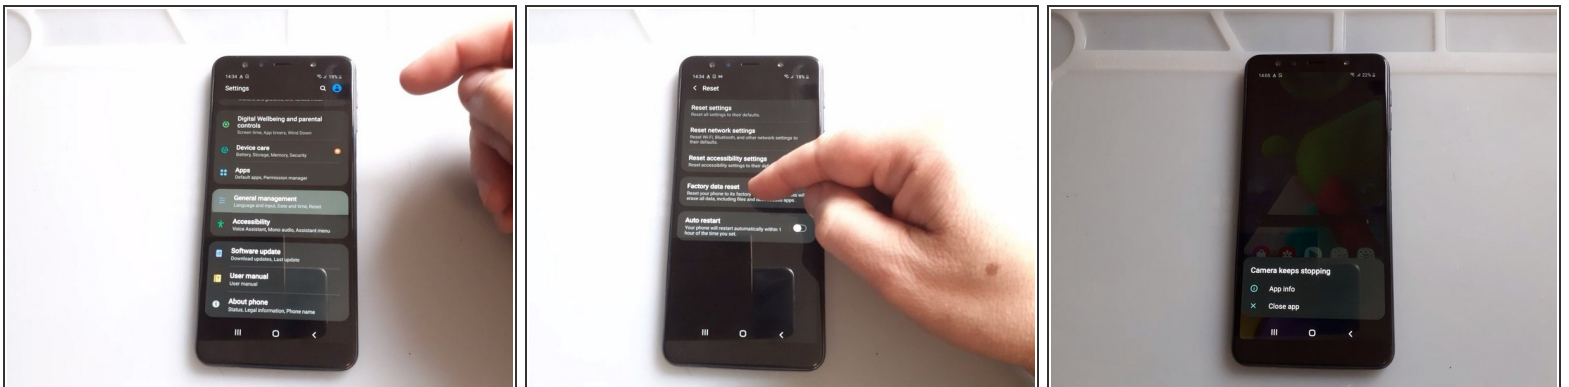

- Now it's time to do Factory reset.
- backup data
- Go to "Settings", "General management", "Factory data reset", "Reset" and follow the instruction.
- Try if camera works

### Step 3 — Battery cover and Middle frame removal

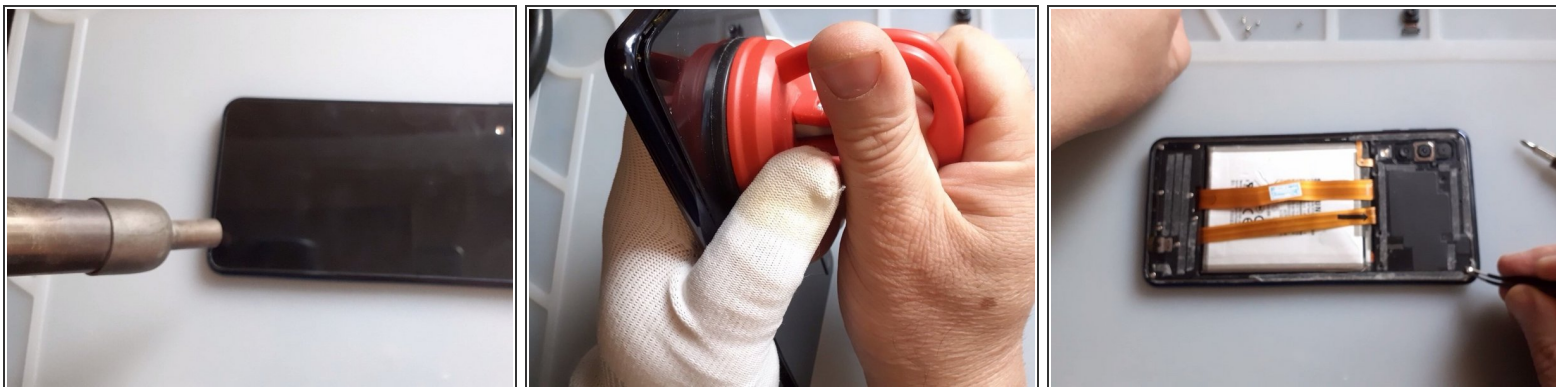

- Use hot air to warm the device.
- Use Suction cup and plastic tools to separate the battery cover.

### Step 4 — Middle frame removal



- Remove the SIM Tray.
- Use plastic tool to remove the middle frame.

## Step 5 — Front camera replacement



- Disconnect the battery.
- Replace the front camera.

To reassemble your device, follow these instructions in reverse order.