




Asus Eee PC 1005PXD-BLK024S Battery Replacement

A guide on how to replace the battery on your Asus Eee PC 1005PXD-BLK024S.

Written By: João Pedro Almeida

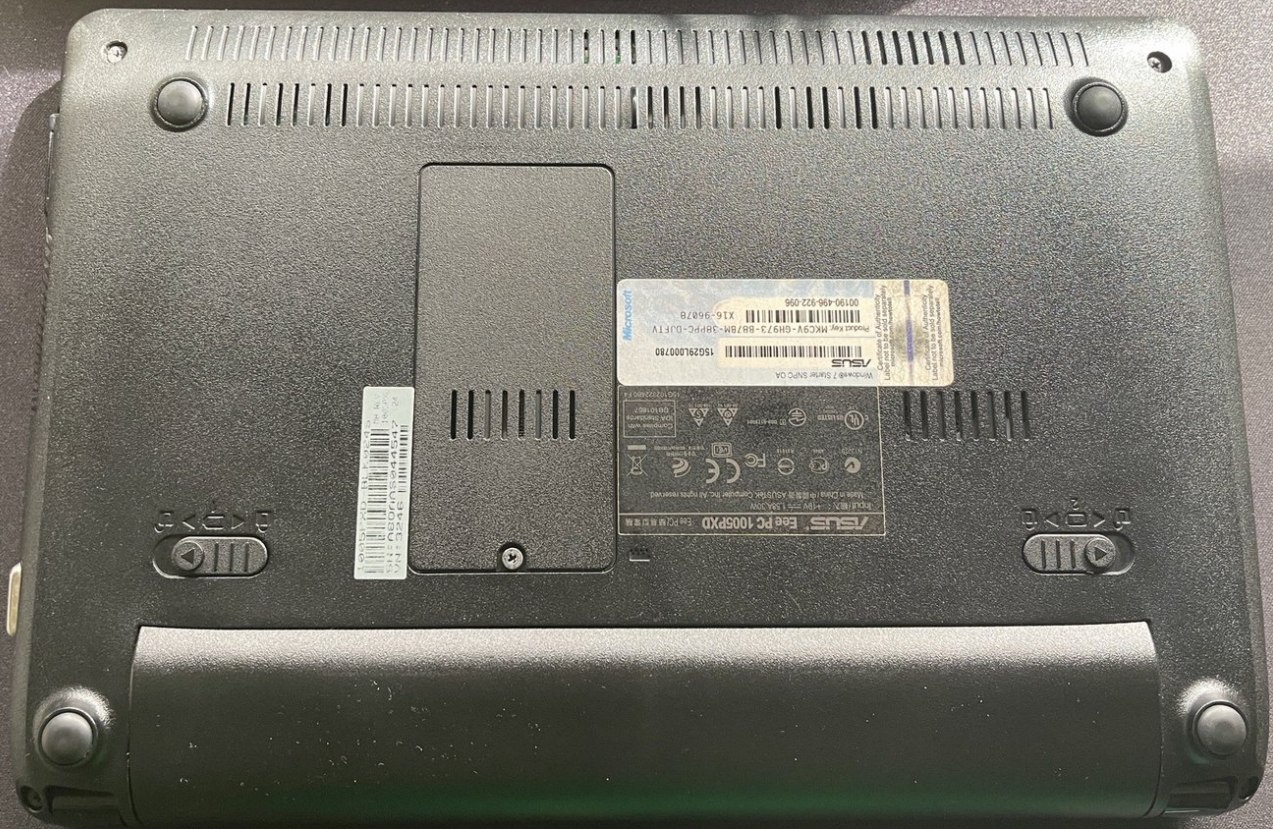

INTRODUCTION

These step-by-step instructions will guide you on replacing the battery on your ASUS Eee PC 1005PXD-BLK024S.

Step 1 — Remove the battery



- The first thing you should do when disassembling electronic devices in general is to disconnect it from any power source. Make sure the AC adapter isn't connected to the laptop before you start.
- Turn the laptop upside down, with the battery side closest to you. Unlock the left slider by pressing it to the left. It will stay in this position.
- Now slide the right slider to the right. This one won't lock in position, so you must slide the battery towards you while pressing this slider to the right to remove it.

To reassemble your device, follow these instructions in reverse order.