



Dell Latitude D430 Coin Cell Battery Replacement

This is a guide on how to replace the coin-cell battery for the DELL Latitude D430.

Written By: Hezekiah Brown


Step 1 — Remove the keyboard.



⚠ Shut down your computer. Disconnect all power sources before opening the computer cover or panels.

- Remove the keyboard.

Step 2 — Disconnect coin-cell battery cable connector; remove battery from system board.

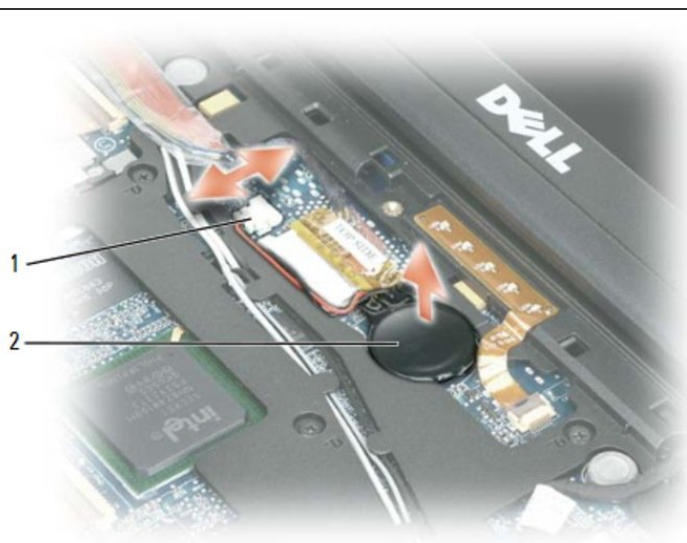

1 cable connector 2 coin-cell battery

- Disconnect the coin-cell battery cable connector from the system board connector.
- Remove the coin-cell battery from the system board.

Step 3 — Replace coin-cell battery (read carefully).



- When you replace the battery, insert it at a 30-degree angle under the clip with the positive (identified by a plus [+] symbol) side up, and then push it into place.

Step 4 — Install the keyboard.



- Install the keyboard.

To reassemble your device, follow these instructions in reverse order.