



Ghost Longboard Wheel Replacement

Replace the wheels on your Ghost Longboard to improve its speed and maneuverability.

Written By: Patricia Roux



INTRODUCTION

Use this guide to replace the damaged, warped, or dented wheels on your Ghost Longboard. This guide requires minimal skill and no prior experience. It is especially useful if your board is not as fast as it used to be, it has become more difficult to turn, or it does not coast for as long as you would like it to. the ghost longboard wheels are easy to replace.



TOOLS:

- [15mm Socket](#) (1)
- [Socket Wrench](#) (1)
- [Skate Tool](#) (1)



PARTS:

- [ghost longboard wheels](#) (1)

Step 1 — Wheel



- Using a 15 mm socket wrench, unscrew the axle nut.

Step 2




- Using your fingers, remove the axle nut from the axle.

Step 3



- Remove the washer from the axle.

Step 4

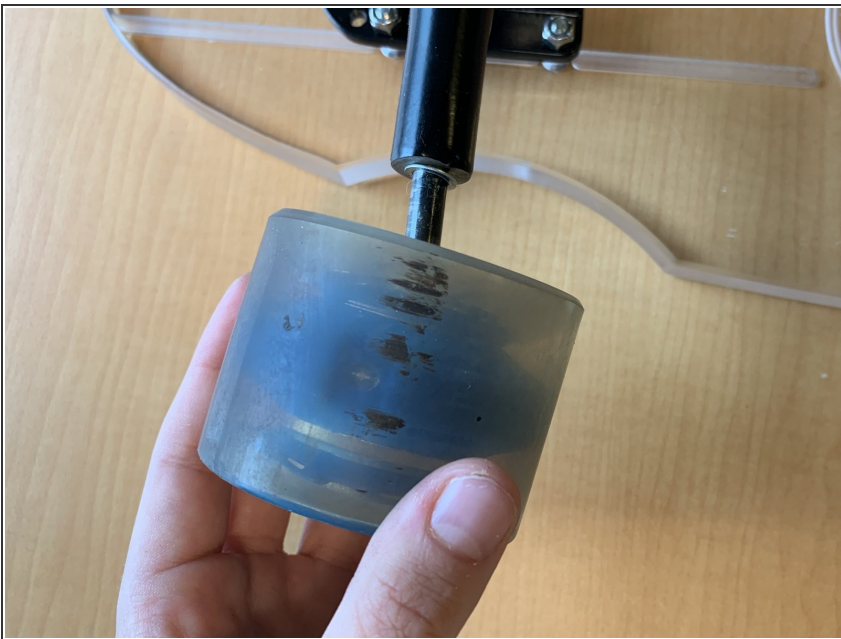


- Remove the wheel from the axle.

Step 5




- Remove the second washer from the axle.

Step 6

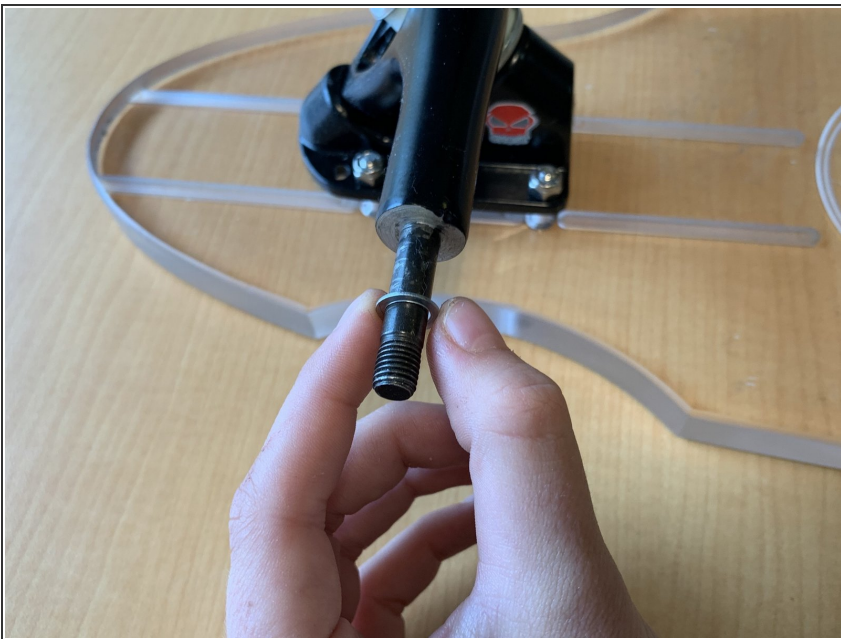

- Slide a new washer onto the axle.

Step 7

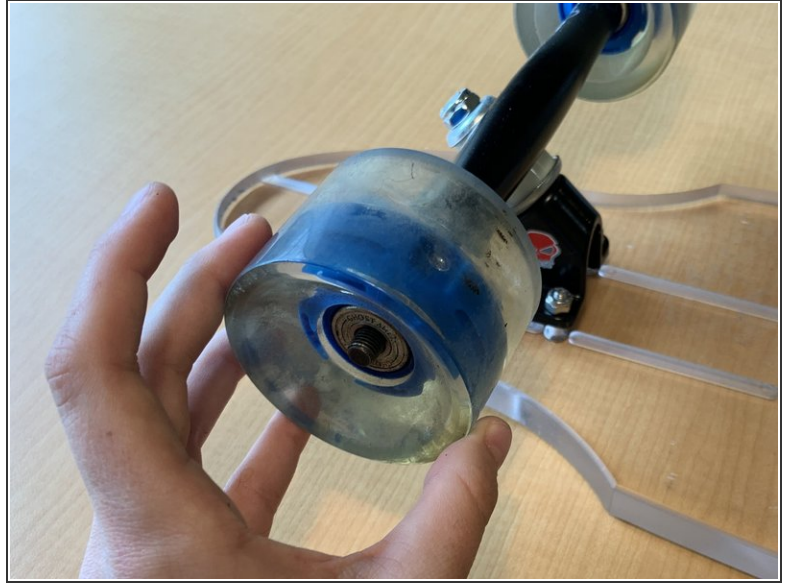

- Place the new wheel on the axle.
- ⓘ Be sure to position the flat side of the wheel so it is facing inward.

Step 8



- Place a second washer on the axle exterior to the wheel.

Step 9



- Place an axle nut on the axle.

Step 10



- Using a 15 mm socket wrench, tighten the axle nut.
- ⓘ Be sure to tighten the axle nut enough to prevent the wheel from wobbling, but not so tight as to prohibit the wheel from spinning freely.

Repeat these steps on the three remaining wheels.