


Access to RAM and CPU from why! W253EU


Written By: Felice Suglia

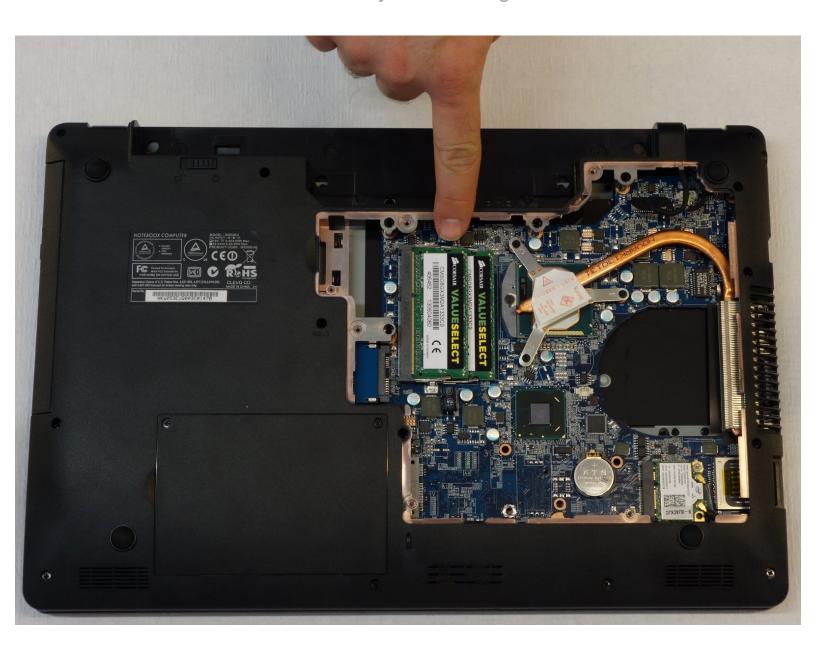



• Phillips #1 Screwdriver (1)

Step 1 — Battery from why! Remove W253EU

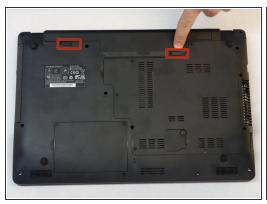







- Turn off the computer.
- (i) Before each operation it is important to start with the removal of the accumulator.
- Take the slide unlocked into position, remove the battery.

Step 2 — Access to RAM and CPU from why! W253EU

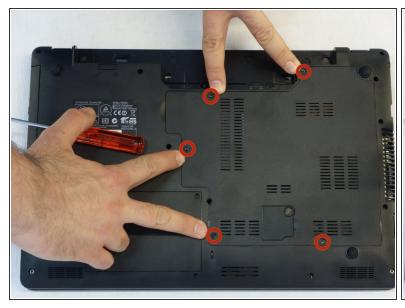

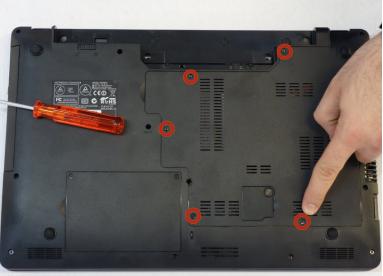

Using a Philips #1 screwdriver, unscrew the 5 screws securing the cover.

Step 3







- Push the screwdriver a few millimeters under the cover so that it can be touched with your fingers.
- Now lift the cover carefully.
- Attention! Disconnect the ventillator cable so that the cover can be completely removed (see next step).

Step 4



 Since the ventillator is mounted under the cover, its power supply cable must first be disconnected so that the cover can then be completely removed.

For reassembly, follow the instructions in reverse order.