



Kugadzira Pombi Yepamusoro Inotakura Mvura Kubva Mumugodhi Yepombi YeBush

Use this guide to replace the above grade riser pipe, or remove it for repair.



Written By: iRobot



INTRODUCTION

Gwaro rino rekurayira zvekuita rinokuratidza nzira yekubvisa nayo pombi inotakura mvura yepamusoro. Unozogona kuitsiva neimwe itsva, kana kugadzira zvese zvinenge zvichida kugadzirwa.

Step 1 — Head and Handle (Shona)

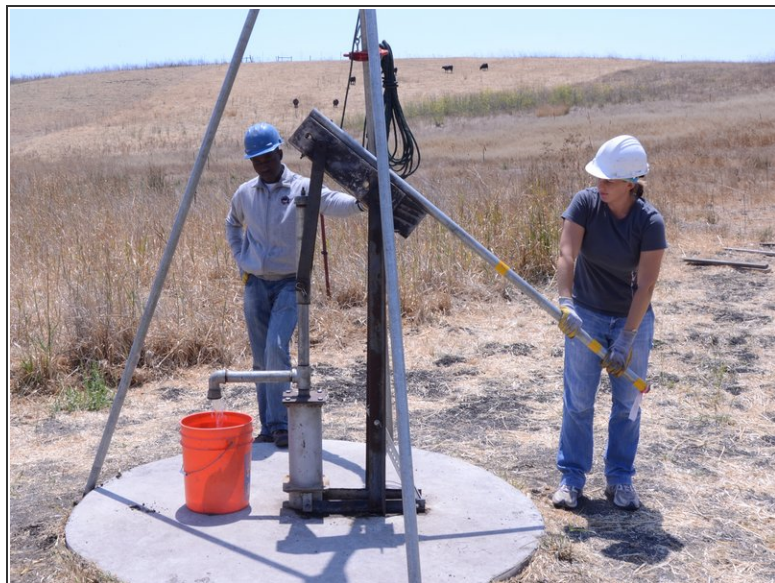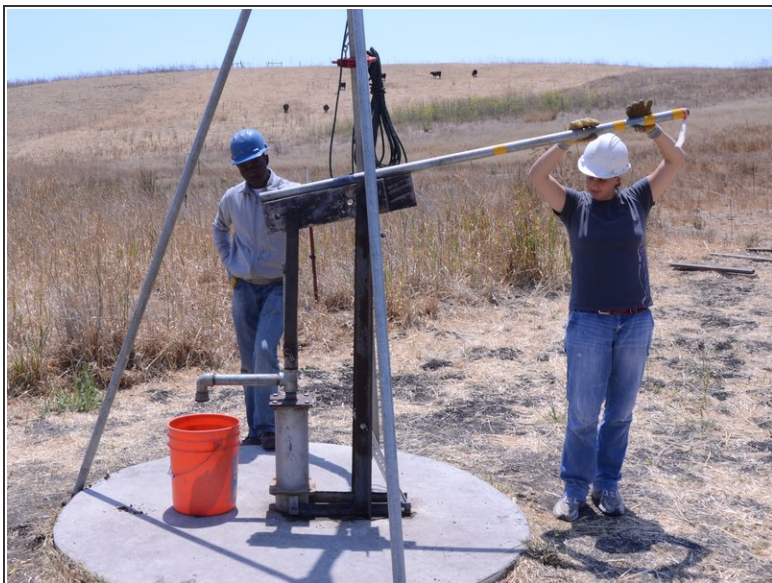

- Ona kuti pombi inoshanda zvakanaka sei nekupomba kwemakumi mana.

☑ Pombi inoshanda zvakanaka inofanira kudira mvura inosvika marita gumi.

Step 2




- Bvisa mapini maviri akabatanidza mubato nechinofambisa mubato.

Step 3



- Dhonza mibato miviri kubva kune chinofambisa mubato.

Step 4

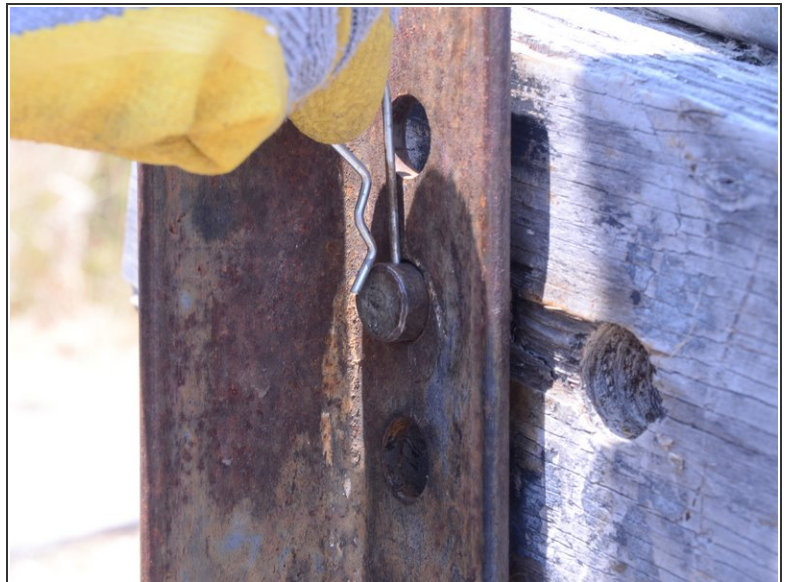

- Simudza mapini maviri akabatanidza pombi kumusoro nemubato, kubva papombi.

Step 5



- ❗ Mudanho rino rose, ona kuti watsigira mubato nemusoro nemaoko matatu kana kupfuura.
 - Buritsa chimutanda chejoinhi kubva muchimusoro.
- ❗ Wongorora chimutanda chejoinhi nemusoro kuti hazvina kusakara kana kukuvara here.

Step 6



- Bvisa musoro nemubato wozviisa panzvimbo yakachena kuti zvisabate utachiona

Step 7 — Riser Main Slider (Shona)



- Simudza mubato mukuru unosimudza pombi zvine simba nemaoko maviri.

⚠ Chenjerera kuti usadonhedze mubato mukuru unosimudza pombi, nekuti izvi zvinogona kukuvadza humburumbira

Step 8



- Shandisa chipanera chepombi kusunungura pombi inotakura mvura yepamusoro.

Step 9



- Simudza mubato unosimudza pombi nepombi refu.
- Tenderedza simbi inobata chimutanda chepombi pachimutanda, uye chisunge zvine simba pachimutanda chepombi.
- Dzikisa pombi refu nemubato unosimudza pombi kuti ugare pane chinobatisa pombi zvakanaka.

Step 10



- Sunungura ubvise bhaudhi rinobata chimutanda chepombi nebhaudhi rechimutanda chepombi pamusoro pemitanda unosimudza pombi.

Step 11



- Bvisa mubato mukuru unosimudza pombi, uye ongorora kuti haina kubvaruka kana kuchembera here.
- Isa mubato unosimudza pombi panzvimbo yakachena kuitira kuti usabate utachiona.

Step 12 — Above Grade Riser Pipe (Shona)



- Bvisa pombi inotakura mvura yepamusoro.
- Sungirira mubato wakaita saT pamutanda wepombi.
- ❗ Kana uri kuchinja pombi yemvura yepamusoro, siya mubato wakaita saT uripo kusvikira wave kugona kuisa nhengo yekutsiva nayo.

Kuti ubatanidze mudziyo wako zvakare, tevedzera mirayiro uchitanga nekwekupedzesera.