



LG CF360 Rear Speaker Replacement

How to remove the back speaker.

Written By: Annie White



INTRODUCTION

This guide will teach you how to remove the back speaker, located directly underneath the back cover. Only minimal disassembly is required.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery



- On the back of the phone, place your thumb on the three raised bumps and slide the back cover upward.

Step 2



- Lift and remove the battery.

Step 3 — Back Cover



- Remove the two screw covers at the top of phone with tweezers.

Step 4




- Remove the six Phillips #000 (3mm) screws.

Step 5




- Use the plastic opening tool to pry the back cover off. Insert the tool between the back cover and red mid section and go around the entire phone.
- ⓘ The plastic side buttons fall out when you take the back cover off.
- ⓘ The back cover is connected to the speaker by red and black wires.

Step 6

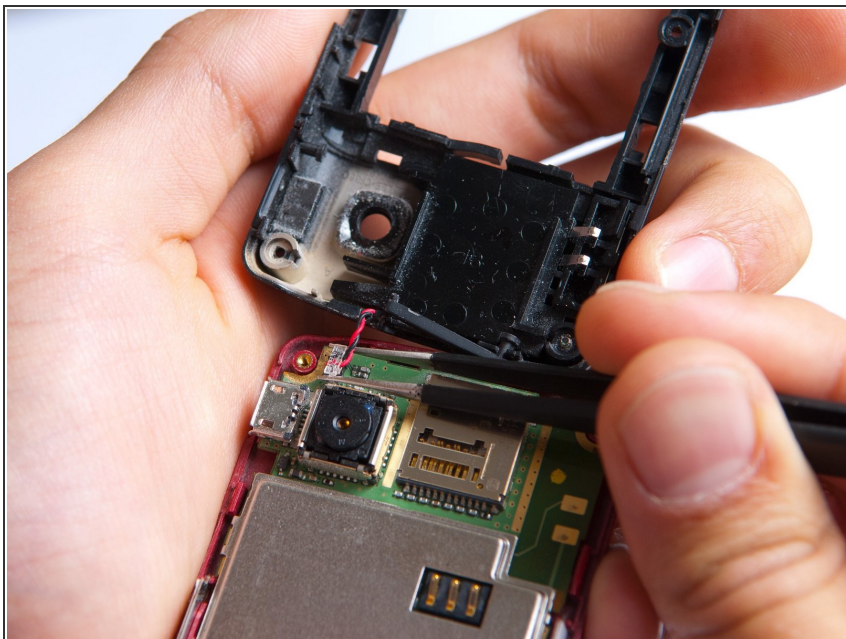


- Use the tweezers to remove the red and black wires connecting the speaker to the green motherboard by pinching the sides of the plastic base near the motherboard.
- Set the back cover with the speaker aside.

Step 7 — Rear Speaker

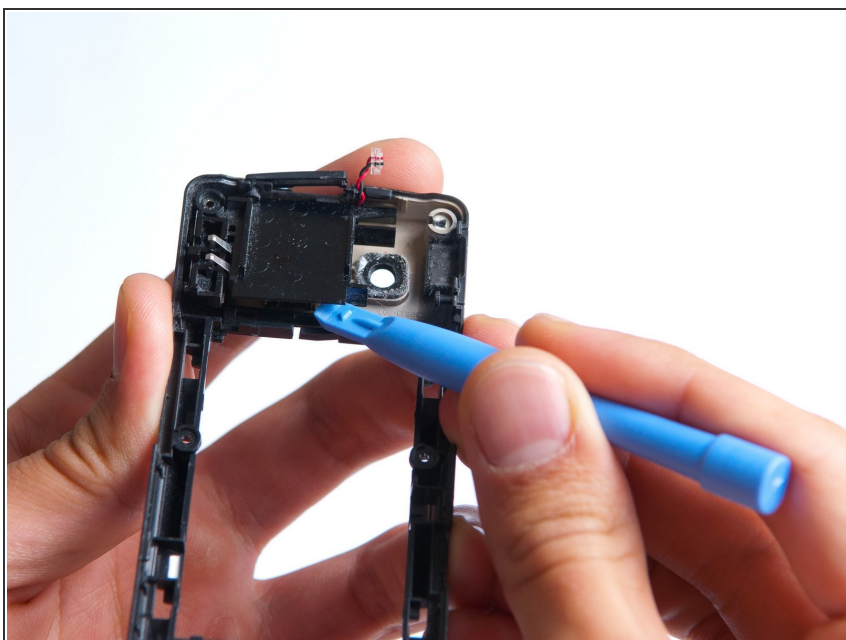

- Use the plastic opening tool to pry the speaker cover off of the phone.

Step 8

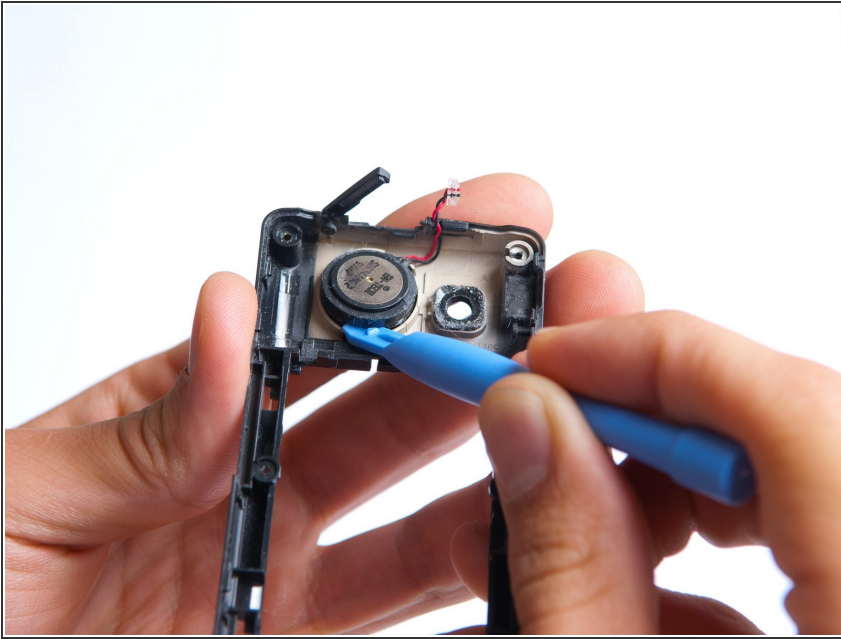

- Use the plastic opening tool to pry the speaker out of the back cover.

To reassemble your device, follow these instructions in reverse order.