


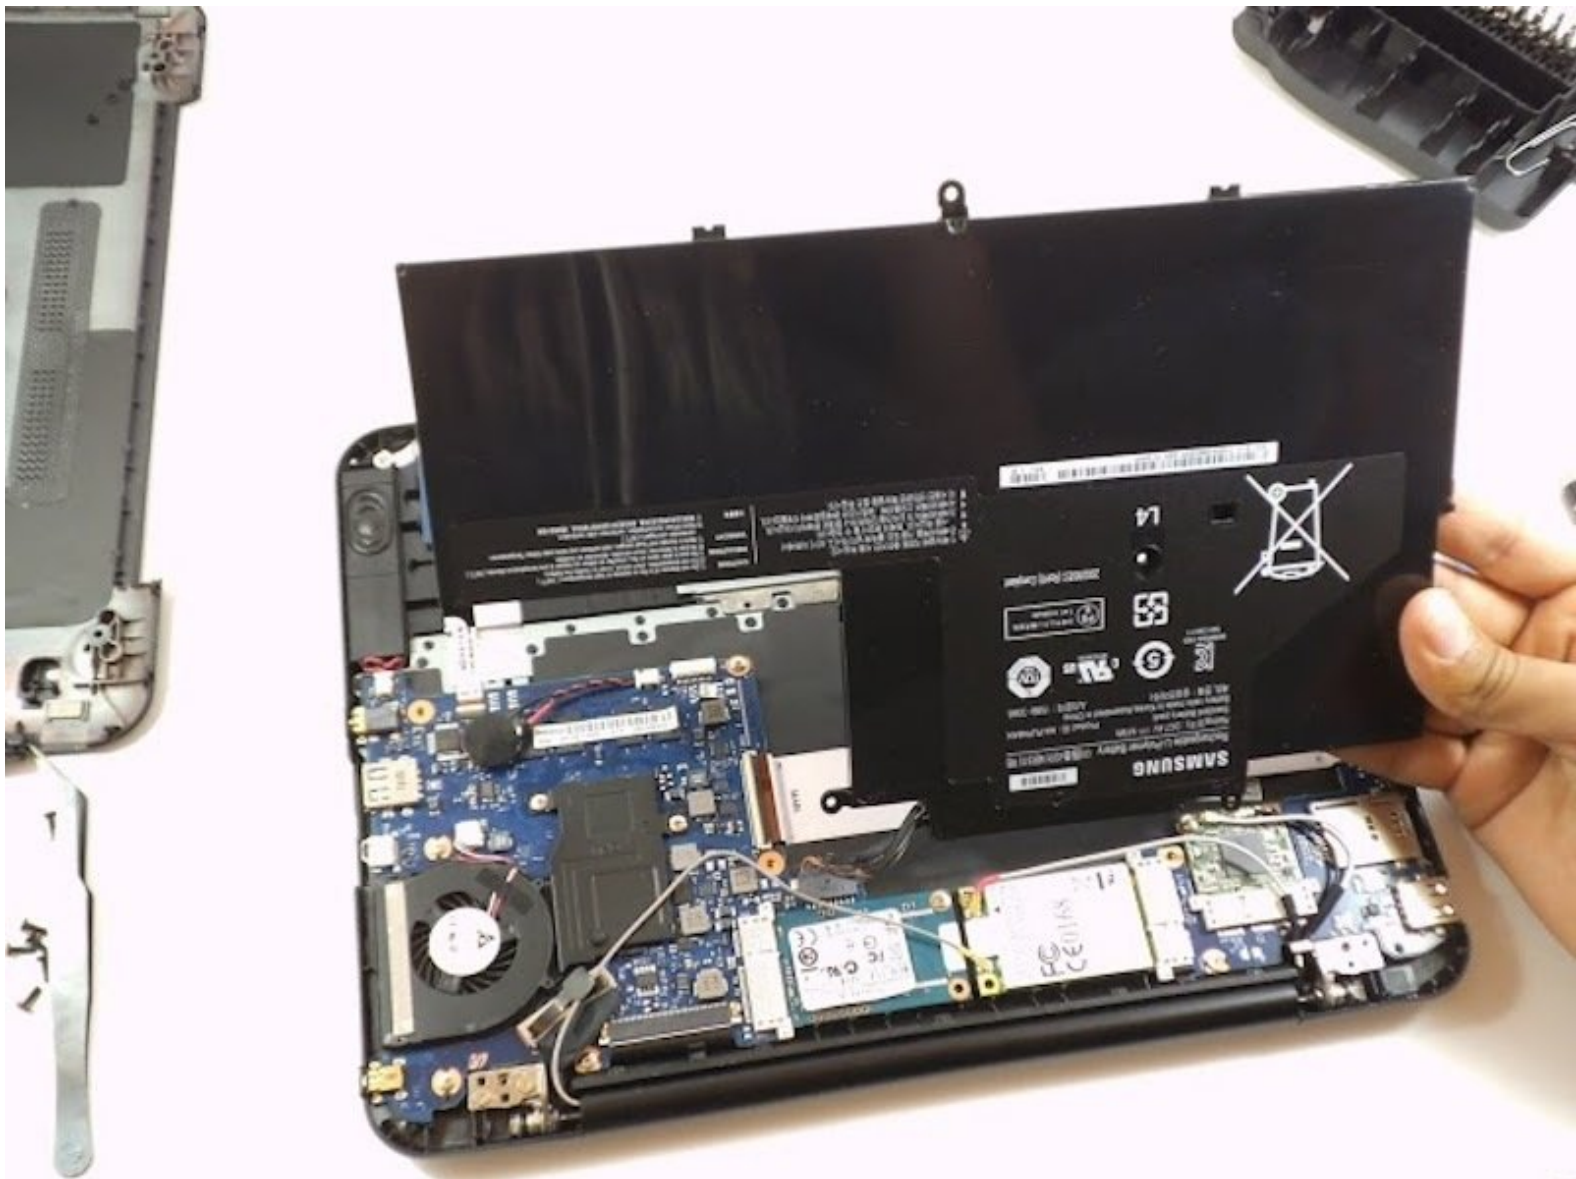

# Samsung Series 5 3G Chromebook Battery Replacement

This guide will demonstrate how to replace a battery in your Samsung Series 5 3G Chromebook.

Written By: Helder Avelino



---

## INTRODUCTION

If your Samsung Series 5 3G Chromebook is not charging properly or it's not turning on, you may need to replace the battery.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Cover



- Place the laptop on a flat surface with the bottom side facing up.
- Remove the rubber feet from the bottom of the panel using your fingernails.
- Remove all the seven screws from the bottom panel.


## Step 2



- Loosen the back cover panel using a spudger.





### Step 3

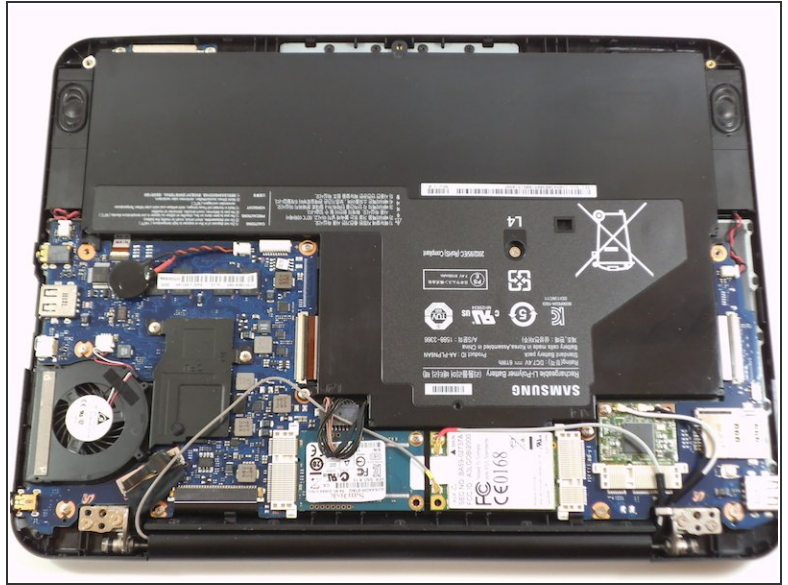

- Once you work your way around, you can remove the panel.

### Step 4 — Battery

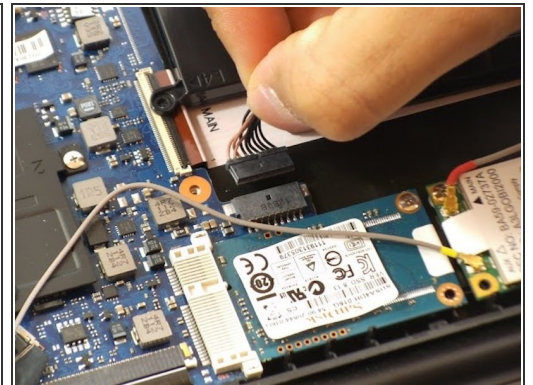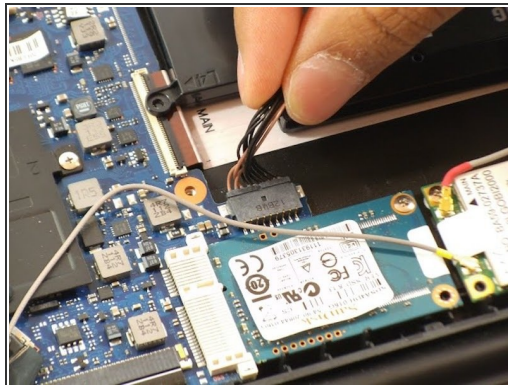

- Remove three Phillips screws from the battery.
- Disconnect the battery from the motherboard.
- Lift the battery up and away from the laptop to remove it.

To reassemble your device, follow these instructions in reverse order.