



LG VX4400 Removing the Back Cover

This guide will show you how to remove the back cover of the LG VX4400.

Written By: Nico Chiarito






TOOLS:


- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)

Step 1 — Battery

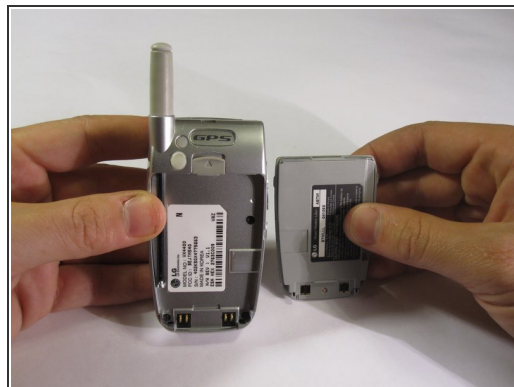


- Press the light grey button in the top-center on the back of the phone.
- While pressing, slide the battery and cover up.

Step 2 — Antenna

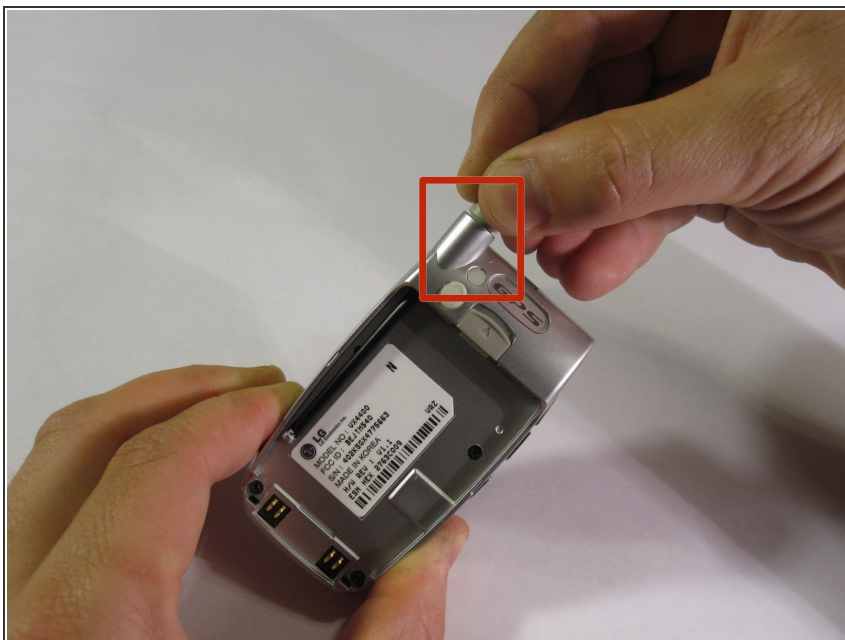

- Unscrew the antenna by grasping the base and twisting counterclockwise.
- ⚠ The antenna may separate from a black sleeve during removal. You may need to use tweezers to remove the sleeve. Remove both the antenna and the sleeve and set aside.

Step 3 — LG VX4400 Removing the Back Cover

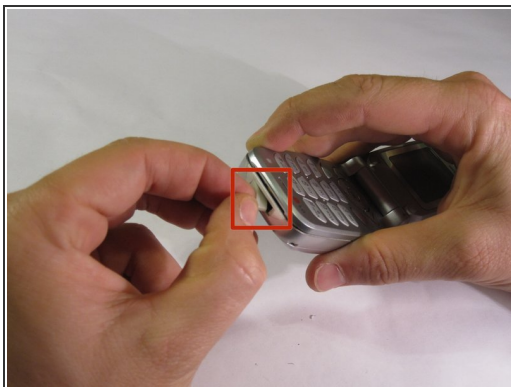

- The phone may have a rubber insert in the bottom of the phone (see picture). If this rubber insert exists, remove it from the bottom of phone and set aside.

Step 4




- Use a Torx T6 screwdriver to unscrew the four screws on the back of the phone.
 - ⓘ The bit size is engraved on the base of the bit head.

Step 5



- With the phone flipped open, wedge the back cover from the faceplate by running the tip of the plastic opening tool around the seam on the back of the phone.
 - Gently pull the two pieces apart to separate, and set the back casing aside.
- ⚠ Apply enough force to separate the pieces without cracking the back cover.

Step 6

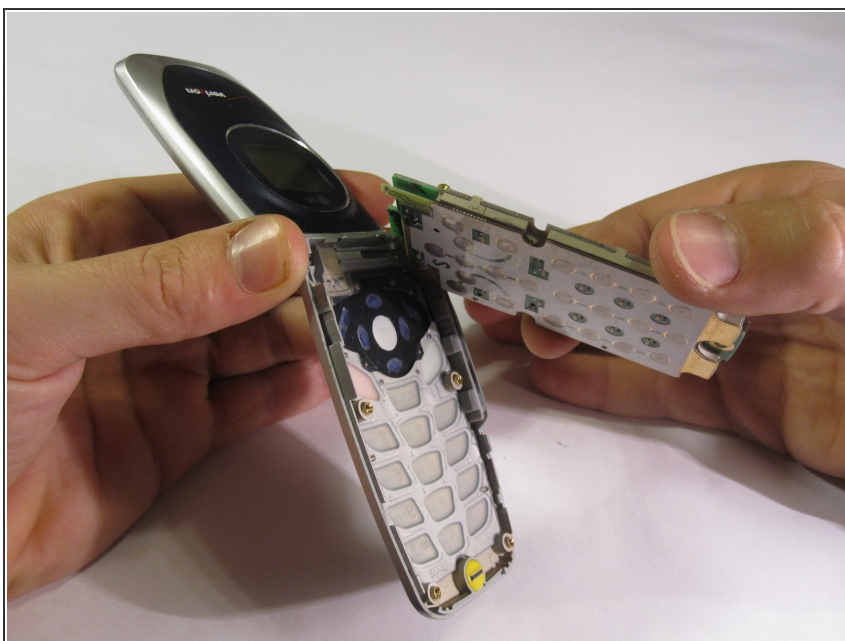

- Lift the motherboard to gain access to the keypad and side buttons beneath.
- ⚠ The motherboard is attached with a thin ribbon cable at the upper right corner of the case. Be careful not to break the cable.

To reassemble your device, follow these instructions in reverse order.