

PlayStation One Mother Board Replacement

This will guide you in replacing the Mother board of a PlayStation One.

Written By: trickster



INTRODUCTION

This will guide you in replacing the Mother board of a PlayStation One.



TOOLS:

• Phillips #1 Screwdriver (1)

Step 1 — Upper Case



 Remove all cables plugged into the PlayStation.

Step 2





• Flip over the PlayStation and remove the six screws from the bottom.

Step 3



- Flip the PlayStation back.
- There are no screws holding EVERYTHING inside the PlayStation so better hold it like a burger while flipping.

Step 4





Lift up and remove the upper case.

Step 5 — Laser Assembly







Disconnect the cables from the PSone's board.

Take extreme care when disconnecting the ribbon cable from motherboard. You risk damaging the cable if you're not careful.


Step 6 — Mother Board





remove the metal plate

Step 7

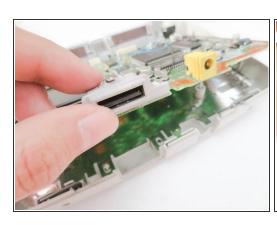





- remove the mother board by lifting the back.
- (i) if you're having a hard time removing it, use your nail and lift the second controller port.

To reassemble your device, follow these instructions in reverse order.