



LG CG225 Screen Replacement

Use this guide to replace the screen on the LG...

Written By: Mackenzie



INTRODUCTION


Use this guide to replace the screen on the LG CG225.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Screen

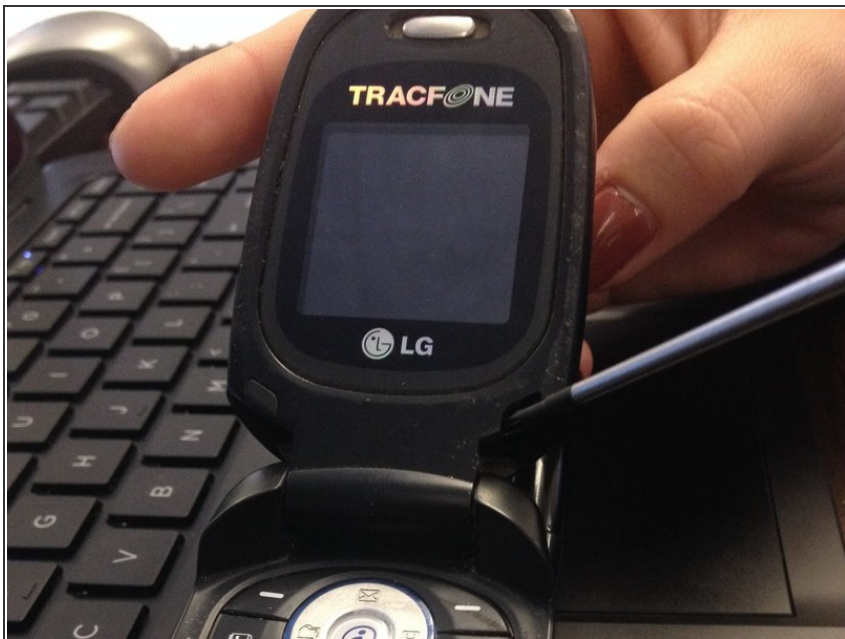


- Use a spudger to pry out the rubber screw covers from the back and inside of the phone.

Step 2



- Remove all the screws from the back and inside of the phone using a Phillips #00 screwdriver.

Step 3

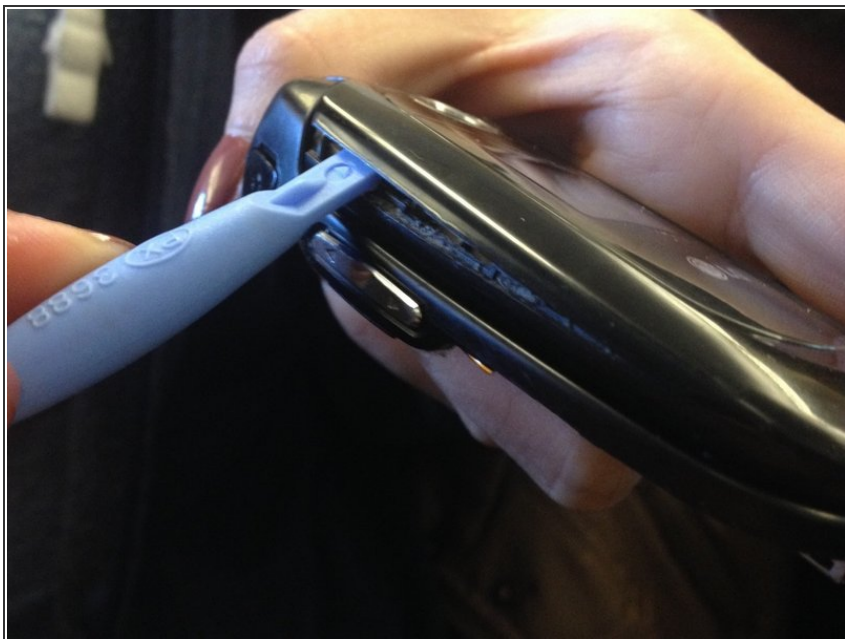

- Remove the faceplate of the phone using an iFixit opening tool.

Step 4



- Detach the round magnetic batteries from their circular frames using an iFixit opening tool.

Step 5



- Carefully remove the screen from its holding frame.

To reassemble your device, follow these instructions in reverse order.